

## FA-0805/FA-1005/FA-1008/FA-1210 Series



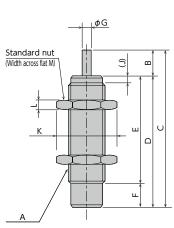

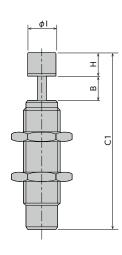

## **Dimensions**

Model	Α	В	С	C1	D	E	F	φG	Н	φl	J	K	L	M
FA-0805SB*-S/C	M8×0.75(M8×1)	5	32	37	27	22	5	2	5	6	1.5	12.7	2	11
FA-1005PMB*-S/C	M10×1	5	32	39	27	22	5	3	7	6	1.5	15	3	13
FA-1008PB*-S/C	M10×1	8	46	53	38	33	5	3	7	6	1.5	15	3	13
FA-1210KB*-S/C	M12×1	10	60	68	50	45	5	3.5	8	8	1.5	16.2	4	14

## **Specifications**

Model	Stroke mm	Max. absorption energy J (kgf•m)	Max. equivalent mass kg (kgf)	Max. drag N(kgf)	Absorption energy per minute J/min (kgf•m/min)	Recovering power of the piston rod N (kgf)	Mass g
FA-0805SB1-S ▲		0.20(0.04)	3(3)	490 (50)	17.6 (1.0)	4.9 or lower	8.6
FA-0805SB1-C ▲	5	0.39(0.04)	3(3)	490(30)	17.6(1.8)		8.8
FA-0805SB2-S ▲	5	0.69(0.07)	E (E)	E00(60)	22 5 (2.2)	(0.5)	8.6
FA-0805SB2-C ▲		0.68 (0.07)	5(5)	588 (60)	22.5(2.3)		8.8
FA-1005PMB1-S		0.60(0.07)	F (F)				13.2
FA-1005PMB1-C	5	0.68(0.07)	5(5)	725 (75)	41.1 (4.2)	5.88 or lower (0.6)	14.2
FA-1005PMB2-S		0.98(0.1)	0 (0)	735 (75)			13.2
FA-1005PMB2-C		0.96(0.1)	8(8)				14.2
FA-1008PB1-S		0.00(0.1)	7 (7)			5.88 or lower (0.6)	17.2
FA-1008PB1-C	8	0.98(0.1)	7(7)	705 (75)	F0.0(c.0)		18.2
FA-1008PB2-S	0	1 47(0 15)	10(10)	735 (75)	58.8(6.0)		17.2
FA-1008PB2-C		1.47(0.15)	10(10)				18.2
FA-1210KB1-S		1.06 (0.2)	15(15)				30.6
FA-1210KB1-C	10	1.96(0.2)	15(15)	1470/150	09/10)	9.8 or lower	32.6
FA-1210KB2-S	10	2.45(0.25)	20(20)	1470 (150)	98(10)	(1.0)	30.6
FA-1210KB2-C		2.45 (0.25)	30(30)				32.6

<sup>▲</sup> The thread pitch P1.0 is supplied as well.

## **Common Specifications**

Range of impact rate	m/s	0.3~1.0
Max. cycle rate	cycle/min	60 (45 for the FA-0805 series)
Operating temperature	${\mathbb C}$	-5~70

Note) MB X 1.0 is also available as the main body's screw pitch specifications for the FA-0805 series. Please order using the model number FA-08055B \_S-P1.0 or FA-08055B \_G-P1.0. However, please note that there are no optional parts for it. Note) To place an order without a cap, put -S, and to place an order with a cap, put -C. Note) Cap colour: \*\*1 is white and \*\*2 is black.

### **Precautions for Use**

- \* Do not use this product without carefully reading the attached owner's manual.
- \* Ensure that an external stopper (Stopper nut OP-020\*\*) is also used
- \* Do not turn the oil inlet screw located at the bottom of the main unit.
- \* Ensure that sufficient mounting strength is secured for this product. (As a guideline, it should be 2 to 3 times the maximum drag listed in the catalogue.)
- \* Do not use this product in a vacuum or a location where it may come in contact with oil.
- \* Ensure that an eccentric load is not applied to the soft absorber. (Allowable eccentric angle: within ±2.5°)

Products specification might be changed without notice.


## **Optional Parts**

#### Eccentric angle adaptor OP-010SB, PMB, PB, KB

Model	
OP-010SB	
OP-010PMB	
OP-010PB	
OP-010KB	

- Screw the eccentric angle adaptor into the main unit until the cap for the eccentric angle and the piston rod form a tight connection. While maintaining this position, fasten the main unit's nut until secured.
- Use the eccentric angle adaptor when the eccentric angle is 2.5° or larger.
- The main unit can also be used as a stopper.
- Use it with a capless soft absorber.
- The maximum operating eccentric angle with an eccentric angle adaptor is  $\pm 10^{\circ}$ .
- The caps and the guides for inclined use are not unbundled. Cap for eccentric angle (OP-010 B-1)

 The inclination Guide for eccentric angle (OP-010\_B-2) angle adapters are not provided for FA-0805SB\* -SP1.0.

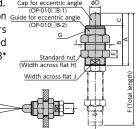

Note) Material of cap for eccentric angle: POM


Model	Α	В	С	φD	Е	F
OP-010SB	28	23	5	6	4	44.5
OP-010PMB	28	23	5	8	6	44.5
OP-010PB	38	30	8	8	6	62.8
OP-010KB	48	38	10	10	5	81.8

Model	G	Н	I	J	Mass g
OP-010SB	M12×1	14	16.2	10	13
OP-010PMB	M16×1.5	19	21.9	13	29
OP-010PB	M16×1.5	19	21.9	13	35
OP-010KB	M18×1.5	21	24.3	14	48

#### Square flange OP-040SB, PB, KB

Model
OP-040SB
OP-040PB
OP-040KB

• Once the attachment site is determined, uset he main unit's nut to securely fasten in place.

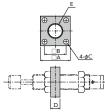


Model	Α	В	С	D	E	Mass g
OP-040SB					M8×0.75	17
OP-040PB	25	18	3.2	4	M10×1	16
OP-040KB					M12×1	15

#### Stopper nut OP-020SB, PB, KB

Model	
OP-020SB-S	
OP-020SB-C	
OP-020PB-S	
OP-020PB-C	
OP-020KB-S	
OP-020KB-C	

 Adjust so that it stops 1mm before the stroke end, and fasten with the main unit's nut until secured.

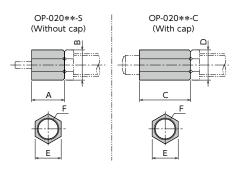


Note) When attaching, make sure that the side without a bearing chamfer is the impact surface.

Α	В	C	D	Ε	F	Ma:	ss g
10	127	1 [	127	11	110∨∩ 75	S	5
10	12./	15	12./	11	IVIO∧U./ 3	С	7
10	10	16	10	12	M10×1	S	6
10	15	10	15	13		С	9
12	16.2	16	16.2	1./	MANA	S	6
12	10.2	10	10.2	14	IVIIZAI	С	8
	10	10 12.7 10 15	10     12.7     15       10     15     16	10     12.7     15     12.7       10     15     16     15	10     12.7     15     12.7     11       10     15     16     15     13	10 12.7 15 12.7 11 M8×0.75 10 15 16 15 13 M10×1	10 12.7 15 12.7 11 M8×0.75 C  10 15 16 15 13 M10×1 C  12 162 16 162 14 M12×1

#### Liquid-proof cap -060

Model
FA-1005PMB□-C-060
FA-1008PB□-C-060
FA-1210KB□-C-060


- A drip-proof cap is fitted on the unit on delivery.
- Liquid-proof caps are not sold separately.
- Ensure that the cap is facing upward. If the cap is facing sideways or downward, it cannot provide an effective means for liquid proofing.

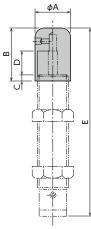

M	odel	φА	В	С	D	E	Mass g
FA-1005	PMB□-C-060	13	15	3	5	39	9
FA-1008	PB□-C-060	13	18	3	8	53	10
FA-1210	KB□-C-060	17	28	9.5	10	68.5	25

ullet Model indication 1 or 2 is inserted in  $\Box$ .

#### Holder with switch OP-030KB-2

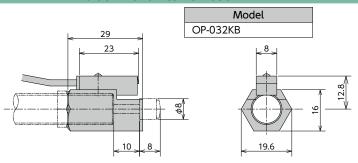


Mass 38g


- Although a holder with a switch can be ordered on its own, we strongly recommend ordering one with the main unit. Please include the main unit's model number when placing an order.
- For switch specifications and precautions for use, please refer to page 23.

Applicable Mo	dels	Model
FA-0805SB	MO	8 nut
FA-0805SB P	1.0 M0	8-P1 nut
FA-1005PMB	M1	0 nut
FA-1008PB	M1	0 nut
FA-1210KB	M1	2 nut

## FA-0806 Series



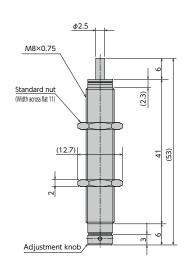

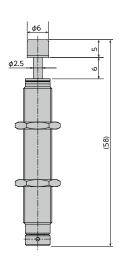

## **Specifications**

Model	Stroke mm	Max. absorption energy J(kgf·m)	Max. equivalent mass kg (kgf)	Range of impact rate m/s	Orifice type
FA-0806-S	6	1.4(0.14)	15(15)	0.22	Single erifice type
FA-0806-C	0	1.4(0.14)	15(15)	0.3~2	Single-orifice type

Note) To place an order without a cap, put -S at the end of the model number, and to place an order with a cap, put -C at the end of the model number.

## **Common Specifications**

Max. drag	N(kgf)	670 (68.3)	Operating temperature	$^{\circ}$	-5~70
Max. cycle rate	cycle/min	45	Mass :S type	g	13.8
Max. absorption energy per minute	J/min(kgf·m/min)	36.7 (3.74)	:C type	g	14.1
Recovering power of the piston	rod N(kgf)	9 or lower (0.92)			

## Absorption characteristics

Orifice type	Single-orifice type
Model number	FA-0806 Series
Application	For low to medium speed
Absorption characteristics	Resistance

## **Precautions for Use**

- \* Do not use this product without carefully reading the attached owner's manual.
- \* We recommend that you use it with an external stopper (Stopper nut OP-020SB).
- \* Ensure that sufficient mounting strength is secured for this product. (As a guideline, it should be 2 to 3 times the maximum drag listed in the catalogue.)
- st Do not use this product in a vacuum or a location where it may come in contact with oil.
- \* Ensure that an eccentric load is not applied to the soft absorber. (Allowable eccentric angle: within  $\pm 2.5^{\circ}$ )

- \* To adjust, turn the adjustment knob.
- \* Because the adjustment can be done in an analog manner, a value between two integers on the indicator can be set.
- \* It does not have a lock screw for locking the adjusted setting.


•Products specification might be changed without notice.


## **Optional Parts**

#### Eccentric angle adaptor OP-010M8

#### Model OP-010MB

- Screw the eccentric angle adaptor into the main unit until the cap for the eccentric angle and the piston rod form a tight connection. While maintaining this position, fasten the main unit's nut until secured.
- Use the eccentric angle adaptor when the eccentric angle is 2.5° or larger.
- The main unit can also be used as a stopper.
- Use it with FA-0806-S.
- The maximum operating eccentric angle with an eccentric angle adaptor is  $\pm 10^{\circ}$ .
- The maximum inclination angle using an inclination angle adapter is  $\pm 10^{\circ}$
- The caps and the guides for inclined use are not unbundled.

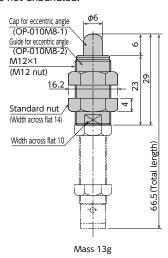

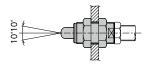


Note) Material of cap for eccentric angle: POM

#### Stopper nut OP-020SB

	Model
	OP-020SB-S
	OP-020SB-C

• Adjust so that it stops 1mm before the stroke end, and fasten with the main unit's nut until secured.

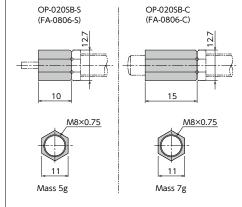


Note) When attaching, make sure that the side without a bearing chamfer is the impact surface.

#### Square flange OP-040SB

#### Model OP-040SB


• Once the attachment site is determined, use the main unit's nut to securely fasten

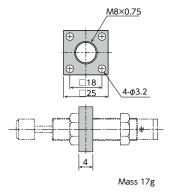


Standard nats	are sola separat
Applicable Models	Model
FA-0806	M08 nut

## FA-1008VB/FA-1008VD/FWM-1008VBD Series



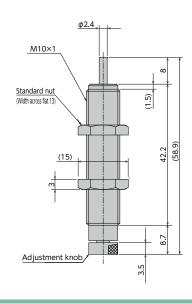

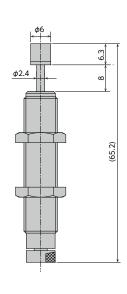

## **Specifications**

Model	Stroke mm	Max. absorption energy J (kgf·m)	Max. equivalent mass kg (kgf)	Range of impact rate m/s	Orifice type
FA-1008VB-S		1.47(0.15)	10(10)	0.3~1	Single-orifice type
FA-1008VB-C		1.47 (0.13)	10(10)	0.5~1	Single-office type
FA-1008VD-S	8		2.5 (2.5)	0.7~3	Multiple-orifice type
FA-1008VD-C	0	1.76(0.18)	2.5(2.5)	0.7~3	Multiple-office type
FWM-1008VBD-S			10(10)	0.22	Multiple varying exifice type
FWM-1008VBD-C			10(10)	0.3~2	Multiple-varying orifice type

Note) To place an order without a cap, put -S at the end of the model number, and to place an order with a cap, put -C at the end of the model number.

## **Common Specifications**

Max. drag	N (kgf)	637(65)	Operating temperature	°C	-5~70
Max. cycle rate	cycle/min	60	Mass : S type	g	26.5
Max. absorption energy per minute	J/min(kgf·m/min)	58.8(6)	: C type	g	27
Recovering power of the piston r	od N(kgf)	5.88 (0.6) or lower			

## Selection Guideline The FA-1008 series has the following three patterns of absorption characteristics depending on the orifice type. Please use the following information as a guideline when making your selection.

Orifice type	Single-orifice type	Multiple-orifice type	Multiple-varying orifice type	
Model number	FA-1008VB series	FA-1008VD series	FWM-1008VBD series	
Application	For low-speed	For high-speed	For medium speed, in particular with a pneumatic cylinder	
Absorption characteristics	Resistance	Resistance	Resistance	

## **Precautions for Use**

- \* Do not use this product without carefully reading the attached owner's manual.
- $\ensuremath{^{*}}$  Ensure that an external stopper (Stopper nut OP-020PB) is also used.
- \* Do not turn the oil inlet screw located at the bottom of the main unit.
- \* Ensure that sufficient mounting strength is secured for this product. (As a guideline, it should be 2 to 3 times the maximum drag listed in the catalogue.)
- \* Do not use this product in a vacuum or a location where it may come in contact with oil.
- \* Ensure that an eccentric load is not applied to the soft absorber (Allowable eccentric angle: within  $\pm 2.5^{\circ}$ )

- \* To adjust, turn the adjustment knob.
- \* Because the adjustment can be done in an analog manner, a value between two integers on the indicator can be set.
- \* It does not have a lock screw for locking the adjusted setting.


•Products specification might be changed without notice.


## **Optional Parts**

#### **Eccentric angle adaptor OP-010PB**

Model	
OP-010PB	

- Screw the eccentric angle adaptor into the main unit until the cap for the eccentric angle and the piston rod form a tight connection. While maintaining this position, fasten the main unit's nut until secured.
- Use the eccentric angle adaptor when the eccentric angle is 2.5° or larger.
- The main unit can also be used as a stopper.
- Use it with a capless soft absorber.
- The maximum operating eccentric angle with an eccentric angle adaptor is  $\pm 10^{\circ}$ .
- The caps and the guides for inclined use are not unbundled.

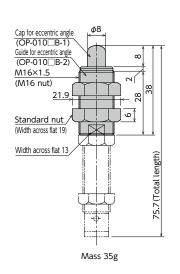

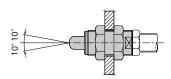


Note) Material of cap for eccentric angle: POM

#### Stopper nut OP-020PB-

Mo	odel
OP-020PB-9	5
OP-020PB-0	2

 Adjust so that it stops 1mm before thestroke end, and fasten with the main unit's nut until secured.

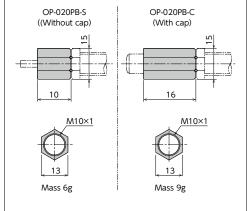


Note) When attaching, make sure that the side without a bearing chamfer is the impact surface.

#### Square flange OP-040PB

#### Model OP-040PB

• Once the attachment site is determined, use the main unit's nut to securely fasten

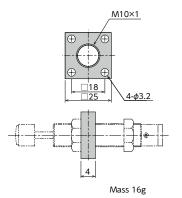



Standard nuts are sold separately		
Applicable Models	Model	
FA-1008VB		
FA-1008VD	M10 nut	
FWM-1008VBD		

## FA-1010D/FA-1215B Series





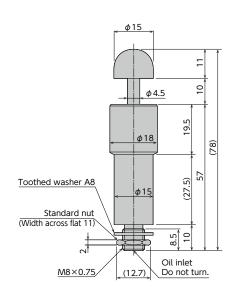

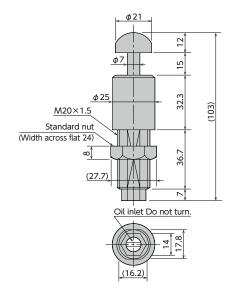

## **Specifications**

Model	Stroke mm	Max. absorption energy J (kgf•m)	Max. equivalent mass kg (kgf)	Max. drag N(kgf)	Absorption energy per minute  J/min( kgf·m/min)	Recovering power of the piston rod N (kgf)	Mass g
FA-1010D2-C		0.98(0.1)	10(10)		44.1 (4.5)		
FA-1010D3-C	10	2.05(0.21)	15 (15)	980(100)	78.4(8.0)	5.88 (0.6) or lower	41.5
FA-1010D4-C		3.23(0.33)	20 (20)		70.4(0.0)		
FA-1215B1-C	15	7.84(0.8)	30 (30)	1470 (150)	245(25)	11.8(1.2) or lower	116
FA-1215B2-C	15	11.7(1.2)	40 (40)	1960 (200)	245(25)	11.6(1.2)01 tower	110

## **Common Specifications**

Operating speed range	m/s	0.1~1.0(0.1 to 0.5 for the FA-1215 series)
Max. cycle rate	cycle/min	45 ((30 for the FA-1215 series)
Operating temperature	$^{\circ}$	−10~50

Bellofram Seal Type テーパーオリフィス構造
Fixed Type Adjustable type Self-adjusting

**RoHS Compliant** 


Products specification might be changed without notice.

## **Optional Parts**

#### Liquid-proof cap -060

Model
FA-1010D□-C-060
FA-1215B□-C-060

- •A drip-proof cap is fitted on the main unit when shipped from the factory.
- Ideal for use in environments where oil splatter poses a problem.
- Ensure that the cap is facing upward. If the cap is facing sideways or downward, it cannot provide an effective means for liquid proofing.

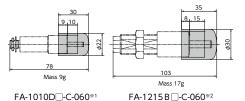

- \*1 will be filled in with a type indication code 2, 3 or 4
- \*2  $\square$  will be filled in with a type indication code 1 or 2.

#### \*Standard nuts are sold separately as well.

Applicable Models	Model
FA-1010D	FA-1010D M08 nut
FA-1215B	M20 nut


## **Bellofram Seal Type**


Unlike the conventional U packing type, it uses a Bellofram seal, as shown below. Because it does not generate sliding resistance between the piston rod and the packing, the spring power required to recover the piston rod can be reduced. The Bellofram also acts as an accumulator based on its ability to change shape. In principle, as long as the Bello is not damaged, oil will never leak.

#### Bracket OP-1012A

#### Model OP-1012A

• This is a mounting fixture for FA-1010D.

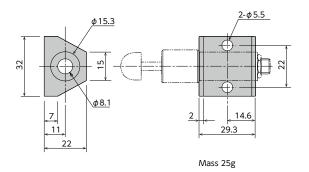

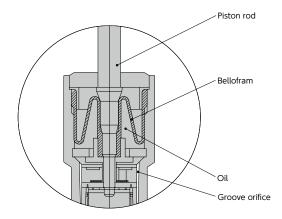


## **Precautions for Use**


- \* Do not use this product without carefully reading the attached owner's manual.
- \* Use with an external stopper.
- \* Ensure that sufficient mounting strength is secured for this product.

  (As a guideline, it should be 2 to 3 times the maximum drag listed in the catalogue.)
- \* Do not turn the oil inlet screw located at the bottom of the main unit.
- \* 2 or more of this product can be used in parallel.
- \* Do not use this product in a vacuum or a location where it may come in contact with oil.
- \* Ensure that an eccentric load is not applied to the soft absorber. (Allowable eccentric angle: within  $\pm 2.5^{\circ}$ )

## FA-1210MB/FA-1210MD/FWM-1210MBD Series



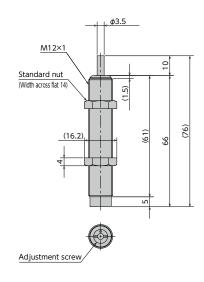

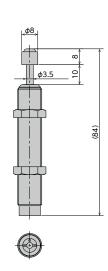

## **Specifications**

Model	Stroke mm	Max. absorption energy J (kgf·m)	Max. equivalent mass kg (kgf)	Range of impact rate m/s	Orifice type	
FA-1210MB-S	10	2.94(0.3)	30(30)	0.3~1	Single-orifice type	
FA-1210MB-C		2.94(0.3)	30(30)	0.5		
FA-1210MD-S		4.9(0.5)	4(4)	0.7~3	Multiple-orifice type	
FA-1210MD-C						
FWM-1210MBD-S			30(30)	0.3~2	Multiple verying erifice type	
FWM-1210MBD-C			30(30)	0.5~2	Multiple-varying orifice type	

Note) To place an order without a cap, put -S at the end of the model number, and to place an order with a cap, put -C at the end of the model number.

## **Common Specifications**

Max. drag	N(kgf)	1,470 (150)	Operating temperature	$^{\circ}$	-5~70
Max. cycle rate	cycle/min	60	Mass: S type	g	44
Max. absorption energy per minute	J/min(kgf·m/min)	98(10)	: C type	g	47
Recovering power of the piston	rod N(kgf)	9.8(1.0) or lower			

### Selection Guideline The FA-1210 series has the following three patterns of absorption characteristics depending on the orifice type. Please use the following information as a guideline when making your selection.

Orifice type	Single-orifice type	Multiple-orifice type	Multiple-varying orifice type
Model number	FA-1210MB series	FA-1210MD series	FWM-1210MBD series
Application	For low-speed	For high-speed	For medium speed, in particular with a pneumatic cylinder
Absorption characteristics	Resistance	Resistance	Resistance

## **Precautions for Use**

- st Do not use this product without carefully reading the attached owner's manual.
- \* Ensure that an external stopper (Stopper nut OP-020KB) is also used.
- \* Do not turn the oil inlet screw located at the bottom of the main unit.
- \* Ensure that sufficient mounting strength is secured for this product. (As a guideline, it should be 2 to 3 times the maximum drag listed in the catalogue.)
- \* Do not use this product in a vacuum or a location where it may come in contact with oil.
- \* Ensure that an eccentric load is not applied to the soft absorber (Allowable eccentric angle: within  $\pm 2.5^{\circ}$ )

- \* To adjust, turn the adjustment knob with a slotted screw driver.
- \* Because the adjustment can be done in an analog manner, a value between two integers on the indicator can be set.
- \* It does not have a lock screw for locking the adjusted setting.


Products specification might be changed without notice.

## **Optional Parts**

#### Eccentric angle adaptor OP-010PB

#### Model OP-010KB

- Screw the eccentric angle adaptor into the main unit until the cap for the eccentric angle and the piston rod form a tight connection. While maintaining this position, fasten the main unit's nut until secured.
- Use the eccentric angle adaptor when the eccentric angle is 2.5° or larger.
- The main unit can also be used as a stopper.
- Use it with a capless soft absorber.
- The maximum operating eccentric angle with an eccentric angle adaptor is  $\pm 10^{\circ}$ .
- The caps and the guides for inclined use are not unbundled.

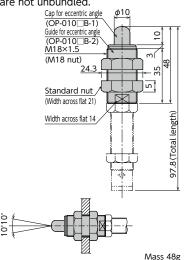


Note) Material of cap for eccentric angle: POM

#### Square flange OP-040KB

Model
OP-040KB


• Once the attachment site is determined, uset he main unit's nut to securely fasten in place.

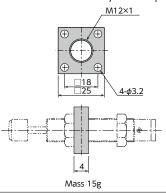

#### Stopper nut OP-020KB-

ĺ	Model
	OP-020KB-S
	OP-020KB-C

 Adjust so that it stops 1mm before thestroke end, and fasten with the main unit's nut until secured.

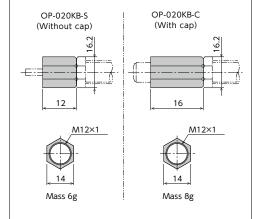


Note) When attaching, make sure that the side without a bearing chamfer is the impact surface.


#### Liquid-proof cap F□□-1210M□□-C-060

Model
FA-1210MB-C-060
FA-1210MD-C-060
FWM-1210MBD-C-060

- Ideal for use in environments where oil splatter poses a problem.
- ●Ensure that the cap is facing upward. If the cap is facing sideways or downward, it cannot provide an effective means for liquid proofing.
- ●F□□-1210M□□-C-060
  - · Model indication A or WM is inserted in  $\square$  of F $\square\square$ .
  - · Model indication B, D or BD is inserted in  $\square$  of  $M\square\square$ .

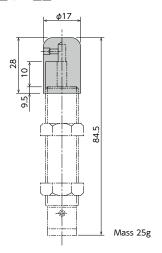

#### Holder with a switch OP-030KB-2 (With a stopper function)

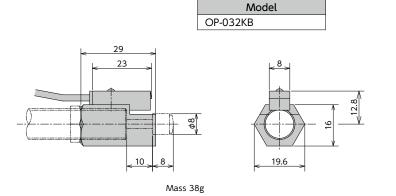

- Although a holder with a switch can be ordered on its own, we strongly recommend ordering one with the main unit. Please include the main unit's model number when placing an order.
- For switch specifications and precautions for use, please refer to page 23.

		•
Applicable Models	Model	
FA-1210MB		
FA-1210MD	M12 nut	
FWM-1210MBD		

Bellofram Seal Type Dashpot Structure


Fixed Type Adjustable type Self-adjusting

## FA-1212C Series

**RoHS Compliant** 

Products specification might be changed without notice.



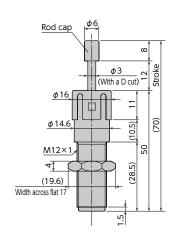

## **Specifications**

Model	Max. absorption energy J (kgf•m)	Speed range m/s	Max. equivalent mass kg (kgf)	Max. drag N(kgf)	Absorption energy per minute J/min (kgf•m/min)	Max. cycle rate cycle/min	Rod cap colour	
FA-1212C1-C	0.29(0.03)		1.5(1.5)	245 (25)	14.7(1.5)	45	White	
FA-1212C2-C	0.49 (0.05)	0.1~1.0	3(3)		14.7 (1.5)	45	Black	
FA-1212C3-C			5(5)	294(30)			Yellow	
FA-1212C4-C	1.0 (0.10)	0.1~0.7	7.5 (7.5)	294(30)	294(30)	5.0(0.5)	5	Green
FA-1212C5-C		0.1~0.5	10(10)				Red	

## Common Specifications

Stroke	mm	12	
Recovering power of the piston rod N(kgf)		2.45 (0.25) or less	
Operating temperature	°C	-10~50	
Mass	g	15	
Main unit material		Resin	

## **Precautions for Use**

- \* Do not use this product without carefully reading the attached owner's manual.
- \* Use with an external stopper.
- \* Ensure that sufficient mounting strength is secured for this product. (As a guideline, it should be 2 to 3 times the maximum drag listed in the catalogue.)
- \* Do not turn the oil inlet screw located at the bottom of the main unit.
- \* 2 or more of this product can be used in parallel.

- \* Do not use this product in a vacuum or a location where it may come in contact with oil.
- \* Ensure that an eccentric load is not applied to the soft absorber. (Allowable eccentric angle: within  $\pm 2.5^{\circ}$ )
- \* Do not over-tighten the main unit and nuts. Please use the tightening torque (1.5N·m) listed in the owner's manual. If anchoring the absorber against the Ø14.6 unit, please use a tightening torque of 1.0N·m.

Small hexagon nut M12B


## **Optional Parts**

# Muting cap OP-090-M12B/C/D Model OP-090-M12B OP-090-M12C OP-090-M12D A muting cap reduces the collision noise. B:Black C:White D:Gray

Material: Elastomer

- ●To use, place it over a rod cap in the FA-1212C series.
- •Stroke length is 11mm.

# Model M12B ● It is ideal for tight spaces, as it is smaller than the conventional hexagon nuts.

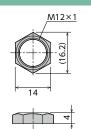

Applicable Models	Model	
FA-1212C	FA-1212C nut	

Bellofram Seal Type Single Orice Structure

Fixed Type Adjustable type Self-adjusting

**RoHS Compliant** 


•Products specification might be changed without notice.

## **Optional Parts**

#### Muting cap OP-090-M12B/C/D

Model
OP-090-M12B
OP-090-M12C
OP-090-M12D


- A muting cap reduces the collision noise.
- To use, place it over a rod cap in the FA-1212L series.
- Stroke length is 11mm.

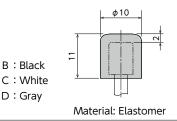

#### Small hexagon nut M12B

#### Model M12B

• It is ideal for tight spaces, as it is smaller than the conventional hexagon nuts.

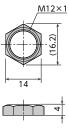


#### The standard nut is also sold separately.

Applicable Models	Model
FA-1212L	Nut for FA-1212C

## FA-1212L Series



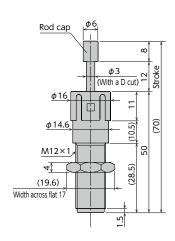

## **Operating Performance**

Model	Load (kg)	Thrust (N)	Impact rate (m/s)	Motion-time (sec)	Recovering power of the piston rod (N)	Rod cap color
FA-1212L1-C			0.7 or lower	0.3~2.0		White
FA-1212L3-C	3	30	0.5 or lower	2.3~4.0	9以下	Yellow
FA-1212L5-C			0.3 or lower	4.3~6.0		Red

The performance above is based on the measuring machine of our company. Refer to the above to select the damper, confirm its performance in an actual machine, and finally select the model.

## **Specifications**

Stroke	mm	12		
Max. absorption en ergy J(kgf⋅m)		1.5(0.15)		
Max. thrust :FA-1212L1 N(kgf)		49(5)		
:FA-1212L3	N (kgf)	78 (8)		
:FA-1212L5	N(kgf)	117(12)		
Max. drag N(kgf)		490 (50)		
Range of ope rating temperature	$^{\circ}$	−10~50		
Ma ss	g	15		
Main unit material		Resin		

## **Precautions for Use**

- \* Do not use this product without carefully reading the attached owner's manual.
- \* Use with an external stopper.
- \* Ensure that sufficient mounting strength is secured for this product.

  (As a guideline, it should be 2 to 3 times the maximum drag listed in the catalog.)
- \* Do not turn the oil inlet screw located at the bottom of the main unit.
- \* 2 or more of this product can be used in parallel.
- \* Do not use this product in a vacuum or a location where it may come in contact with oil.
- \* Ensure that an eccentric load is not applied to the soft absorber. (Allowable eccentric angle: within ±2.5°)
- \* Do not over-tighten the main unit and nuts. Please use the tightening torque (1.5N·m) listed in the owner's manual. However, to fix the nut while pressing it against the  $\phi$ 14.6 part, use the tightening torque of 1 N·m.

Bellofram Seal Type Single Orice Structure

Fixed Type Adjustable type Self-adjusting

**RoHS Compliant** 


•Products specification might be changed without notice.

## **Optional Parts**

#### Muting cap OP-090-M12B/C/D

Model
OP-090-M12B
OP-090-M12C
OP-090-M12D


- A muting cap reduces the collision noise.
- To use, place it over a rod cap in the FA-1212L series.
- Stroke length is 11mm.

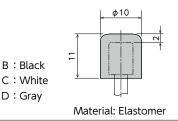

#### Small hexagon nut M12B

#### Model M12B

• It is ideal for tight spaces, as it is smaller than the conventional hexagon nuts.

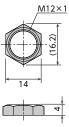



#### The standard nut is also sold separately.

Applicable Models	Model
FA-1212L	Nut for FA-1212C

## FA-1410RB/FA-1410RD/FWM-1410RBD Series



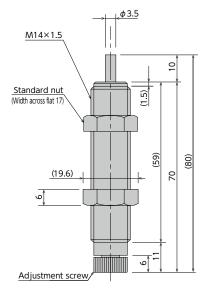

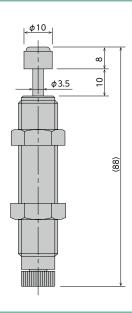

## **Specifications**

Model	Stroke mm	Max. absorption energy J (kgf·m)	Max. equivalent mass kg (kgf)	Range of impact rate m/s	Orifice type
FA-1410RB-S		3.92(0.4)	30(30)	0.3~1	Single-orifice type
FA-1410RB-C		3.92(0.4)			
FA-1410RD-S	10		4.5 (4.5)	0.7~3	Multiple-orifice type
FA-1410RD-C	10	5.88(0.6)	4.5(4.5)	0.7.53	Multiple-office type
FWM-1410RBD-S		3.86(0.6)	25 (25)	0.22	Multiple varying orifice type
FWM-1410RBD-C			35(35)	0.3~2	Multiple-varying orifice type

Note) To place an order without a cap, put -S at the end of the model number, and to place an order with a cap, put -C at the end of the model number.

## **Common Specifications**

Max. drag	N (kgf)	1,813(185)	Operating temperature	$^{\circ}$	-5~70
Max. cycle rate	cycle/min	60	Mass: S type	g	68
Max. absorption energy per minute	J/min(kgf·m/min)	147 (15)	: C type	g	73
Recovering power of the piston r	od N(kgf)	9.8(1.0) or lower			

### Selection Guideline The FA-1410 series has the following three patterns of absorption characteristics depending on the orifice type. Please use the following information as a guideline when making your selection.

Orifice type	Single-orifice type	Multiple-orifice type	Multiple-varying orifice type
Model number	FA-1410RB series	FA-1410RD series	FWM-1410RBD series
Application	For low-speed	For high-speed	For medium speed, in particular with a pneumatic cylinder
Absorbance Properties	Resistance	Resistance	Resistance

## **Precautions for Use**

- \* Do not use this product without carefully reading the attached owner's manual.
- \* Ensure that an external stopper (Stopper nut OP-020RB) is also used.
- $\ensuremath{^{*}}$  Do not turn the oil inlet screw located at the bottom of the main unit.
- \* Ensure that sufficient mounting strength is secured for this product. (As a guideline, it should be 2 to 3 times the maximum drag listed in the catalogue.)
- \* Do not use this product in a vacuum or a location where it may come in contact with oil.
- \* Ensure that an eccentric load is not applied to the soft absorber (Allowable eccentric angle: within  $\pm 2.5^{\circ}$ )

- \* To adjust, turn the adjustment knob located at the bottom of the main unit.
- \* Because the adjustment can be done in an analog manner, a value between two integers on the indicator can be set.
- \* Once the adjustment is complete, secure with a lock screw using a hex wrench.


Products specification might be changed without notice.

## **Optional Parts**

#### Eccentric angle adaptor OP-010RB

#### Model OP-010RB

- Screw the eccentric angle adaptor into the main unit until the cap for the eccentric angle and the piston rod form a tight connection. While maintaining this position, fasten the main unit's nut until secured.
- Use the eccentric angle adaptor when the eccentric angle is 2.5° or larger.
- The main unit can also be used as a stopper.
- Use it with a capless soft absorber.
- The maximum operating eccentric angle with an eccentric angle adaptor is  $\pm 10^{\circ}$ .
- The caps and the guides for inclined use are not unbundled.

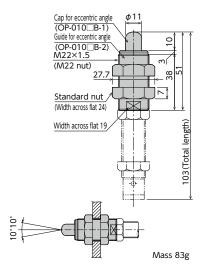


Note) Material of cap for eccentric angle: POM

#### Square flange OP-040RB

#### Model OP-040RB


 Once the attachment site is determined, uset he main unit's nut to securely fasten in place.

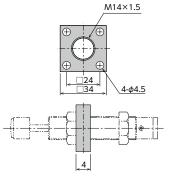

#### Stopper nut OP-020RB- □

ĺ	Model
	OP-020RB-S
	OP-020RB-C

 Adjust so that it stops 1mm before thestroke end, and fasten with the main unit's nut until secured.

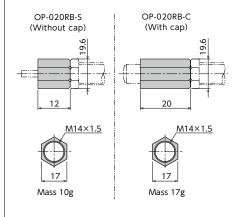


Note) When attaching, make sure that the side without a bearing chamfer is the impact surface.

#### Liquid-proof cap F□□-1410R □□-C-060


Model
FA-1410RB-C-060
FA-1410RD-C-060
FWM-1410RBD-C-060


- Ideal for use in environments where oil splatter poses a problem.
- •Ensure that the cap is facing upward. If the cap is facing sideways or downward, it cannot provide an effective means for liquid proofing.
- ●F□□-1410M□□-C-060
  - · Model indication A or WM is inserted in  $\square$  of F $\square\square$ .
  - · Model indication B, D or BD is inserted in  $\square$  of M $\square$  $\square$ .

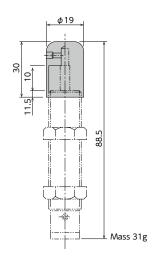

#### Holder with a switch OP-030RB-2 (With a stopper function)

#### Model OP-032RB

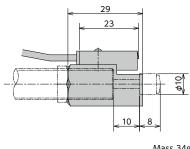

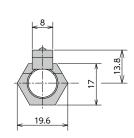


Mass 34g


- Although a holder with a switch can be ordered on its own, we strongly recommend ordering one with the main unit. Please include the main unit's model number when placing an order.
- For switch specifications and precautions for use, please refer to page 23.

Applicable Models	Model
FA-1410RB	
FA-1410RD	M14 nut
FWM-1410RBD	

## FA-1612X Series



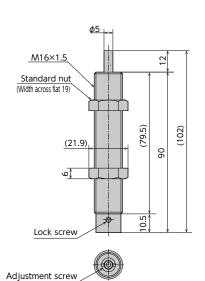

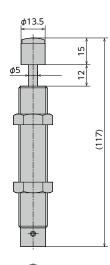



## **Specifications**

Model	Stroke mm	Max. absorption energy J (kgf·m)	Max. equivalent mass kg (kgf)	Range of impact rate m/s	Orifice type
FA-1612X1-S			200 (200)	0.3~1	Single-orifice type
FA-1612X1-C	12	14.7	200(200)	0.5	Single-office type
FA-1612X2-S			120(120)	0.3~2	Multiple versing erifice type
FA-1612X2-C		14.7	120(120)	0.5~2	Multiple-varying orifice type
FA-1612X3-S			35 (35)	0.7~3	Multiple erifice type
FA-1612X3-C			35(35)	0.7~3	Multiple-orifice type

Note) To place an order without a cap, put -S at the end of the model number, and to place an order with a cap, put -C at the end of the model number.

## **Common Specifications**

Max. drag	N(kgf)	3,528 (360)	Operating temperature	$^{\circ}$	-5~70
Max. cycle rate	cycle/min	60	Mass: S type	g	98
Max. absorption energy per minute	J/min(kgf·m/min)	235 (24)	: C type	g	107
Recovering power of the piston i	od N(kgf)	19.6 (2.0) or lower			

### Selection Guideline The FA-1612-FWM series has the following three patterns of absorption characteristics depending on the orifice type. Please use the following information as a guideline when making your

Orifice type	Single-orifice type	Multiple-varying orifice type	Multiple-orifice type
Model number	FA-1612X1 series	FA-1612X2 series	FA-1612X3 series
Application	For low-speed	For medium speed, in particular with a pneumatic cylinder	For high-speed
Absorption characteristics	Resistance	Resistance	Resistance

## **Precautions for Use**

- \* Do not use this product without carefully reading the attached owner's manual.
- \* Ensure that an external stopper (Stopper nut OP-020HB) is also used.
- \* Do not turn the oil inlet screw located at the bottom of the main unit.
- \* Ensure that sufficient mounting strength is secured for this product. (As a guideline, it should be 2 to 3 times the maximum drag listed in the catalogue.)
- \* Do not use this product in a vacuum or a location where it may come in contact with oil.
- \* Ensure that an eccentric load is not applied to the soft absorber (Allowable eccentric angle: within  $\pm 2.5^{\circ}$ )

- \* To adjust, turn the adjustment knob with a slotted screw driver.
- \* Because the adjustment can be done in an analog manner, a value between two integers on the indicator can be set.
- \* It does not have a lock screw for locking the adjusted setting.


Products specification might be changed without notice.

## **Optional Parts**

#### Eccentric angle adaptor OP-010XB

#### Model OP-010XB

- Screw the eccentric angle adaptor into the main unit until the cap for the eccentric angle and the piston rod form a tight connection. While maintaining this position, fasten the main unit's nut until secured.
- Use the eccentric angle adaptor when the eccentric angle is 2.5° or larger.
- The main unit can also be used as a stopper.
- Use it with a capless soft absorber.
- The maximum operating eccentric angle with an eccentric angle adaptor is  $\pm 10^{\circ}$ .
- The caps and the guides for inclined use are not unbundled.

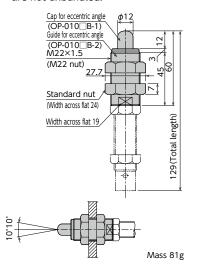


Note) Material of cap for eccentric angle: POM

#### Square flange OP-040XB

# OP-040XB


 Once the attachment site is determined, uset he main unit's nut to securely fasten in place.

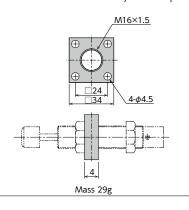

#### Stopper nut OP-020HB

Model	
OP-020HB-S	
OP-020HB-C	

 Adjust so that it stops 1mm before thestroke end, and fasten with the main unit's nut until secured.

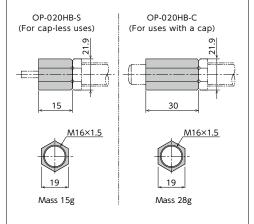


Note) When attaching, make sure that the side without a bearing chamfer is the impact surface.

#### Liquid-proof cap FA-1612X□-C-060


#### Model FA-1612X□-C-060

- A drip-proof cap is fitted on the unit on delivery.
- Liquid-proof caps are not sold separately.
- Ensure that the cap is facing upward. If the cap is facing sideways or downward, it cannot provide an effective means for liquid proofing.
- F□□-16120M□□-C-060
- The model number 1, 2, or 3 is inserted in the  $\square$  of  $X\square$ .

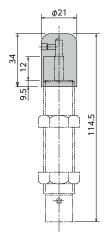

質量 46g

#### Holder with a switch OP-032HB (With a stopper function)

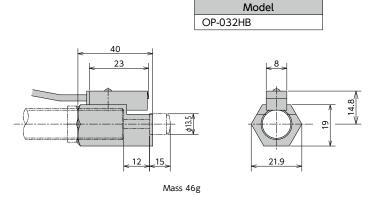

- Although a holder with a switch can be ordered on its own, we strongly recommend ordering one with the main unit. Please include the main unit's model number when placing an order.
- For switch specifications and precautions for use, please refer to page 23.

Applicable Models	Model	
FA-1612X	M16 nut	


Products specification might be changed without notice.

## **Optional Parts**

#### Eccentric angle adaptor OP-010XB

#### Model OP-010XB

- Screw the eccentric angle adaptor into the main unit until the cap for the eccentric angle and the piston rod form a tight connection. While maintaining this position, fasten the main unit's nut until secured.
- Use the eccentric angle adaptor when the eccentric angle is 2.5° or larger.
- The main unit can also be used as a stopper.
- Use it with a capless soft absorber.
- The maximum operating eccentric angle with an eccentric angle adaptor is  $\pm 10^{\circ}$ .
- The caps and the guides for inclined use are not unbundled.

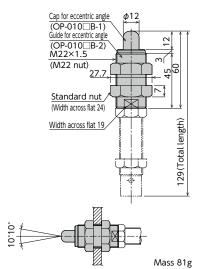


Note) Material of cap for eccentric angle: POM

#### Square flange OP-040XB

Model
OP-040XB
OP-040XB


 Once the attachment site is determined, uset he main unit's nut to securely fasten in place.

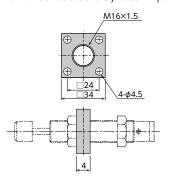

#### Stopper nut OP-020HB

Model	
OP-020HB-S	
OP-020HB-C	

 Adjust so that it stops 1mm before thestroke end, and fasten with the main unit's nut until secured.

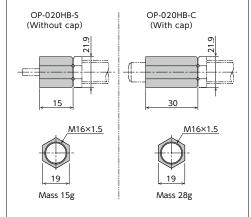


Note) When attaching, make sure that the side without a bearing chamfer is the impact surface.

#### Liquid-proof cap F□□-1612X□□-C-060


Model
FA-1612XB-C-060
FA-1612XD-C-060
FWM-1612XBD-C-060


- A drip-proof cap is fitted on the unit on delivery.
- Liquid-proof caps are not sold separately.
- Ensure that the cap is facing upward. If the cap is facing sideways or downward, it cannot provide an effective means for liquid proofing.
- F□□-16120M□□-C-060
  - · Model indication A or WM is inserted in  $\square$  of F $\square\square$ .
- · Model indication B, D or BD is inserted in  $\square$  of M $\square$  $\square$ .

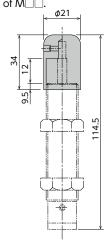


Mass 46g

#### スHolder with a switch OP-030HB-

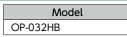

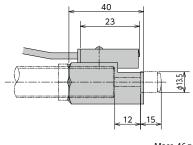

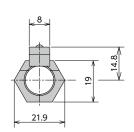


Mass 46g


- Although a holder with a switch can be ordered on its own, we strongly recommend ordering one with the main unit. Please include the main unit's model number when placing an order.
- For switch specifications and precautions for use, please refer to page 23.

Standard hats are sold separately a				
Applicable Models	Model			
FA-1612XB				
FA-1612XD	M16 nut			
FWM-1612XBD				

## FA-1612XB/FA-1612XD/FWM-1612XBD Series



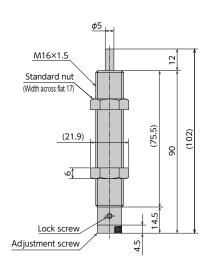

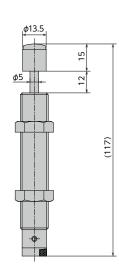

## **Specifications**

Model	Stroke mm	Max. absorption energy J (kgf·m)	Max. equivalent mass kg(kgf)	Range of impact rate m/s	Orifice type
FA-1612XB-S	12	9.8(1.0)	50(50)	0.3~1	Single-orifice type
FA-1612XB-C					
FA-1612XD-S			10(10)	0.7~3	Multiple orifice tupe
FA-1612XD-C		9.8(1.0)	10(10)	0.7~3	Multiple-orifice type
FWM-1612XBD-S			50(50)	0.3~2	Multiple varying orifice type
FWM-1612XBD-C			50(50)	0.5~2	Multiple-varying orifice type

Note) To place an order without a cap, put -S at the end of the model number, and to place an order with a cap, put -C at the end of the model number.

## **Common Specifications**

Max. drag	N(kgf)	2,646 (270)	Operating temperature	$^{\circ}$	-5~70
Max. cycle rate	cycle/min	60	Mass: S type	g	108
Max. absorption energy per minute	J/min(kgf·m/min)	235 (24)	: C type	g	117
Recovering power of the piston	rod N(kgf)	14.7(1.5) or lower			

#### Selection Guideline The FA-1612 series series has the following three patterns of absorption characteristics depending on the orifice type. Please use the following information as a guideline when making your

Orifice type	Single-orifice type	Multiple-orifice type	Multiple-varying orifice type
Model number	FA-1008VB series	FA-1008VD series	FWM-1008VBD series
Application	For low-speed	For high-speed	For medium speed, in particular with a pneumatic cylinder
Absorption characteristics	Resistance	Resistance	Resistance

## **Precautions for Use**

- \* Do not use this product without carefully reading the attached owner's manual.
- \* Ensure that an external stopper (Stopper nut OP-020HB) is also used.
- \* Do not turn the oil inlet screw located at the bottom of the main unit.
- \* Ensure that sufficient mounting strength is secured for this product. (As a guideline, it should be 2 to 3 times the maximum drag listed in the catalogue.)
- \* Do not use this product in a vacuum or a location where it may come in contact with oil.
- \* Ensure that an eccentric load is not applied to the soft absorber (Allowable eccentric angle: within  $\pm 2.5^{\circ}$ )

- \* To adjust, turn the adjustment knob located at the bottom of the main unit.
- \* Because the adjustment can be done in an analog manner, a value between two integers on the indicator can be set.
- \* Once the adjustment is complete, secure with a lock screw using a hex wrench.


Products specification might be changed without notice.

## **Optional Parts**

#### Eccentric angle adaptor OP-010EB

#### Model OP-010EB

- Screw the eccentric angle adaptor into the main unit until the cap for the eccentric angle and the piston rod form a tight connection. While maintaining this position, fasten the main unit's nut until secured.
- Use the eccentric angle adaptor when the eccentric angle is 2.5° or larger.
- The main unit can also be used as a stopper.
- Use it with a capless soft absorber.
- The maximum operating eccentric angle with an eccentric angle adaptor is  $\pm 10^{\circ}$ .
- The caps and the guides for inclined use are not unbundled.

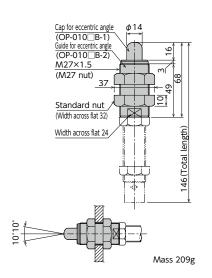


Note) Material of cap for eccentric angle: Metal

#### Square flange OP-040EB

Model
OP-040EB


• Once the attachment site is determined, uset he main unit's nut to securely fasten in place.

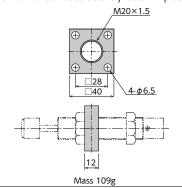

#### Stopper nut OP-020EB-

Model							
OP-020EB-S							
OP-020EB-C							

 Adjust so that it stops 1mm before thestroke end, and fasten with the main unit's nut until secured.

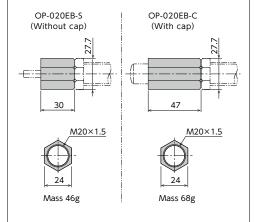


Note) When attaching, make sure that the side without a bearing chamfer is the impact surface.

#### Liquid-proof cap FA-2016E□-C-060


#### Model FA-2016E□-C-060


- A drip-proof cap is fitted on the unit on delivery.
- Liquid-proof caps are not sold separately.
- Ensure that the cap is facing upward. If the cap is facing sideways or downward, it cannot provide an effective means for liquid proofing.
- F□□-16120M□□-C-060
  - The model number 1, 2, or 3 is inserted in the  $\square$  of  $X\square$ .

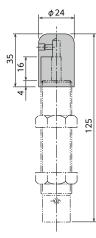


Mass 59g

#### Holder with a switch OP-030EB-

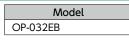

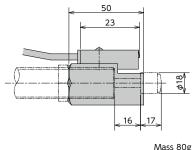

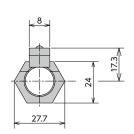



- Although a holder with a switch can be ordered on its own, we strongly recommend ordering one with the main unit. Please include the main unit's model number when placing an order.
- For switch specifications and precautions for use, please refer to page 23.

Applicable Models	Model				
FA-2016E	M20 nut				

## FA-2016E Series



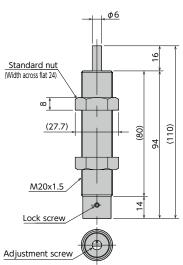

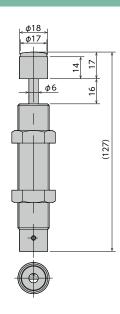

## **Specifications**

Model	Stroke mm	Max. absorption energy J (kgf·m)	Max. equivalent mass kg(kgf)	Range of impact rate m/s	Orifice type	
FA-2016E1-S			300(300)	0.3~1	Cinalo orifico tuno	
FA-2016E1-C			300(300)	0.5~1	Single-orifice type	
FA-2016E2-S	16	35(3.57)	200 (200)	0.3~2	Multiple varying erifice type	
FA-2016E2-C	16	33(3.57)	200(200)	0.5~2	Multiple-varying orifice type	
FA-2016E3-S			120/120\	0.7~3	Multiple orifice type	
FA-2016E3-C			120(120)	0./~3	Multiple-orifice type	

Note) To place an order without a cap, put -S at the end of the model number, and to place an order with a cap, put -C at the end of the model number.

## **Common Specifications**

Max. drag	N(kgf)	6,370 (650)	Operating temperature	$^{\circ}$	<b>−</b> 5~70
Max. cycle rate	cycle/min	60	Mass: S type	g	185
Max. absorption energy per minute	J/min(kgf·m/min)	343 (35)	: C type	g	207
Recovering power of the piston re	od N(kgf)	18.1 (1.84) or lower			

#### Selection Guideline The FA-2016 series has the following three patterns of absorption characteristics depending on the orifice type. Please use the following information as a guideline when making your selection.

Orifice type	Single-orifice type	Multiple-varying orifice type	Multiple-orifice type
Model number	FA-2016E1 series	FA-2016E2 series	FA-2016E3 series
Application	For low-speed	For medium speed, in particular with a pneumatic cylinder	For high-speed
Absorption characteristics	Resistance	Resistance	Resistance


## **Precautions for Use**


- \* Do not use this product without carefully reading the attached owner's manual.
- \* Ensure that an external stopper (Stopper nut OP-020EB) is also used.
- \* Do not turn the oil inlet screw located at the bottom of the main unit.
- \* Ensure that sufficient mounting strength is secured for this product. (As a guideline, it should be 2 to 3 times the maximum drag listed in the catalogue.)
- \* Do not use this product in a vacuum or a location where it may come in contact with oil.
- \* Ensure that an eccentric load is not applied to the soft absorber (Allowable eccentric angle: within  $\pm 2.5^{\circ}$ )

- \* To adjust, turn the adjustment knob with a slotted screw driver.
- \* Because the adjustment can be done in an analog manner, a value between two integers on the indicator can be set.
- \* It does not have a lock screw for locking the adjusted setting.

## FA-2016EA/FA-2725FA Series



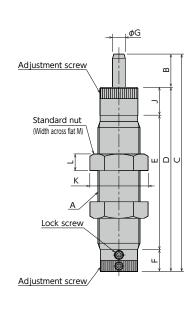

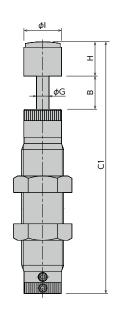

## **Dimensions**

Model	Α	В	С	C1	D	E	F	φG	Н	φl	J	K	L	M
FA-2016EA-S/C	M20×1.5	16	105	122	89	65	10.5	6	17	18	13.5	27.7	8	24
FA-2725FA-S/C	M27×1.5	25	136	156	111	86.5	10.5	8	20	23	14	37	10	32

Note) To place an order without a cap, put -S at the end of the model number; to place an order with a cap, put -C at the end of the model number; and to place an order for a crevice type, put -U at the end of the model number.

## **Specifications**

Model	Stroke mm	Max. absorption energy J(kgf·m)	mass	Rarge of impact rate m/s	Max. drag N(kgf)	Max.cycle rate cycle/min	Absorption energy per minute  J/min (kgf·m/min)	power of the	Operating temperature	Mass g	Allowable eccentric angle										
FA-2016EA-S	16	25.4	200(200)	0.15~3.0	3.610	60	242(25)	35.2(3.59)		173	±2.5										
FA-2016EA-C	16	(2.6)	(2.6)	(2.6)	(2.6)	(2.6)	(2.6)	(2.6)	(2.6)	(2.6)	(2.6)	(2.6)	5) 200(200)	0.15~3.0	3,010	60	343 (35)	or lower	-5~70	191	12.5
FA-2725FA-S	25	79.3	500(500)	0.15~3.0	7,200	60	539(55)	44.2(4.51)	-5~70	402	±2.5										
FA-2725FA-C	— /5 l /- ·- ·	(8.1)	300(300)	0.15~3.0	7,200	60	339(33)	or lower		446	1 12.5										

## **Precautions for Use**

- $\ensuremath{^{*}}$  Do not use this product without carefully reading the attached owner's manual.
- \* We recommend that you use it with an external stopper(Stopper nut OP-020EB).
- \* Ensure that sufficient mounting strength is secured for this product. (As a guideline, it should be 2 to 3 times the maximum drag listed in the catalogue.)
- \* Do not use this product in a vacuum or a location where it may come in contact with oil.
- \* Ensure that an eccentric load is not applied to the soft absorber.
- \* The urethane caps are consumables. Please replace them when necessary.

- \* To adjust, turn the adjustment knob located at the bottom of the main unit.
- \* Because the adjustment can be done in an analog manner, a value between two integers on the indicator can be set.
- \* Once the adjustment is complete, secure with a lock screw using a hex wrench.


•Products specification might be changed without notice.

## **Optional Parts**

#### Stopper nut OP-020EB、OP-020FB

Model							
OP-020EB-S							
OP-020EB-C							
OP-020FB-S							
OP-020FB-C							

• Adjust so that it stops 1mm before thestroke end, and fasten with the main unit's nut until secured.

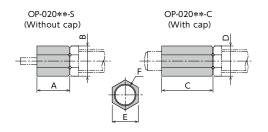


Note) When attaching, make sure that theside without a bearing chamfer is the impact surface.

Model	Α	В	С	D	E	F	Ma	ss g
OP-020EB-*	30	27.7	47	27.7	24	M20X1.5	S	46
OF-020EB-*	30	27.7	4/	27.7	24	1012071.5	С	68
OD OODER *	25	37	55	27	32	M27X1.5	S	90
OP-020FB-*	35	3/	55	37	32	1012/X1.5	С	137

#### Square flange OP-040EB、OP-040FB

Mode	
OP-040EB	
OP-040FB	


• Once the attachment site is determined, uset he main unit's nut to securely fasten in place.

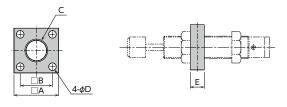


Model	Α	В	С	φD	E	Mass g
OP-040EB	40	28	M20×1.5	6.5	12	109
OP-040FB	50	36	M27×1.5	9	12	157

#### Holder with a switch OP-032\*\*(With stopper function)

Model
OP-032EB
OP-032FB

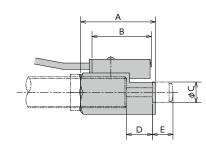

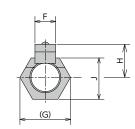

Model	Α	В	С	D	E	F	G	Н	J	Mass g
OP-032EB	50	21	18	16	17	8	28	18	24	80
OP-032FB	56	21	23	25	20	8	34.6	21	30	107

- Although a holder with a switch can be ordered on its own, we strongly recommend ordering one with the main unit. Please include the main unit's model number when placing an order.
- For switch specifications and precautions for use, please refer to page 23.

otaniaana mato and bota bopanatot,							
Applicable Models	Model						
FA-2016EA	M20 nut						
FΔ-2725FΔ	M27 nut						


Products specification might be changed without notice.

## **Optional Parts**

#### Eccentric angle adaptor OP-010EB

#### Model OP-010EB


- Screw the eccentric angle adaptor into the main unit until the cap for the eccentric angle and the piston rod form a tight connection. While maintaining this position, fasten the main unit's nut until secured.
- Use the eccentric angle adaptor when the eccentric angle is 2.5° or larger.
- The main unit can also be used as a stopper.
- Use it with a capless soft absorber.
- The maximum operating eccentric angle with an eccentric angle adaptor is  $\pm 10^{\circ}$ .
- The caps and the guides for inclined use are not unbundled.

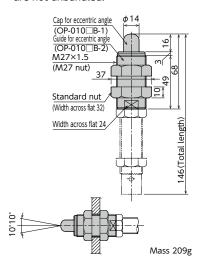

Note) Material of cap for eccentric angle: Metal

#### Square flange OP-040EB


 Once the attachment site is determined, uset he main unit's nut to securely fasten in place.

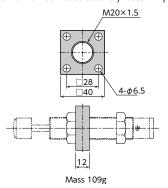

#### Stopper nut OP-020EB- □

Model
OP-020EB-S
OP-020EB-C

 Adjust so that it stops 1mm before thestroke end, and fasten with the main unit's nut until secured.

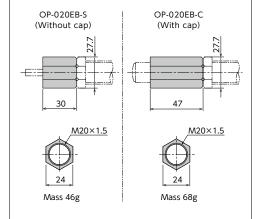


Note) When attaching, make sure that the side without a bearing chamfer is the impact surface.


#### Liquid-proof cap FA-2016E□-C-060

Model
FA-2016EB-C-060
FA-2016ED-C-060
FWM-2016EBD-C-060

- A drip-proof cap is fitted on the unit on delivery.
- Liquid-proof caps are not sold separately.
- Ensure that the cap is facing upward. If the cap is facing sideways or downward, it cannot provide an effective means for liquid proofing.
- F□□-16120M□□-C-060
  - · Model indication A or WM is inserted in  $\square$  of F $\square\square$ .
- · Model indication B, D or BD is inserted in  $\square$  of M $\square$  $\square$ .

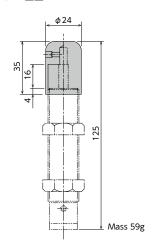

#### Holder with a switch OP-030EB-

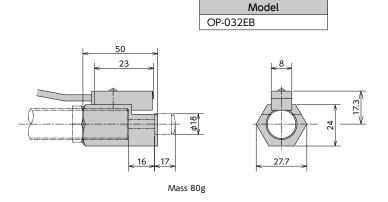



- Although a holder with a switch can be ordered on its own, we strongly recommend ordering one with the main unit. Please include the main unit's model number when placing an order.
- For switch specifications and precautions for use, please refer to page 23.

Applicable Models	Model
FA-2016EB	
FA-2016ED	M20 nut
FWM-2016EBD	

## FA-2016EB/FA-2016ED/FWM-2016EBD Series



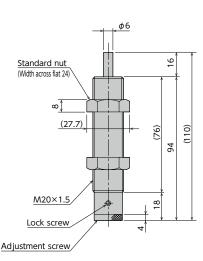

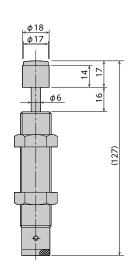

## **Specifications**

Model	Stroke mm	Max. absorption energy J (kgf·m)	Max. equivalent mass kg(kgf)	Range of impact rate m/s	Orifice type
FA-2016EB-S			300(300)	0.3~1	Single-orifice type
FA-2016EB-C		29.4(3.0)	300(300)	0.5~1	Single-office type
FA-2016ED-S	16		120(120)	0.7~3	Multiple-orifice type
FA-2016ED-C			120(120)	0.7~3	Multiple-office type
FWM-2016EBD-S			200(200)	0.3~2	Multiple verying erifice type
FWM-2016EBD-C			200 (200)	0.3~2	Multiple-varying orifice type

Note) To place an order without a cap, put -S at the end of the model number, and to place an order with a cap, put -C at the end of the model number.

## **Common Specifications**

Max. drag	N(kgf)	3,528 (360)	Operating temperature	$^{\circ}$	-5~70
Max. cycle rate	cycle/min	60	Mass: S type	g	180
Max. absorption energy per minute	J/min(kgf·m/min)	343 (35)	: C type	g	202
Recovering power of the piston	rod N(kgf)	18.1 (1.84) or lower			

## Selection Guideline The FA-2016 series has the following three patterns of absorption characteristics depending on the orifice type. Please use the following information as a guideline when making your selection.

Orifice type	Single-orifice type	Multiple-orifice type	Multiple-varying orifice type		
Model number	FA-2016EB series	FA-2016ED series	FWM-2016EBD series		
Application	For low-speed	For high-speed	For medium speed, in particular with a pneumatic cylinder		
Absorption characteristics	Resistance	Resistance	Resistance		


## **Precautions for Use**


- \* Do not use this product without carefully reading the attached owner's manual.
- \* Ensure that an external stopper (Stopper nut OP-020EB) is also used.
- $\ensuremath{^{*}}$  Do not turn the oil inlet screw located at the bottom of the main unit.
- \* Ensure that sufficient mounting strength is secured for this product. (As a guideline, it should be 2 to 3 times the maximum drag listed in the catalogue.)
- \* Do not use this product in a vacuum or a location where it may come in contact with oil.
- \* Ensure that an eccentric load is not applied to the soft absorber (Allowable eccentric angle: within  $\pm 2.5^\circ$ )

- \* To adjust, turn the adjustment knob located at the bottom of the main unit.
- \* Because the adjustment can be done in an analog manner, a value between two integers on the indicator can be set.
- \* Once the adjustment is complete, secure with a lock screw using a hex wrench.

## FA-2530G/FA-2530SL Series



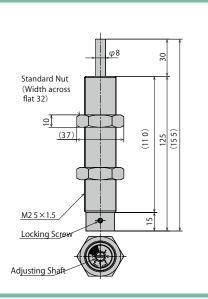

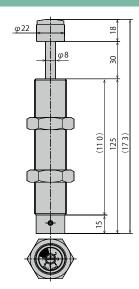

## Specifications

Model	Stroke mm	Max. absorption energy	J(kgf•m)	Max. equivalent mass	kg(kgf)	Range of impact rate	m/s	Orifice type
FA-2530G1-S		49(5.0)		400 (400	)	0.3~1		Cin also saife as tour
FA-2530G1-C				400 (400)		0.5~1		Single-orifice type
FA-2530G2-S				300(300	)	0.3~2		Multiple-varying orifice type
FA-2530G2-C	30	58.8(6.0)		300(300)	)	0.5 %		Multiple-varying office type
FA-2530G3-S	30	36.6 (0.0)	36.6(0.0)		)	0.7~3		Multiple-orifice type
FA-2530G3-C					)	0.7~3		Multiple-office type
FA-2530SL-S		40(5.0)	·	4,150(4,15	0)	0.05~0.5		Multiple-varying orifice type
FA-2530SL-C		49(5.0)		4,130(4,13	U)	0.05/~0.5		wulliple-varying office type

Note) To place an order without a cap, put –S at the end of the

model number, and to place an order with a cap, put  $-\mathsf{C}$  at the

end of the model number.

## Common Specifications

Max. drag	N (kgf)	6,370 (650)	Operating temperature	°C	<b>−5~70</b>
Max. cycle rate	cycle/min	60	Mass: S type	g	388
Max. absorption energy per minute	J/min(kgf•m/min)	490 (50)	: C type	g	418
Recovering power of the piston rod	N(kgf)	30.8(3.14) or lower			

Note) M25 X 2.0 is also available as the main unit's screw pitch specifications for the FA-2530 series. Please your order using the model number FA-2530G\*S-P2.0 or F

#### Selection Guideline

 $TThe \, FA-2530 \, series \, has \, the \, following \, three \, patterns \, of \, absorpt$ 

ion characteristics depending on the orifice type. Please use th

e following information as a guideline when making your selecti

on.

Orifice type	Single-orifice type	Multiple-varying orifice type	Multiple-orifice type	
Model number	FA-2530G1 series	FA-2530G2 series	FA-2530G3 series	
Application	For low-speed	For medium speed, in particular with a pneumatic cylinder	For high-speed	
Absorption characteristics	Resistance	Resistance	Resistance	

<sup>\*</sup>The super low speed models are applicable for a lower collisi

on speed range than low speed models.

## Precautions for Use

- \* Do not use this product without carefully reading the attached owner's manual.
- \* Ensure that an external stopper (Stopper nut OP-020GB) is also used.
- \* Do not turn the oil inlet screw located at the bottom of the ma in unit.
- \* Ensure that sufficient mounting strength is secured for this product. (As a guideline, it should be 2 to 3 times the maximum drag listed in the catalogue.)
- \* Do not use this product in a vacuum or a location where it may come in contact with oil.
- \* Ensure that an eccentric load is not applied to the soft absorb (Allowable eccentric angle: within ±2.5°)

## Adjustment Method

- \* To adjust, turn the adjustment knob with a slotted screw driver
- \* Because the adjustment can be done in an analog manner, a value between two integers on the indicator can be set.
- \* It does not have a lock screw for locking the adjusted settin

g.


Products specification might be changed without notice.

## **Optional Parts**

#### Eccentric angle adaptor OP-010GB

#### Model OP-010GB

- Screw the eccentric angle adaptor into the main unit until the cap for the eccentric angle and the piston rod form a tight connection. While maintaining this position, fasten the main unit's nut until secured.
- Use the eccentric angle adaptor when the eccentric angle is 2.5° or larger.
- The main unit can also be used as a stopper.
- Use it with a capless soft absorber.
- The maximum operating eccentric angle with an eccentric angle adaptor is  $\pm 10^{\circ}$ .
- The caps and the guides for inclined use are not unbundled.

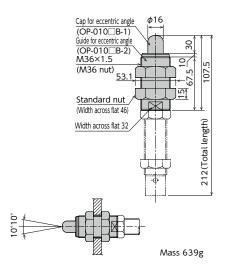


Note) Material of cap for eccentric angle: Metal

#### Square flange OP-040GB

•	
Model	
OP-040GB	


 Once the attachment site is determined, uset he main unit's nut to securely fasten in place.

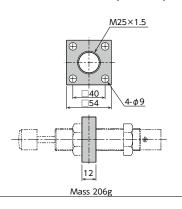

#### Stopper nut OP-020GB- □

ĺ	Model	
	OP-020GB-S	
	OP-020GB-C	

 Adjust so that it stops 1mm before thestroke end, and fasten with the main unit's nut until secured.

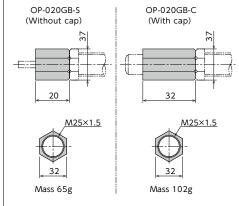


Note) When attaching, make sure that the side without a bearing chamfer is the impact surface.

#### Liquid-proof cap F□□-2530G□□-C-060

Model	
FA-2530G1-C-060	
FA-2530G2-C-060	
FA-2530G3-C-060	
FA-2530SL-C-060	_

- A drip-proof cap is fitted on the unit on delivery.
- Liquid-proof caps are not sold separately.
- Ensure that the cap is facing upward. If the cap is facing sideways or downward, it cannot provide an effective means for liquid proofing.
- FA-2530G□-C-060
  - The model number 1, 2, or 3 is inserted in the  $\square$  of  $X\square$ .

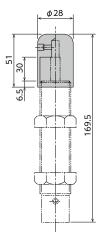


Model

OP-032GB

Mass 77g

#### Holder with a switch OP-030GB-

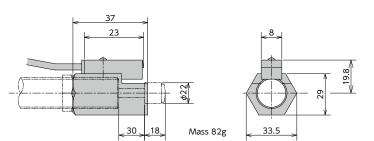



- Although a holder with a switch can be ordered on its own, we strongly recommend ordering one with the main unit. Please include the main unit's model number when placing an order.
- For switch specifications and precautions for use, please refer to page 23.

<b>Applicable Models</b>	Model	
FA-2530G	M25 nut	
FA-2530SL	IVIZ5 HUL	

## FA-2530GB/FA-2530GD/FWM-2530GBD Series



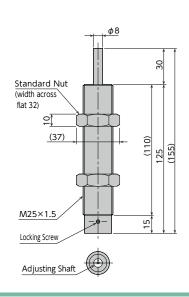

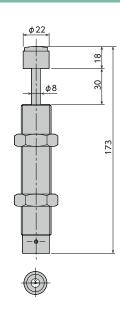

## **Specifications**

Model	Stroke mm	Max. absorption energy J(kgf·m)	Max. equivalent mass kg (kgf)	Range of impact rate m/s	Orifice type
FA-2530GB-S ▲			400 (400)	0.3~1	Single-orifice type
FA-2530GB-C ▲					
FA-2530GD-S ▲	30	49(5.0)	150(150)	0.7~3	Multiple-orifice type
FA-2530GD-C ▲	30	49(3.0)	130(130)		
FWM-2530GBD-S ▲			300 (300)	0.3~2	Multiple varying crifice type
FWM-2530GBD-C ▲			300(300)	0.5~2	Multiple-varying orifice type

A Thread pitch P2.0 is supplied as well.

Note) To place an order without a cap, put -S at the end of the model number, and to place an order with a cap, put -C at the end of the model number.

Note: M25 x 2.0 is included in main unit thread pitch specification for FA-2530. A designation shall include the model symbols such as FA-2530GB- \*-P2.0, FA-2530GD- \*-P2.0, FWM-2530GBD- \*-P2.0, etc. for ordering.

Note: "\*" will be filled in with "-S" or "-C"

## **Common Specifications**

Max. drag	N(kgf)	3,920 (400)	Operating temperature	$^{\circ}$	<b>−</b> 5~70
Max. cycle rate	cycle/min	60	Mass: S type	g	406
Max. absorption energy per minute	J/min(kgf·m/min)	490 (50)	: C type	g	436
Recovering power of the piston re	od N(kgf)	33.2(3.38) or lower			

## Selection Guideline The FA-2530 series has the following three patterns of absorption characteristics depending on the orifice type. Please use the following information as a guideline when making your selection.

Orifice type	Single-orifice type	Multiple-orifice type	Multiple-varying orifice type	
Model number	FA-2530GB series	FA-2530GD series	FWM-2530GBD series	
Application	For low-speed	For high-speed	For medium speed, in particular with a pneumatic cylinder	
Absorption characteristics	Resistance	Resistance	Resistance	

## **Precautions for Use**

- \* Do not use this product without carefully reading the attached owner's manual.
- \* Ensure that an external stopper (Stopper nut OP-020GB) is also used.
- \* Do not turn the oil inlet screw located at the bottom of the main unit.
- \* Ensure that sufficient mounting strength is secured for this product. (As a guideline, it should be 2 to 3 times the maximum drag listed in the catalogue.)
- \* Do not use this product in a vacuum or a location where it may come in contact with oil.
- \* Ensure that an eccentric load is not applied to the soft absorber (Allowable eccentric angle: within ±2.5°)

- \* To adjust, turn the adjustment knob with a slotted screw driver.
- \* Because the adjustment can be done in an analog manner, a value between two integers on the indicator can be set.
- \* It does not have a lock screw for locking the adjusted setting.


Products specification might be changed without notice.

## **Optional Parts**

#### Eccentric angle adaptor OP-010GB

#### Model OP-010GB

- Screw the eccentric angle adaptor into the main unit until the cap for the eccentric angle and the piston rod form a tight connection. While maintaining this position, fasten the main unit's nut until secured.
- Use the eccentric angle adaptor when the eccentric angle is 2.5° or larger.
- The main unit can also be used as a stopper.
- Use it with a capless soft absorber.
- The maximum operating eccentric angle with an eccentric angle adaptor is  $\pm 10^{\circ}$ .
- The caps and the guides for inclined use are not unbundled.
- The inclined adapter is not available for FA-

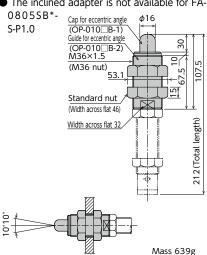


Note) Material of cap for eccentric angle: Metal

#### Square flange OP-040GB

#### Model OP-040GB


• Once the attachment site is determined, uset he main unit's nut to securely fasten in place.

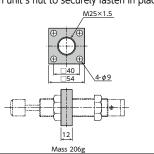

#### Stopper nut OP-020GB-

Model		
OP-020GB-S		
OP-020GB-C		

 Adjust so that it stops 1mm before thestroke end, and fasten with the main unit's nut until secured.

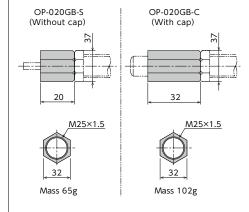

Note) When attaching, make sure that the side without a bearing chamfer is the impact surface.


M25 X 2.0 is also available as a screw pitch specification.

Model number is either OP-020GB-S or C-P2.0

#### Liquid-proof cap F□□-2530G□□-C-060

Model
FA-2530GB-C-060
FA-2530GD-C-060
FWM-2530GBD-C-060


- A drip-proof cap is fitted on the unit on delivery.
- Liquid-proof caps are not sold separately.
- Ensure that the cap is facing upward. If the cap is facing sideways or downward, it cannot provide an effective means for liquid proofing.
- F□□-2530G□□-C-060
- · Model indication A or WM is inserted in  $\square$  of F $\square\square$ .
- · Model indication B, D or BD is inserted in  $\square$  of M $\square$  $\square$ .

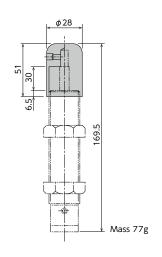

#### Holder with a switch OP-030GB-



Model

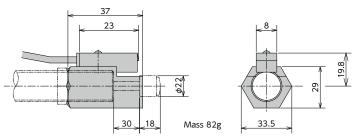


- Although a holder with a switch can be ordered on its own, we strongly recommend ordering one with the main unit. Please include the main unit's model number when placing an order.
- For switch specifications and precautions for use, please refer to page 23.

Applicable Models	Model
FA-2530GB	
FA-2530GD	M25 nut
FWM-2530GBD	
FA-2530GB P2.0	
FA-2530GD P2.0	M25-P2 nut
FWM-2530GBD P2.0	

## FA-2540LB/FA-2540LD/FWM-2540LBD Series



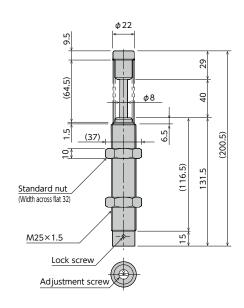

## **Specifications**

Model	Stroke mm	Max. absorption energy J(kgf·m)	orption energy J(kgf·m)   Max. equivalent mass kg(kgf)   Range of impact rate m/s		Orifice type
FA-2540LB-C ▲			500 (500)	0.3~1	Single-orifice type
FA-2540LD-C ▲	40	63.7(6.5)	200 (200)	0.7~3	Multiple-orifice type
FWM-2540LBD-C ▲			350 (350)	0.3~2	Multiple-varying orifice type

<sup>▲</sup> Thread pitch P2.0 is supplied as well.

## Common Specifications

Max. drag	N(kgf)	3,920(400)	Operating temperature	$^{\circ}$	-5~70
Max. cycle rate	cycle/min	60	Mass : C type	g	475.1
Max. absorption energy per minute J/min(kgf·m/min) 637 (65)		637 (65)			
Recovering power of the piston	rod N(kgf)	71.4(7.29) or lower			

Note) M25 X 2.0 is also available as the main unit's screw pitch specifications for the FA-2540 series. Please order using the model number FA-2540L\*-C-P.2.0. However, please note that there are no optional parts for it

## Selection Guideline The FA-FWM-2540 series series has the following three patterns of absorption characteristics depending on the orifice type. Please use the following information as a guideline when making your selection.

Orifice type	Single-orifice type	Multiple-orifice type	Multiple-varying orifice type	
Model number	FA-2540LB series	FA-2540LD series	FWM-2540LBD series	
Application	For low-speed	For high-speed	For medium speed, in particular with a pneumatic cylinder	
Absorption characteristics	Resistance	Resistance	Resistance	

## **Precautions for Use**

- \* Do not use this product without carefully reading the attached owner's manual.
- $\ensuremath{^{*}}$  Ensure that an external stopper (Stopper nut OP-020LB) is also used.
- \* Do not turn the oil inlet screw located at the bottom of the main unit.
- \* Ensure that sufficient mounting strength is secured for this product. (As a guideline, it should be 2 to 3 times the maximum drag listed in the catalogue.)
- \* Do not use this product in a vacuum or a location where it may come in contact with oil.
- \* Ensure that an eccentric load is not applied to the soft absorber (Allowable eccentric angle: within  $\pm 2.5^{\circ}$ )

- \* To adjust, turn the adjustment knob with a slotted screw driver.
- \* Because the adjustment can be done in an analog manner, a value between two integers on the indicator can be set.
- \* It does not have a lock screw for locking the adjusted setting.


●Products specification might be changed without notice.


## **Optional Parts**

### Stopper nut OP-020LB

#### Model OP-020LB

• Adjust so that it stops 1mm before thestroke end, and fasten with the main unit's nut until secured.

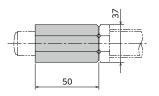

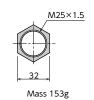


Note) When attaching, make sure that the side without a bearing chamfer is the impact surface.

#### Square flange OP-040GB

#### Model OP-040GB


• Once the attachment site is determined, use the main unit's nut to securely fasten in place.

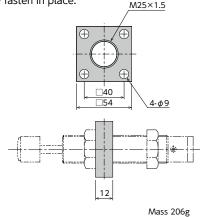


standard huts are sold separately as w					
Applicable Models	Model				
FA-2540LB					
FA-2540LD	M25 nut				
FWM-2540LBD					
FA-2540LB P2.0					
FA-2540LD P2.0	M25-P2 nut				
FWM-2540LBD P2.0					

## FA-2725FB/FA-2725FD/FWM-2725FBD/FA-2725SL Series



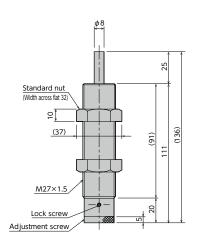

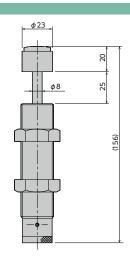

## **Specifications**

Model	Stroke mm	Max. absorption energy J(kgf·m)	Max. equivalent mass kg (kgf)	Range of impact rate m/s	Orifice type
FA-2725FB-S ▲		79,3(8,1)	650 (650)	0.3~1	Single-orifice type
FA-2725FB-C ▲				0.5	
FA-2725FD-S ▲			300 (300)	0.7~3	Multiple-orifice type
FA-2725FD-C ▲	25		300(300)	0.7 -3	Multiple-office type
FWM-2725FBD-S ▲	25	79.5(6.1)	450 (450)	0.3~2	Multiple-varying orifice type
FWM-2725FBD-C ▲		_	430(430)	0.5 2	wuttiple-varying office type
FA-2725SL-S ▲			5,000 (5,000)	0.05~0.5	Multiple-varying orifice type
FA-2725SL-C ▲			3,000 (3,000)	0.05~0.5	iviuttipte-varying office type

<sup>▲</sup> Thread pitch P3.0 is supplied as well.

## **Common Specifications**

Max. drag	N (kgf)	6,370 (650)	Operating temperature	$^{\circ}$	-5~70
Max. cycle rate	cycle/min	60	Mass: S type	g	411
Max. absorption energy per minute	J/min(kgf·m/min)	539 (55)	: C type	g	460
Recovering power of the piston re	od N(kgf)	27.3(2.78) or lower			

Note) M27X3.0 is also available as the main unit's screw pitch specification for the FA-2725 series. Please order using the model number FA-2725F\*-S-P3.0 or FA-2725F\*-C-P3.0. Note: "\*" will be filled in with "-S" or "-C"
Note: The maximum operation cycle of FA-2725SL is 30 (cycle/min). Note: The piston rod returning force of FA-2725SL is lower than 40.6N (4.14 kgf).

#### Selection Guideline The FA-FWM-2725 series series has the following three patterns of absorption characteristics depending on the orifice type. Please use the following information as a guideline when making your selection.

Orifice type	Single-orifice type	Multiple-orifice type	Multiple-varying orifice type	
Model number	FA-2725FB series	FA-2725FD series	FWM-2725FBD series	
Application	For low-speed	For high-speed	For medium speed, in particular with a pneumatic cylinder	
Absorption characteristics	Resistance	Resistance	Resistance	

<sup>\*</sup> The super low speed models are applicable to a collision speed range lower than that of low speed models.

## **Precautions for Use**

- \* Do not use this product without carefully reading the attached owner's manual.
- \* Ensure that an external stopper (Stopper nut OP-020FB) is also used.
- \* Do not turn the oil inlet screw located at the bottom of the main unit.
- \* Ensure that sufficient mounting strength is secured for this product. (As a guideline, it should be 2 to 3 times the maximum drag listed in the catalogue.)
- ${}^{*}$  Do not use this product in a vacuum or a location where it may come in contact with oil.
- \* Ensure that an eccentric load is not applied to the soft absorber (Allowable eccentric angle: within  $\pm 2.5^{\circ}$ )

## **Adjustment Method**

To adjust, turn the adjustment knob located at the bottom of the main unit.

- \* Because the adjustment can be done in an analog manner, a value between two integers on the indicator can be set.
- \* Once the adjustment is complete, secure with a lock screw using a hex wrench.


Products specification might be changed without notice.

## **Optional Parts**

#### Eccentric angle adaptor OP-010FB

#### Model OP-010FB


- Screw the eccentric angle adaptor into the main unit until the cap for the eccentric angle and the piston rod form a tight connection. While maintaining this position, fasten the main unit's nut until secured.
- Use the eccentric angle adaptor when the eccentric angle is 2.5° or larger.
- The main unit can also be used as a stopper.
- Use it with a capless soft absorber.
- The maximum operating eccentric angle with an eccentric angle adaptor is  $\pm 10^{\circ}$ .
- The caps and the guides for inclined use are not unbundled.

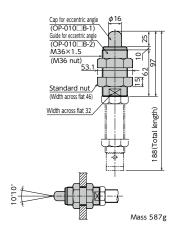

Note) Material of cap for eccentric angle: Metal

#### Square flange OP-040FB Model OP-040FB


 Once the attachment site is determined, uset he main unit's nut to securely fasten in place.

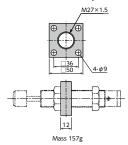

#### Stopper nut OP-020FB-

Model
OP-020FB-S
OP-020FB-C

 Adjust so that it stops 1mm before thestroke end, and fasten with the main unit's nut until secured.

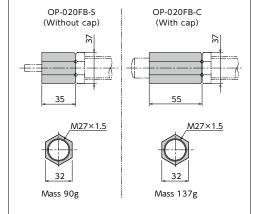


Note) When attaching, make sure that the side without a bearing chamfer is the impact surface. M27 X 3.0 is also available as a screw pitch specification. Model number is either OP-020FB-S or C-P3.0


#### Liquid-proof cap F□□-2725F□□-C-060

Model
FA-2725FB-C-060
FA-2725FD-C-060
FWM-2725FBD-C-060
FA-2725SL-C-060

- A drip-proof cap is fitted on the unit on delivery.
- Liquid-proof caps are not sold separately.
- Ensure that the cap is facing upward. If the cap is facing sideways or downward, it cannot provide an effective means for liquid proofing.
- F□□-2725F□□-C-060
  - · Model indication A or WM is inserted in  $\square$  of F $\square$ .
- · Model indication B, D or BD is inserted in  $\square$  of  $M\square\square$ .

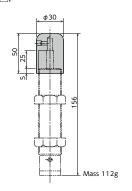

#### Holder with a switch OP-030FB-[

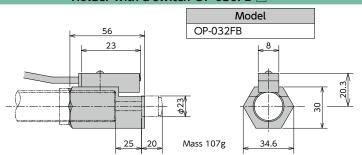



- Although a holder with a switch can be ordered on its own, we strongly recommend ordering one with the main unit. Please include the main unit's model number when placing an order.
- For switch specifications and precautions for use, please refer to page 23.

Applicable Models	Model		
FA-2725FB			
FA-2725FD	M27 put		
FWM-2725FBD	M27 nut		
FA-2725SL			
FA-2725FB P3.0			
FA-2725FD P3.0	M27-P3 nut		
FWM-2725FBD P3.0	1V127-F3 HUL		
FA-2725SL P3.0			

## FA-3035TD/FWM-3035TBD/FA-3035SL Series



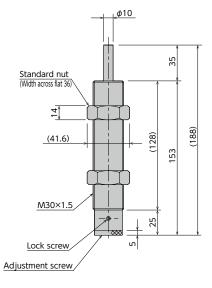

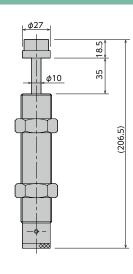

## **Specifications**

Model	Stroke mm	Max. absorption energy J (kgf·m)	osorption energy J (kgf·m) Max. equivalent mass kg (kgf) Range of impact rate m/s		Orifice type
FA-3035TD-S			700 (700)	0.7~3	Multiple-orifice type
FA-3035TD-C			700(700)	0.7**3	Multiple-office type
FWM-3035TBD-S	35	196(20)	1,300(1,300)	0.3~2	Multiple-varying orifice type
FWM-3035TBD-C	33	196(20)	1,300(1,300)	0.5 -2	i wullipie-varying office type
FA-3035SL-S			20,000(20,000)	0.05~0.5	Multiple varying orifice type
FA-3035SL-C			30,000 (30,000)	0.05~0.5	Multiple-varying orifice type

Note) To place an order without a cap, put -S at the end of the model number, and to place an order with a cap, put -C at the end of the model number.

## **Common Specifications**

Max. drag	N(kgf)	16,660 (1,700)	Operating temperature	$^{\circ}$	-5~70
Max. cycle rate	cycle/min	30	Mass: S type	g	710
Max. absorption energy per minute	J/min(kgf·m/min)	1,176(120)	: C type	g	760
Recovering power of the piston re	od N(kgf)	60(6.1) or lower			

Note: The maximum operation cycle of FA-3035SL is 15 (cycle/min).

## Selection Guideline FA-3035 series has the following three patterns of absorption characteristics depending on the orifice type. Please use the following information as a guideline when making your selection.

Orifice type	Multiple-orifice type	Multiple-varying orifice type
Model number	FA-1210MD series	FWM-1210MBD series
Application	For high-speed	For medium speed, in particular with a pneumatic cylinder
Absorption characteristics	Resistance	Resistance

## **Precautions for Use**

- \* Do not use this product without carefully reading the attached owner's manual.
- \* Ensure that an external stopper (Stopper nut OP-020TB) is also used.
- \* Do not turn the oil inlet screw located at the bottom of the main unit.
- \* Ensure that sufficient mounting strength is secured for this product. (As a guideline, it should be 2 to 3 times the maximum drag listed in the catalogue.)
- \* Do not use this product in a vacuum or a location where it may come in contact with oil.
- \* Ensure that an eccentric load is not applied to the soft absorber (Allowable eccentric angle: within  $\pm 2.5^{\circ}$ )

## **Adjustment Method**

To adjust, turn the adjustment knob located at the bottom of the main unit.

- \* Because the adjustment can be done in an analog manner, a value between two integers on the indicator can be set.
- \* Once the adjustment is complete, secure with a lock screw using a hex wrench.


•Products specification might be changed without notice.

## **Optional Parts**

#### **Eccentric angle adaptor OP-010TB**

#### Model OP-010TB

- Screw the eccentric angle adaptor into the main unit until the cap for the eccentric angle and the piston rod form a tight connection. While maintaining this position, fasten the main unit's nut until secured.
- Use the eccentric angle adaptor when the eccentric angle is 2.5° or larger.
- The main unit can also be used as a stopper.
- Use it with a capless soft absorber.
- The maximum operating eccentric angle with an eccentric angle adaptor is ±10°.
- The caps and the guides for inclined use are not unbundled.

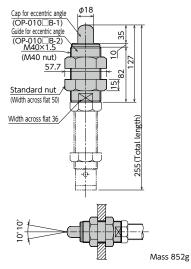


Note) Material of cap for eccentric angle: Metal

#### Square flange OP-040TB

Model	
OP-040TB	


• Once the attachment site is determined, uset he main unit's nut to securely fasten in place.

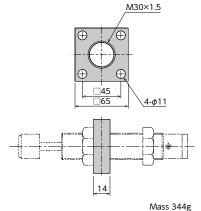

Stopper nut OP-020TB- □

Model		
OP-020TB-S		
OP-020TB-C		

• Adjust so that it stops 1mm before thestroke end, and fasten with the main unit's nut until secured.

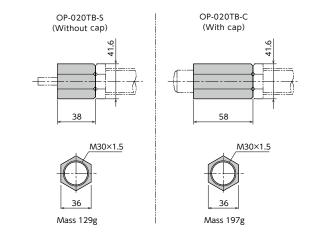


Note) When attaching, make sure that the side without a bearing chamfer is the impact surface.

#### Liquid-proof cap F 🗆 -3035T 🗀 -C-060

Model		
FA-3035TD-C-060		
FWM-3035TBD-C-060		

- Supplied in assembly
- Ideal for use in environments where oil splatter poses a problem.
- Ensure that the cap is facing upward. If the cap is facing sideways or downward, it cannot provide an effective means for liquid proofing.
- F□□ -3035T□□ -C-060
- · Model indication A or WM is inserted in  $\square$  of  $F\square\square$ .
- · Model indication D or BD is inserted in  $\square$  of T $\square\square$ .

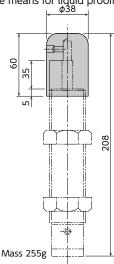


Note) Liquid-proof caps are not sold separately

Applicable Models	Model
FA-3035TD	
FWM-3035TBD	M30 nut
FA-3035SL	

# FA-3625A/FA-3650A/FA-3625SL/FA-3650SL Series



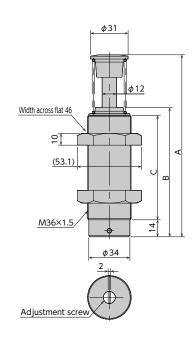

### **Dimensions**

Model	Α	В	С
FA-3625A1/A3/SL-C	150	106.5	86
FA-3650A2/A3/SL-C	217	148.5	128

# **Specifications**

Model	Stroke mm	Max. absorption energy J(kgf·m)	Max. equivalent mass kg(kgf)	Rarge of impact rate m/s	Max. drag N(kgf)	Max.cycle rate cycle/min	Absorption energy per minute J/min (kgf·m/min)	nower of the	Operating temperature °C	Mass g
FA-3625A1-C			2,000 (2,000)	0.3~1.0		30		100/100)		
FA-3625A3-C	25	200 (20.4)	700 (700)	0.7~3.0		30	1,500(153)	100 (10.2) or lower		780
FA-3625SL-C			62,500 (62,500)	0.05~0.5	25,000	15		OI TOWER	-5~70	
FA-3650A2-C			2,700 (2,700)	0.3~2.0	(2,551)	30		100(100)	-5~/0	
FA-3650A3-C	50	400 (40.8)	1,400 (1,400)	0.7~3.0		30	2,352(240)	120 (12.2) or lower		980
FA-3650SL-C			124,800 (124,800)	0.05~0.5		15		OI LOWEI		

## **Precautions for Use**

- \* Do not use this product without carefully reading the attached owner's manual.
- \* Ensure that an external stopper (Stopper nut OP-020M36) is also used.
- \* Do not turn the oil inlet screw located at the bottom of the main unit.
- \* Ensure that sufficient mounting strength is secured for this product. (As a guideline, it should be 2 to 3 times the maximum drag listed in the catalogue.)
- \* Do not use this product in a vacuum or a location where it may come in contact with oil.
- \* Ensure that an eccentric load is not applied to the soft absorber (Allowable eccentric angle: within  $\pm 2.5^\circ$ )

## **Adjustment Method**

- \* To adjust, turn the adjustment knob with a slotted screw driver.
- \* Because the adjustment can be done in an analog manner, a value between two integers on the indicator can be set.
- \* It does not have a lock screw for locking the adjusted setting.

#### **RoHS Compliant**


•Products specification might be changed without notice.

# **Optional Parts**

#### Inclination angle Adapter OP-010-M3625/M3650

Model	
OP-010-M3625	
OP-010-M3650	

- Screw an inclination angle adapter in the main unit until the backlash between the inclination angle cap and the piston rod is eliminated, and securely tighten the nut for the main unit at that position.
- For an inclination angle 2.5°≤
- The inclination angle guide can be used as a stopper as well
- The soft absorber cannot be used with an optional urethane cap on.
- The maximum inclination angle for use with inclination angle adapter is
- The caps and the guides f unbundled.

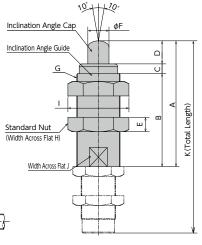


s ± 10°	(Width Across Flat H)	
for inclined use are not		
	Width Across Flat J	
	}_	<u>.</u>
	·	

Model	Α	В	С	D	φF	E	K	G	Н	I	J	Mass g
OP-010-M3625	131	107	10	24	22	15	200	1115×1 F	55	62 E	41	880
OP-010-M3650	201	152	10	29	22	15	312	M45×1.5	55	63.5	41	1,270

#### Stopper nut OP-020M36

# OP-020M36

 Adjust so that it stops 1mm before thestroke end, and fasten with the main unit's nut until secured.

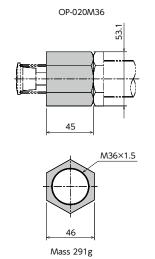


Note) When attaching, make sure that the side without a bearing chamfer is the impact surface.


#### Square flange OP-040UB

Model	
OP-040UB	

• Once the attachment site is determined, uset he main unit's nut to securely fasten in place.

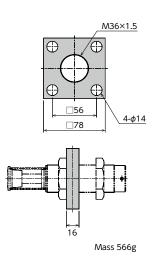

### Urethane cap OP-090M36B

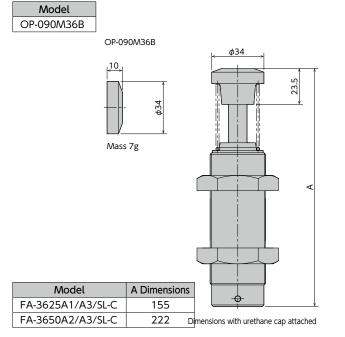



Standard nuts are sold separately as well.

Applicable Models	Model
FA-3625A	
FA-3625SL	M36A nut
FA-3650A	MS6A Hut
FA-3650SL	

### FA-3650UD/FWM-3650UBD Series



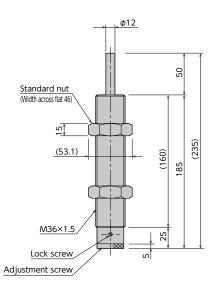

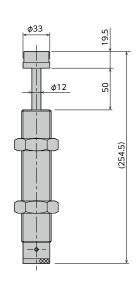

# **Specifications**

Model	Stroke mm	Max. absorption energy J (kgf·m)	Max. equivalent mass kg (kgf)	Range of impact rate m/s	Orifice type
FA-3650UD-S			1.400(1.400)	0.7~3	Single-orifice type
FA-3650UD-C	50	392(40)	1,400(1,400)	0.7.03	Single-office type
FWM-3650UBD-S	50	392(40)	2.700(2.700)	0.3~2	Multiple verying exifice type
FWM-3650UBD-C			2,700 (2,700)	0.3~2	Multiple-varying orifice type

Note) To place an order without a cap, put -S at the end of the model number, and to place an order with a cap, put -C at the end of the model number.

## **Common Specifications**

Max. drag	N(kgf)	23,520( 2,400)	Operating temperature	$^{\circ}$	-5~70
Max. cycle rate	cycle/min	30	Mass: S type	g	1,330
Max. absorption energy per minute	J/min(kgf·m/min)	2,352(240)	: C type	g	1,410
Recovering power of the piston ro	od N(kgf)	68.6 (7.0) or lower			

### Selection Guideline FA-3650 series has the following three patterns of absorption characteristics depending on the orifice type. Please use the following information as a guideline when making your selection.

Orifice type	Multiple-orifice type	Multiple-varying orifice type
Model number	FA-3650UD series	FWM-3650UBD series
Application	For high-speed	For medium speed, in particular with a pneumatic cylinder
Absorption characteristics	Resistance	Resistance

### **Precautions for Use**

- \* Do not use this product without carefully reading the attached owner's manual.
- \* Ensure that an external stopper (Stopper nut OP-020UB) is also used.
- \* Do not turn the oil inlet screw located at the bottom of the main unit.
- \* Ensure that sufficient mounting strength is secured for this product. (As a guideline, it should be 2 to 3 times the maximum drag listed in the catalogue.)
- \* Do not use this product in a vacuum or a location where it may come in contact with oil.
- \* Ensure that an eccentric load is not applied to the soft absorber (Allowable eccentric angle: within  $\pm 2.5^{\circ}$ )

## Adjustment Method

To adjust, turn the adjustment knob located at the bottom of the main unit.

- \* Because the adjustment can be done in an analog manner, a value between two integers on the indicator can be set.
- \* Once the adjustment is complete, secure with a lock screw using a hex wrench.

#### **RoHS Compliant**


•Products specification might be changed without notice.


# **Optional Parts**

#### **Eccentric angle adaptor OP-010UB**

#### Model OP-010UB

- Screw the eccentric angle adaptor into the main unit until the cap for the eccentric angle and the piston rod form a tight connection. While maintaining this position, fasten the main unit's nut until secured.
- Use the eccentric angle adaptor when the eccentric angle is 2.5° or larger.
- The main unit can also be used as a stopper.
- Use it with a capless soft absorber.
- The maximum operating eccentric angle with an eccentric angle adaptor is ±10°.
- The caps and the guides for inclined use are not unbundled.

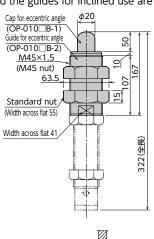

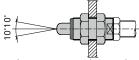


Note) Material of cap for eccentric angle: Metal

Mass 1,273g

# Stopper nut OP-020UB- □

Model
OP-020UB-S
OP-020UB-C

• Adjust so that it stops 1mm before thestroke end, and fasten with the main unit's nut until secured.

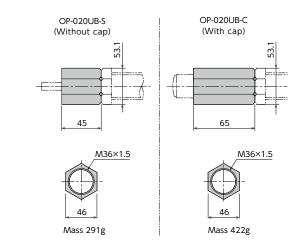


Note) When attaching, make sure that the side without a bearing chamfer is the impact surface.

### Square flange OP-040UB

### Model OP-040UB

• Once the attachment site is determined, uset he main unit's nut to securely fasten in place.

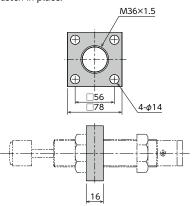

Mass 566g

#### Standard nuts are sold separately as well.

Applicable Models	Model		
FA-3650UD	M36 nut		
FWM-3650UBD	MS6 Hut		


#### **RoHS Compliant**

•Products specification might be changed without notice.


# **Optional Parts**

#### Nut OP-M42

Model OP-M42

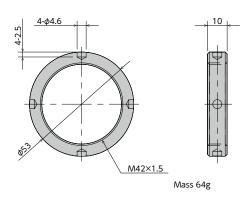


#### Square flange OP-040 M42SF

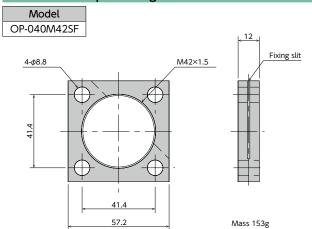

#### Stopper nut OP-020 M42


#### Model OP-020M42

• Once the attachment site is determined, uset he main unit's nut to securely fasten in place.

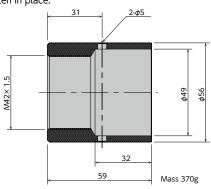


### Rectangle flange OP-040 M42RF

Model OP-040M42RF

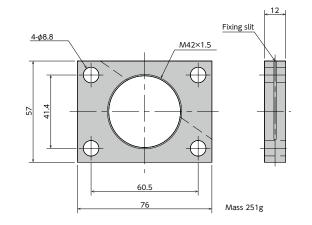

#### Urethane cap OP-090 M42A


#### Model OP-090M42A

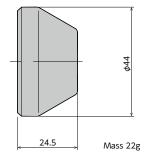

#### Side mount OP-M42SM

 $\ensuremath{^*}$  Side mount is sold as a set of two. Model

\* Recommended bolt: M8 X 50 hexagon socket head bolt

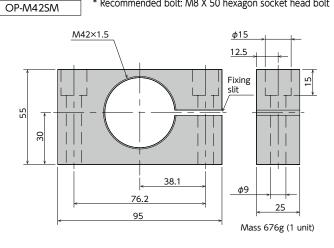

Fixed Type | Adjustable type | Self-adjusting

## FA-4225B/FA-4225SL/FA-4250B/FA-4250SL Series

RoHS Compliant


Products specification might be changed without notice.

# **Optional Parts**

#### Eccentric angle adaptor OP-010M4225/M4250

Model
OP-010M4225
OP-010M4250

- Screw the eccentric angle adaptor into the main unit until the cap for the eccentric angle and the piston rod form a tight connection.
   While maintaining this position, fasten the main unit's nut until secured.
- Use the eccentric angle adaptor when the eccentric angle is 2.5° or larger.
- The main unit can also be used as a stopper.
- Use it with a capless soft absorber.
- lacktriangle The maximum operating eccentric angle with an eccentric angle adaptor is  $\pm 10^\circ$ .
- Nut for unit is not inclusive.
- Not usable for FA-4250YD-C, FWM-4250YBD-C.
- The caps and the guides for inclined use are not unbundled.

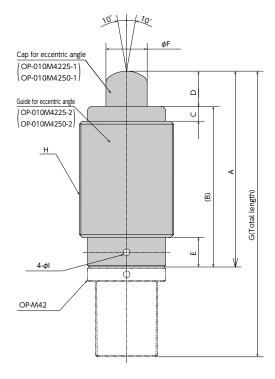


Model	Α	В	С	D	Е	φF	G	Н	φl	Weight g
OP-010M4225	133	109	10	24	20	28	194	M64×2	4.6	1,600
OP-010M4250	203	154	10	49	20	20	290	10104^2	4.0	2,500

#### Nut OP-M64


Model
OP-M64

• Usable as the nut for eccentric angle adaptor

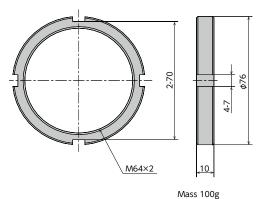

## FA-4225B/FA-4250B/FA-4225SL/FA-4250SL/FA-4275B Series



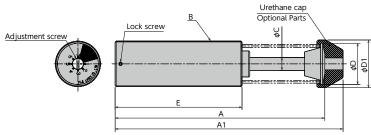

\*The absorber's main unit does not come with nuts.

### **Dimensions**

Model	Α	A1	В	С	D	D1	Е
FA-4225B3/SL-C	144	162					92
FA-4250B3/SL-C	195	213	M42×1.5	12	38	44	118
FA-4275B3-C	246	264					143

## **Specifications**

Model	Stroke mm	Max. absorption energy J(kgf·m)	Max. equivalent mass kg(kgf)	Rarge of impact rate m/s	Max. drag N(kgf)	Max.cycle rate cycle/min	Absorption energy per minute  J/min (kgf·m/min)	ecovering power of the piston rod N(kgf)	Operating temperature °C	Mass g
FA-4225B3-C	25	260(26.5)	3,400 (3,400)	0.3~3.0		20	1,858(190)			795
FA-4225SL-C	25	200 (20.5)	81,400 (81,400)	0.05~0.5	24 500	10				795
FA-4250B3-C	50	520(53.1)	6,500(6,500) 0.3~3.0	31,590 (3,223)	10	2.372(242)	120(12.2)	-5~70	1.020	
FA-4250SL-C	50	520(55.1)	162,700 (162,700)	0.05~0.5	(3,223)	5	2,372(242)			1,020
FA-4275B3-C	75	780 (79.6)	9,700 (9,700)	0.3~3.0		6	3,345 (341)			1,240

## **Precautions for Use**

- \* Do not use this product without carefully reading the attached owner's manual.
- \* Ensure that an external stopper (Stopper nut OP-020M42) is also used.
- \* Do not turn the oil inlet screw located at the bottom of the main unit.
- \* Ensure that sufficient mounting strength is secured for this product. (As a guideline, it should be 2 to 3 times the maximum drag listed in the catalogue.)
- ${}^{*}$  Do not use this product in a vacuum or a location where it may come in contact with oil.
- \* Ensure that an eccentric load is not applied to the soft absorber (Allowable eccentric angle: within  $\pm 2.5^{\circ}$ )
- \* The urethane caps are consumables. Please replace them when necessary.

# **Adjustment Method**

- \* To adjust, turn the adjustment knob located at the bottom of the main unit.
- \* Because the adjustment can be done in an analog manner, a value between two integers on the indicator can be set.
- \* Once the adjustment is complete, secure with a lock screw using the attached hex wrench.


### FA-4250YD/FWM-4250YBD Series

**RoHS Compliant** 

Adjustable type | Self-adjusting

lacktriangle Products specification might be changed without notice.  $\phi$ 38.



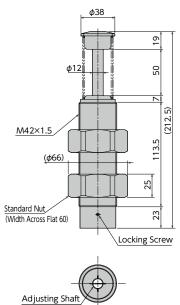

## **Specifications**

Model	Stroke mm	Max. absorption energy J (kgf·m)	Max. equivalent mass kg(kgf)	Range of impact rate m/s	Orifice type
FA-4250YD-C	50	441(45)	390 (390)	0.7~3	Multiple-orifice type
FWM-4250YBD-C	50	441(45)	3,500 (3,500)	0.3~2	Multiple-varying orifice type

# **Common Specifications**

Max. drag	N(kgf)	27,030 (2,758)	Operating temperature	$^{\circ}$	-5~70
Max. cycle rate	cycle/min	10	Mass : C type	g	1,940
Max. absorption energy per minute	2,744(280)				
Recovering power of the piston re	od N(kgf)	83.3(8.5) or lower			

### Selection Guideline FA-4250 series has the following three patterns of absorption characteristics depending on the orifice type. Please use the following information as a guideline when making your selection.

Orifice type	Multiple-orifice type	Multiple-varying orifice type
Model number	FA-2725FD series	FWM-2725FBD series
Application	For high-speed	For medium speed, in particular with a pneumatic cylinder
Absorption characteristics	Resistance	Resistance

# **Precautions for Use**

- \* Do not use this product without carefully reading the attached owner's manual.
- \* We recommend that you use it with an external stopper.
- \* Ensure that sufficient mounting strength is secured for this product. (As a guideline, it should be 2 to 3 times the maximum drag listed in the catalogue.)
- \* Do not use this product in a vacuum or a location where it may come in contact with oil.
- \* Ensure that an eccentric load is not applied to the soft absorber. (Allowable eccentric angle:  $\pm 2.5^{\circ}$ )

# **Adjustment Method**


- \* To adjust, turn the adjustment knob with a slotted screw driver.
- \* Because the adjustment can be done in an analog manner, a value between two integers on the indicator can be set.
- \* It does not have a lock screw for locking the adjusted setting.

#### Standard nuts are sold separately as well.

Applicable Models	Model
FA-4250YD	M42 nut
FWM-4250YBD	IVI42 Hut

### FA-6450/FA64100/FA64150 Series



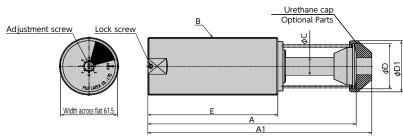

\* The absorber's main unit does not come with nuts.

### **Dimensions**

Model	Α	A1	В	С	D	D1	Е
FA-6450□-C	226	243			E0.2		141
FA-64100□-C	328	345	M64×2	20	50.2	57	191
FA-64150□-C	456	473			60		241

<sup>\*</sup> A1 and D1 are dimensions with the optional urethane cap attached. (Urethane cap type: OP-090M64A)

# **Specifications**

Model	Stroke mm	Max. absorption energy J(kgf·m)	equivalent mass	Rarge of impact rate m/s	Max. drag N(kgf)	Max.cycle rate cycle/min	Absorption energy per minute J/min (kgf·m/min)	nower of the	Operating temperature	Mass g	Allowable eccentric angle
FA-6450Z-C		0.000	10,000~110,000(10,000~110,000)	0.02~0.3		3	464600	450			
FA-6450L-C	50	2,300 (234.7)	1,000~11,000(1,000~11,000)	0.3~1.0		15	164,608 (16,797)	150 (15.3)		2.5	±2.5
FA-6450H-C		(254.7)	200~1,800(200~1,800)	0.3~3.6		15	(10,7 57)	(13.3)			
FA-64100L-C	100	4,550	2,000~38,000(2,000~38,000)	0.3~1.0	90,000 (9,184)	10	214,118	180	<b>−</b> 5∼70	3.2	
FA-64100H-C	100	(464.3)	250~2,500(250~2,500)	0.3~3.6	(3,104)	10	(21,849)	(18.4)		3.2	±1.0
FA-64150L-C	150	6,800	4,000~52,000(4,000~52,000)	0.3~1.0		8	275,556	370		4.2	1.0
FA-64150H-C	130	(693.9)	300~5,500(300~5,500)	0.3~3.6		8	(28,118)	(37.8)		4.2	

### **Precautions for Use**

- $\ensuremath{^{*}}$  Do not use this product without carefully reading the attached owner's manual.
- \* We recommend that you use it with an external stopper(Stopper nut OP-020M64).
- \* Ensure that sufficient mounting strength is secured for this product. (As a guideline, it should be 2 to 3 times the maximum drag listed in the catalogue.)
- \* Do not use this product in a vacuum or a location where it may come in contact with oil.
- \* Ensure that an eccentric load is not applied to the soft absorber.
- \* The urethane caps are consumables. Please replace them when necessary. (Allowable eccentric angle: within  $\pm 2.5^\circ$ )

# **Adjustment Method**

- \* To adjust, turn the adjustment knob located at the bottom of the main unit.
- \* Because the adjustment can be done in an analog manner, a value between two integers on the indicator can be set.
- \* Once the adjustment is complete, secure with a lock screw using a hex wrench.


#### **RoHS Compliant**

●Products specification might be changed without notice.

# **Optional Parts**

#### Nut OP-M64


Model OP-M64

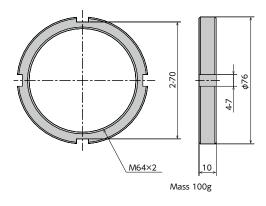

#### Square flange OP-040 M64SF

Model


OP-040M64SF

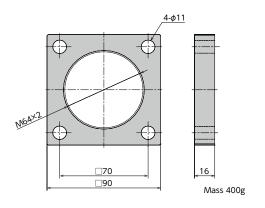

#### Stopper nut S OP-020 M64S

Model OP-020M64S


• Adjust so that it stops 1mm before thestroke end, and fasten with the main unit's nut until secured.

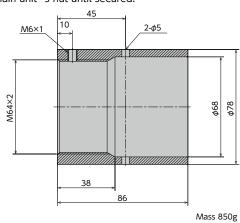

#### Stopper nut L OP-020 M64L \* Exclusive for FA (FK) -64150


Model OP-020M64L

• Adjust so that it stops 1mm before thestroke end, and fasten with the main unit's nut until secured.

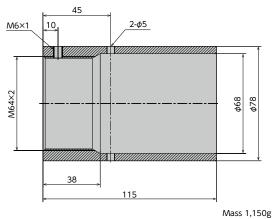


#### Urethane cap OP-090 M64A

Model OP-090M64A

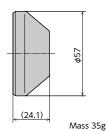

### FA/FWM-B Series

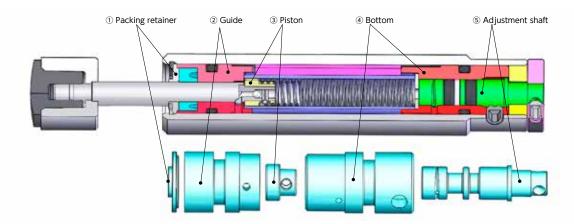

In many production lines of lithium ion batteries, use of the copper-containing materials is unacceptable, so Fuji Latex has developed the product that can be used under such condition.

### **Product Features**

- The product is not made from copper-containing materials at all and can be used in an environment where copper ion is unacceptable.
- Models of M8 to M27 in external diameter with the FA/FWM adjusting function are available.
- It is very easy to replace the product because the external diameter of the product is the same as that of the standard specifications.

### About Model

Please add "B" to the model of the standard specifications.

Example: FWM-B1008VBD-S (Model of the standard specification: FWM-1008VBD-S)

[List of materials of main parts changed \* When FA-2016 is changed to FA-B2016] (): surface treatment

	Standard product FA-2016
① Packing retainer	Brass (*1)
② Guide	Phosphor bronze(*1)
③ Piston	Brass(*1)
4 Bottom	Brass (*1)
⑤ Adjustment shaft	Brass (*1)



Copper-free absorber FA-B2016
Free-cutting steel (electroless nickel plating)
Free-cutting steel (blackening)
Cast iron (*1)
Free-cutting steel (blackening)
Free-cutting steel (electroless nickel plating)

## Dimensions and Specifications

\* The dimensions and specifications are similar to those of the standard products of the FA/FWM series.

### **Precautions for Use**

\* If you use the optional part, please contact our sales department.

<sup>\*1</sup> Without surface treatment

**RoHS Compliant** 

•Products specification might be changed without notice.

# **Specifications**

Model	Stroke mm	Max. absorption energy J (kgf·m)	Max. equivalent mass kg (kgf)	Range of impact rate m/s	Orifice type	Specification Page
FA-B0806-□	6	1.4	15	0.3~2	Single-orifice type	46
FA-B1008VB-□		1.47	10	0.3~1	Single-orifice type	48
FA-B1008VD-□	8	1.76	2.5	0.7~3	Multiple-orifice type	48
FWM-B1008VBD-□		1.76	10	0.3~2	Multiple-varying orifice type	48
FA-B1210MB-□		2.94	30	0.3~1	Single-orifice type	50
FA-B1210MD-□	10	4.9	4	0.7~3	Multiple-orifice type	50
FWM-B1210MBD-□		4.9	30	0.3~2	Multiple-varying orifice type	50
FA-B1410RB-□		3.92	30	0.3~1	Single-orifice type	52
FA-B1410RD-□	10	5.88	4.5	0.7~3	Multiple-orifice type	52
FWM-B1410RBD-□		5.00	35	0.3~2	Multiple-varying orifice type	52
FA-B1612XB-□			50	0.3~1	Single-orifice type	54
FA-B1612XD-□	12	9.8	10	0.7~3	Multiple-orifice typee	54
FWM-B1612XBD-□			50	0.3~2	Multiple-varying orifice type	54
FA-B2016EB-□			300	0.3~1	Single-orifice type	58
FA-B2016ED-□	16	29.4	120	0.7~3	Multiple-orifice type	58
FWM-B2016EBD-□			200	0.3~2	Multiple-varying orifice type	58
FA-B2530GB-□			400	0.3~1	Single-orifice type	62
FA-B2530GD-□	30	49	150	0.7~3	Multiple-orifice type	62
FWM-B2530GBD-□			300	0.3~2	Multiple-varying orifice type	62
FA-B2540LB-C			500	0.3~1	Single-orifice type	64
FA-B2540LD-C	40	63.7	200	0.7~3	Multiple-orifice type	64
FWM-B2540LBD-C			350	0.3~2	Multiple-varying orifice type	64
FA-B2725FB-□			650	0.3~1	Single-orifice type	68
FA-B2725FD-□	25	79.3	300	0.7~3	Multiple-orifice type	68
FWM-B2725FBD-□			450	0.3~2	Multiple-varying orifice type	68

Note 1) S (without tip cap) or C (with tip cap) is inserted in \*.

Note 2) For the specifications and external dimensions, please see the pages of detailed specifications.


Single-orifice Multiple-orifice
Fixed Type Adjustable type Self-adjusting

FA-E series (Anti water-soluble coolant specification)

**RoHS Compliant** 

• Products specification might be changed without notice.



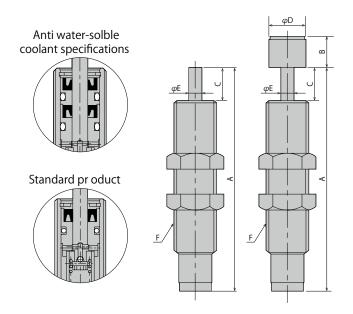

### Dimensions

Model	А	В	С	D	E	F	Mass g	Specification Page
FA-E0806-S	59		6		2.5	M8×0.75	14	46
FA-E0806-C	39	5	O	6	2.5	1010/0.75	14	46
FA-E1008V□-S	73.2		8		2.4	M10×1	31	48
FA-E1008V□-C	75.2	6.3	0	6	2.4	MITUAT	32	48
FA-E1210M□-S	82.6		10		3.5	M12×1	48	50
FA-E1210M□-C	02.0	8	10	8	3.3	IVIIZAI	51	50
FA-E1410R□-S	98.2		10		4	M14×1.5	84	52
FA-E1410R□-C	90.2	10	10	10	7	W11471.5	87	52
FA-E1612X□-S	107.7		12		5	M16×1.5	111	54
FA-E1612X□-C	107.7	15	12	13.5	3	3   WITO \ 1.3	120	54
FA-E2016E□-S	120		16		6	M20×1.5	195	58
FA-E2016E□-C	120	17	10	18	0	WIZU ~ 1.5	218	58
FA-E2530G□-S	168		30		8	M2E×1 E	441	62
FA-E2530G□-C	108	18	50	22	6	M25×1.5	471	62
FA-E2725F□-S	148.2		25		8	M27×1.5	455	68
FA-E2725F□-C	140.2	20	23	23	0	1012/ \ 1.3	504	68

Note) B or D is inserted in the  $\square$  . Insert B for a single-orifice type, and insert D for a multiple-orifice type.

### Specifications

\* The specification is identical with the standard models for ea

ch type

- \* Lifecycles will be dependant upon the types and amount of anti-coolant liquids used. We strongly recommend you to conduct tests in advance to ensure that the product meets your application requirements.
- \* When the piston rod is not pressed all the way down to the stroke end during operation, stop use and exchange the product for the product life. If the product is used continuously, damage of the product may be caused.
- \* This product has a unique packing structure. Because of this, using this product in places where the piston rod remains dry may cause the inside oil to leak early on in its product life.
- \* If you use the optional parts, please contact our sales department.


#### FWM-E series (Anti water-soluble coolant specification)

RoHS Compliant

Products specification might be changed without notice.



Soft Absorber

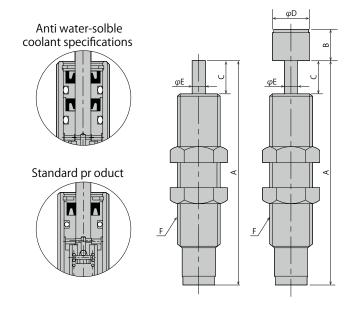

### **Dimensions**

Model	А	В	С	D	E	F	Mass g	Specification Page
FWM-E1008VBD-S	73.2		8		2.4	M10×1	31	48
FWM-E1008VBD-C	73.2	6.3	0	6	2.4	MITUXI	32	48
FWM-E1210MBD-S	82.6		10		3.5	M12×1	48	50
FWM-E1210MBD-C	02.0	8	10	8	5.5	IVITZAT	51	50
FWM-E1410RBD-S	98.2		10		4	M14×1.5	84	52
FWM-E1410RBD-C	90.2	10	10	10	4	W114^1.5	87	52
FWM-E1612XBD-S	107.7		12		5	M16×1.5	111	54
FWM-E1612XBD-C	107.7	15	12	13.5	J	WITOX1.5	120	54
FWM-E2016EBD-S	120		16		6	M20×1.5	195	58
FWM-E2016EBD-C	120	17	10	18	U	10120 ~ 1.5	218	58
FWM-E2530GBD-S	168		30		8	M25×1.5	441	62
FWM-E2530GBD-C	100	18	30	22	O	IVIZJA 1.3	471	62
FWM-E2725FBD-S	148.2		25		8	M27×1.5	455	68
FWM-E2725FBD-C	140.2	20	23	23	O	IVIZ/A1.5	504	68

## Specifications

\* The specification is identical with the standard models for ea

ch type

- \* Lifecycles will be dependant upon the types and amount of anti-coolant liquids used. We strongly recommend you to conduct tests in advance to ensure that the product meets your application requirements.
- \* When the piston rod is not pressed all the way down to the stroke end during operation, stop use and exchange the product for the product life. If the product is used continuously, damage of the product may be caused.
- \* This product has a unique packing structure. Because of this, using this product in places where the piston rod remains dry may cause the inside oil to leak early on in its product life.
- \* If you use the optional parts, please contact our sales department.

Single-orifice Multiple-orifice


Fixed Type Adjustable type Self-adjusting

FA-L series (Anti water-soluble coolant specification)

**RoHS Compliant** 

Products specification might be changed without notice.



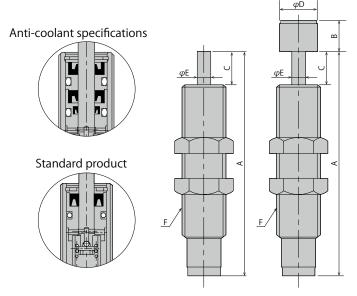

### **Dimensions**

Model	А	В	С	D	E	F	Mass g	Specification Page
FA-L1008V□-S	73.2		8		2.4	M10×1	31	48
FA-L1008V□-C	/3.2	6.3	8	6	2.4	IVITUXT	32	48
FA-L1210M□-S	82.6					M12×1	48	50
FA-L1210M□-C	02.0	8	10	8	3.5	IVITZAT	51	50
FA-L1410R□-S	87		10		5.5	M14×1.5	71	52
FA-L1410R□-C	0/	8		10		WITANIS	76	52
FA-L1612X□-S	107.7		12		5	M16×1.5	111	54
FA-L1612X□-C	107.7	15	12	13.5	5	C.1 \ 011M	120	54
FA-L2016E□-S	120		16		6	M20×1.5	197	58
FA-L2016E□-C	120	17	10	18	O	10120 ~ 1.3	219	58
FA-L2530G□-S	155		20			M25×1.5	396	62
FA-L2530G□-C	133	18	30	22	8	IVIZ3^1.3	426	62
FA-L2725F□-S	142.2		25		O	M27×1.5	429	68
FA-L2725F□-C	142.2	20	23	23		IVIZ/A1.3	478	68

Note) B or D is inserted in the  $\square$ . Insert B for a single-orifice type, and insert D for a multiple-orifice type.

## Specifications

\* The specification is identical with the standard models for ea

ch type

- \* Lifecycles will be dependant upon the types and amount of anti-coolant liquids used. We strongly recommend you to conduct tests in advance to ensure that the product meets your application requirements.
- \* When the piston rod is not pressed all the way down to the stroke end during operation, stop use and exchange the product for the product life. If the product is used continuously, damage of the product may be caused.
- \* This product has a unique packing structure. Because of this, using this product in places where the piston rod remains dry may cause the inside oil to leak early on in its product life.
- \* If you use the optional parts, please contact our sales department.

#### Fixed Type

Adjustable type

elf-adjusting


### FWM-L (Anti water soluble coolant specification)

RoHS Compliant

Products specification might be changed without notice.



Soft Absorber

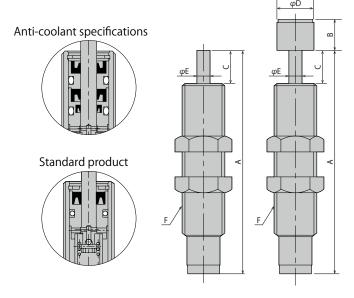

### Dimensions

Model	А	В	С	D	E	F	Mass g	Specification Page
FWM-L1008VBD-S	73.2		8		2.4	M10×1	31	48
FWM-L1008VBD-C	73.2	6.3	0	6	6	MIOXI	32	48
FWM-L1210MBD-S	82.6					M12×1	48	50
FWM-L1210MBD-C	82.0	8	10	8	3.5	MIIZXI	51	50
FWM-L1410RBD-S	87		10		3.3	M14×1.5	71	52
FWM-L1410RBD-C	0/	8		10		WI4XI.5	76	52
FWM-L1612XBD-S	107.7		12		5	M16×1.5	111	54
FWM-L1612XBD-C	107.7	15	12	13.5	3	WITOX1.5	120	54
FWM-L2016EBD-S	120		16		6	M20×1.5	197	58
FWM-L2016EBD-C	120	17	10	18	0	IVI2U × 1.5	219	58
FWM-L2530GBD-S	155		30			M25×1.5	396	62
FWM-L2530GBD-C	100	18	50	22	8	IVIZ3×1.5	426	62
FWM-L2725FBD-S	142.2		25		0	M27×1.5	429	68
FWM-L2725FBD-C	142.2	20	25	23		IVIZ/X1.5	478	68

## Specifications

\* The specification is identical with the standard models for ea

ch type

- \* Lifecycles will be dependent upon the types and amount of anti-coolant liquids used. We strongly recommend you to conduct tests in advance to ensure that the product meets your application requirements.
- \* When the piston rod is not pressed all the way down to the stroke end during operation, stop use and exchange the product for the product life. If the product is used continuously, damage of the product may be caused.
- \* This product has a unique packing structure. Because of this, using this product in places where the piston rod remains dry may cause the inside oil to leak early on in its product life.
- \* If you use the optional parts, please contact our sales department.


Single-orifice Multiple-orifice
Fixed Type Adjustable type Self-adjusting

# **FA-S Series (Dust Seal Specifications)**

**RoHS Compliant** 

•Products specification might be changed without notice.



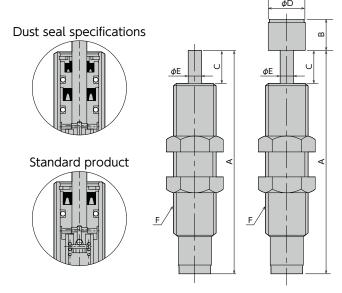

# **Dimensions**

Model	Α	В	С	D	E	F	Mass g	Specification Page
FA-S1210M□-S	76					M12×1	41	50
FA-S1210M□-C	/6	8	10	8	3.5	7011271	44	50
FA-S1410R□-S	80		10		3.5	AA1.4×1. F	63	52
FA-S1410R□-C	00	8		10		M14×1.5	68	52
FA-S1612X□-S	102		12		5	M16×1.5	105	54
FA-S1612X□-C	102	15	12	13.5	5	M16×1.5	114	54
FA-S2016E□-S	120		16		6	M20×1.5	196	58
FA-S2016E□-C	120	17	16	18	6	/VIZUX1.5	218	58
FA-S2530G□-S	155		30				396	62
FA-S2530G□-C	155	18	30	22		M25×1.5	427	62
FA-S2540L□-C	171.5	29	40	22.5	8		475	66
FA-S2725F□-S	136		25			M27×1.5	402	68
FA-S2725F□-C	130	20	25	24		W12/×1.5	451	68
FA-S3035TD-S	188		35		10	M30×1.5	708	70
FA-S3035TD-C	100	18.5	35	27	10	10130×1.5	755	70
FA-S3650UD-S	225		FO		10	M26×1 F	1330	74
FA-S3650UD-C	235	19.5	50	33	12	M36×1.5	1410	74

Note) B or D is inserted in the  $\square$ . Insert B for a single-orifice type, and insert D for a multiple-orifice type.

# **Specifications**

\* The specification is identical with the standard models for each type

- \* Do not use this product in places where it may come in contact with oil as it does not have a liquid-proof structure.
- \* Please contact our sales department when the use of optional parts is planned.
- \* Although the dimensions are identical to those of the FA series standard products (adjustable), the FA-S2016 series has a longer overall length (dimension A).


Multiple-varying orifice
Fixed Type Adjustable type Self-adjusting

# FWM-S Series (Dust Seal Specifications)

**RoHS Compliant** 

Products specification might be changed without notice.



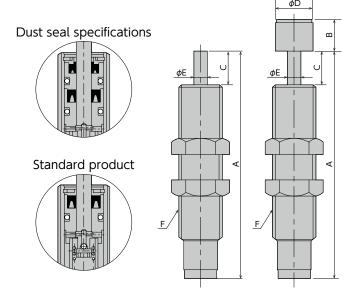

### **Dimensions**

Model	Α	В	С	D	E	F	Mass g	Specification Page
FWM-S1210MBD-S	76					M12×1	41	50
FWM-S1210MBD-C	76	8	10	8	3.5	//// // //	44	50
FWM-S1410RBD-S	80		10		3.5	M14×1.5	63	52
FWM-S1410RBD-C	00	8		10		M14×1.5	68	52
FWM-S1612XBD-S	102		12		5	M16V1 E	105	54
FWM-S1612XBD-C	102	15	12	13.5	5	M16×1.5	114	54
FWM-S2016EBD-S	120		16		6	M20×1.5	196	58
FWM-S2016EBD-C	120	17	10	18	O	M20×1.5	218	58
FWM-S2530GBD-S	155		30				396	62
FWM-S2530GBD-C	155	18	30	22		M25×1.5	427	62
FWM-S2540LBD-C	171.5	29	40	22.5	8		475	66
FWM-S2725FBD-S	136		25			M27×1.5	402	68
FWM-S2725FBD-C	136	20	25	24		M2/×1.5	451	68
FWM-S3035TBD-S	188		35		10	M20×1 E	708	70
FWM-S3035TBD-C	100	18.5	35	27	10	M30×1.5	755	70
FWM-S3650UBD-S	225		50		12	M36×1.5	1330	74
FWM-S3650UBD-C	235	19.5	50	33	12	10130×1.5	1410	74

# **Specifications**

\* The specification is identical with the standard models for each type


- \* Do not use this product in places where it may come in contact with oil as it does not have a liquid-proof structure.
- \* Please contact our sales department when the use of optional parts is planned.
- \* Although the dimensions are identical to those of the FA series standard products (adjustable), the FWM-S2016 series has a longer overall length (dimension A).

Emergency Absorber Variable-Groove Orifice
Fixed Type Adjustable type Self-adjusting

### **FED Series**



•Products specification might be changed without notice.

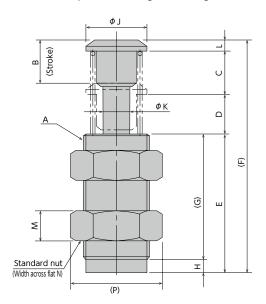

### **Dimensions**

Model	А	В	С	D	E	F	G	Н	J	K	L	M	N	Р
FED-2010M-C	M20×1.5	10	11	14	37.5	62.5	30.5	7	16	8	3	8	24	27.7
FED-3020M-C	M30×1.5	20	25	18	64	107	58	6	28	12	5	14	36	41.6

# **Specifications**

Model	Stroke mm	Max. absorption energy J (kgf·m)	Max. equivalent mass Range of impact rate kg (kgf) m/s		Max. drag N (kgf)	Recovering power of the piston rod N (kgf)	Operating temperature °C	Mass g
FED-2010M-C	10	19.6 (2.0)	30(30)	0.5~2	6,860 (700)	41.2(4.2) or lower	<b>−5~70</b>	79
FED-3020M-C	20	98(10)	140(140)	0.5~2	11,760(1,200)	68.6(7.0) or lower	-5~70	350

<sup>\*</sup> This product is an affordable compact soft absorber for emergencies.

## **Precautions for Use**

- \* Do not use this product without carefully reading the attached owner's manual.
- \* Ensure that sufficient mounting strength is secured for this product. (As a guideline, it should be 2 to 3 times the maximum drag listed in the catalogue.)
- \* Never apply eccentric load to the piston rod. In particular, when using in a rotating motion, the distance between the rotational centre of the impacted part and the mounted soft
- absorber should be at least 12 times the stroke length. The soft absorber should also be mounted so that it is perpendicular halfway through the stroke.
- \* Do not over-tighten the standard nut. (Tightening torque: 14.7H·m)
- \* Do not use this product in a vacuum or a location where it may come in contact with oil.
- \* Please use with an external stopper

#### Standard nuts are sold separately as well.

Applicable model	Model
FED-2010M	M20 nut Black
FED-3020M	M30 nut Black

<sup>\*</sup> Light weight - made of aluminum.

<sup>\*</sup> As an emergency absorber, it will last for approximately 100 uses.

### **FES Series**



Type Descriptions

 $\frac{F E S}{1} - \frac{12}{2} \frac{15}{3}$ 

- ① Series name
- ② Mounting screw size (metric coarse screw thread)
- 3 Max. stroke

# **Product Description**

The emergency stopper, available for only one-time use, is designed to urgently stop in runway of the devices with an linear motor or servomotor. Absorbs the energy using the plastic deformation of metal. Differs from the general hydraulic pressure shock absorber, impervious to an oil leak. Designed more compact than a hydraulic pressure shock absorber with the similar absorption capacity.


Also, a rebound, frequently seen in a rubber stopper, does not occur and the excellent absorption characteristics cause no damage to the device.

# **Specifications**

Model	Max. absorption energy J (kgf⋅m)	Maximum stroke mm	Range of impact rate m/s	Max. drag N(kgf)	Range of operating temperature °C	Mass g
FES-0607	7(0.7)	7		2,500 (255)		9
FES-1215	45 (4.6)	15		6,500 (663)		50
FES-1220	80 (8.2)	20		8,500 (867)		70
FES-1625	160(16.3)	25	3以下	9,500 (969)	-25~60	100
FES-2030	450 (45.9)	30		27,000 (2,755)		300
FES-2440	1,000(102)	40		45,000 (4,592)		650
FES-3050	1,800 (183.7)	50		60,000 (6,122)		1,200

### **Dimensions**

Model	Α	В	С	D	Е	F	G	Н	J	K
FES-0607	28	21	_	7	M6×1	_	4	10	10.6	10.6
FES-1215	62	47	3	12	M12×1.75	15	14	14	14.6	15.4
FES-1220	74	59	3	12	M12×1.75	18	17	15	15.7	16.7
FES-1625	89	70	3	16	M16×2	19	17	15	16.5	17.5
FES-2030	109	84	5	20	M20×2.5	30	27	26	27.8	28.8
FES-2440	138	107	6	25	M24×3	40	36	33	36.7	37.7
FES-3050	172	134	8	30	M30×3.5	50	46	41	45	46

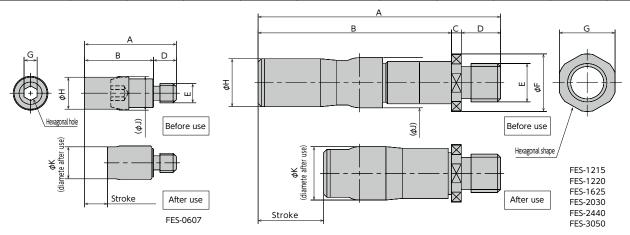

●Products specification might be changed without notice.

### Selection Method

- 1. Based on the equations for the selection, please calculate the kinetic energy (E1) of the application to be used and tentatively select the model with grater maximum absorption energy than the calculated energy value.
- \* According to the expected number of units to be used (n), multiply the maximum absorption energy by n.
- 2. Calculate the stroke of the tentatively selected model (St) based on the stroke equations and the table of coefficient for each model, and calculate the thrusting energy (E2) using the equations for the selection.
- 3. Confirm that the total energy (E) and stroke (St) calculated above meet the specifications of the tentatively selected model. When the specifications are met, the selection is complete. If not, please calculate again with another model with greater maximum absorption energy.

#### **Equations for the Selection**

With thrust (horizontal)

$$E_1 = \frac{1}{2} MV^2 \qquad E_2 = F \times St$$

$$St = \frac{1}{2} MV^2 \times \frac{1}{((\text{max. drag} \times \text{n} \times \text{coefficient}) - F)}$$

$$E = E_1 + E_2$$

Without thrust (horizontal)

$$E_1 = \frac{1}{2}MV^2$$

You can calculate the approximate stroke using the equations below (no need to use the equation of  $E2 = F \times St$ ).

$$St = \frac{1}{2}MV^2 \times \frac{1}{\text{max. drag} \times \text{n} \times}$$

For free fall

$$\begin{split} E_1 &= M \cdot g \cdot H & E_2 &= M \cdot g \cdot St \\ St &= \frac{1}{2} \, MV^2 \times \frac{1}{(\text{max. drag} \times n \times \text{coefficient}) - (M \times g)} \\ E &= E_1 + E_2 \end{split}$$

## **How to Mount**

Tightening torque when attaching N·m ( kg·f m)							
FES-0607	9(0.9)						
FES-1215	61.4(6.26)						
FES-1220	66.5 (6.78)						
FES-1625	107(10.9)						
FES-2030	315(32.1)						
FES-2440	564 (57.6)						
FES-3050	1,125(114.7)						

- \* Attach the product with tightening torque above using the hexagonal part of the main unit.
- \* Using another part to attach the product causes insufficient tightening or damage.
- \* When using in a place where vibration easily causes loosening, take measures so that loosening does not occur.

#### Equations to calculate a stroke

Equations to calculate St (stroke) of E2=F×St

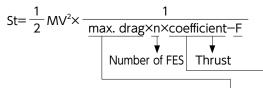


Table of coefficient for each model

				_
Model	Stroke mm	Max. absorption energy J	Max. drag N	Coefficient
FES-0607	7	7	2,500	0.5
FES-1215	15	45	6,500	0.7
FES-1220	20	80	8,500	0.7
FES-1625	25	160	9,500	0.7
FES-2030	30	450	27,000	0.6
FES-2440	40	1,000	45,000	0.7
FES-3050	50	1,800	60,000	0.7

# **Product Characteristics**

- \* Excellent absorption characteristic
- \* Maintenance-free
- \* Compact with large absorption capacity
- \* Little changes in the characteristics with operating temperature
- \* Usable without an external stopper

<i>I</i> viaterial	SUS					
Surface treatment	Main unit	Bright quenching				
FES-1215、12	20、1625、2030、2440	3050				
Material	Carbon steel					

FFS-0607

#### Galvanized Cap Surface treatment Main unit Nitriding treatment

- \* Do not use this product without carefully reading the attached owner's manual.
- \* Ensure that sufficient mounting strength is secured for this product. (As a guideline, it should be 2 to 3 times the maximum drag listed in the catalog.)
- \* 2 or more of this product can be used in parallel.
- \* Ensure that an eccentric load is not applied to the product.
- \* You can use the product only once. Not available repeatedly.

# FK Series (M4~M16)



### **Characteristics**

- With a fixed, specially-designed orifice structure, an optimal impact absorption can be achieved, even under variable operating conditions.
   (FK-0404 and FK-0604 series have a grooveorifice structure.)
- We have three available types to accommodate various
  - For low-speed: L, for medium-speed: M, for highspeed: H
- Urethane cap specification is also available.
- 2 or more of this product can be used in parallel.
- This product can also be custom-designed for optimal impact absorption.

## **Specifications**


Model	Stroke mm	Max. absorption energy J(kgf·m)	Max. equivalent mass kg(kgf)	Rarge of impact rate m/s	Max. drag N(kgf)	Max.cycle rate cycle/min	Max. absorption energy per minute J/min (kgf·m/min)	ecovering power of the piston rod N (kgf)	Operating temperature	Mass Stype g (Ctype g)	Urethane Cap Specification (Type-R)
FK-0404L-□	4	0.1 (0.01)	1(1)	0.3~1	214(21.8)	45	4.5 (0.46)	2.5 (0.25)	<b>−5~70</b>	2.4(2.5)	×
FK-0404H-□	4	0.3(0.03)	3(3)	0.5	214(21.0)	45	13.5(1.38)	or lower	-5.5	2.4(2.3)	
FK-0604L-□	4	0.1 (0.01)	1(1)	0.3~1	363	45	4.5 (0.46)	3(0.3)	<b>−5~70</b>	4.1 (4.2)	×
FK-0604H-□	4	0.5 (0.05)	3(3)	0.5	(37)	45	22.5 (2.29)	or lower	-3.970	4.1 (4.2)	
FK-1008L-□			20 (20)	0.3~1	1,078			4 O (O E)			
FK-1008M-□	8	2.94(0.3)	6(6)	0.3~2	(110)	60	58.8 (6.0)	4.9 (0.5) or lower	-5~70	20(21)	0
FK-1008H-□			2.5 (2.5)	0.3~3	(110)			OI LOWEI			
FK-1210L-□			50 (50)	0.3~1	1,960			9.8(1.0)			
FK-1210M-□	10	6.86(0.7)	14(14)	0.3~2	(200)	60	98(10)	or lower	-5~70	36(37)	0
FK-1210H-□			6(6)	0.3~3	(200)			OI TOVICI			
FK-1412L-□			75 (75)	0.3~1	2.156			0.0(0.0)			
FK-1412M-□	12	9.8(1.0)	20 (20)	0.3~2	2,156 (220)	60	176(18)	8.9 (0.9) or lower	-5~70	55(57)	0
FK-1412H-□			8(8)	0.3~3	(220)			OI TOVVCI			
FK-1417L-□			110(110)	0.3~1	2646			0.0(0.0)			
FK-1417M-□	17	14.7(1.5)	30(30)	0.3~2	2,646 (270)	60	235(24)	8.9(0.9) or lower	-5~70	76(77)	0
FK-1417H-□			13(13)	0.3~3	(270)			OI LOWEI			
FK-1612L-□			110(110)	0.3~1	2.040			0.0(1.0)			
FK-1612M-□	12	14.7(1.5)	30(30)	0.3~2	2,940 (300)	60	235 (24)	9.8(1.0) or lower	-5~70	76(82)	0
FK-1612H-□			13(13)	0.3~3	(300)			OI LOWEI			

Note) Insert S in the  $\square$  to order without a cap, and insert C in the  $\square$  to order with a cap (R if ordering urethane cap).

- \* Do not use this product without carefully reading the attached owner's manual.
- \* Do not turn the oil inlet screw located at the bottom of the main unit.
- \* Ensure that sufficient mounting strength is secured for this product. (As a guideline, it should be 2 to 3 times the maximum drag listed in the catalogue.)
- \* Urethane caps are consumable goods that need to be replaced with new ones if necessary.
- \* Do not use this product in a vacuum or a location where it may come in contact with oil.
- \* Ensure that an eccentric load is not applied to the soft absorber. (Allowable eccentric angle: ±2.5°)
- \* Ensure that an external stopper (OP-020\*\*) is also used. (The FK-0404 and FK-0604 series can be used without a stopper.)

#### **RoHS Compliant**

●Products specification might be changed without notice.

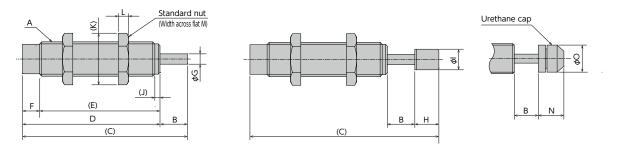


# **Dimensions**

Model	Α	В	С	D	E	F	φG	Н	φl	J	K	L	M	N	φΟ
FK-0404□-S	M4×0.5	4	28.6	24.6	20.1	4.5	1.2	_	_		8.1	2	7	_	-
FK-0404□-C	1014 > 0.5	4	32.6	24.0	20.1	4.5	1.2	4	3	_	0.1		/	_	_
FK-0604□-S	M6×0.75	4	29	25	20.5	4.5	1.8	_	_		9.2	2	8	_	_
FK-0604□-C	1/10×0./5	4	33	25	20.5	4.5	1.0	4	4.6	_	9.2		0	_	-
FK-1008□-S	M10×1.0	8	48	40	34.5	5.5	3	_	_	1.5	15	3	13	_	_
FK-1008□-C	70110 ~ 1.0	0	55	40	34.5	5.5	3	7	6	1.5	15	3	13	7.3	8
FK-1210□-S	M12×1.0	10	63	53	47.5	5.5	3.5	_	_	_	16.2	4	14	_	_
FK-1210□-C	M12×1.0	10	71	53	47.5	5.5	3.5	8	8	_	16.2	4	14	8.8	10
FK-1412□-S	M14×1.5	12	70	58	52.5	5.5	3.5	_	_	_	19.6	6	17	_	-
FK-1412□-C	M14×1.5	12	78	56	52.5	5.5	3.5	8	10	_	19.6	0	17	8.8	10
FK-1417□-S	M14×1.5	17	97	80	74.5	5.5	4	_	_	1.5	19.6	6	17	_	_
FK-1417□-C	1011471.5	17	107	80	/4.5	5.5	4	10	10	1.5	19.6	0	17	11	12
FK-1612□-S	M16×1.5	12	75	63	57.5	5.5	5	_	_	_	21.9	6	19	_	_
FK-1612□-C	WIIOX 1.5	12	90	03	57.5	5.5	٥	15	13.5	] _	21.9	0	19	13.1	14

Note) Urethane cap specification is not available for FK-0404 and FK0604.

# **Key to Model Number**

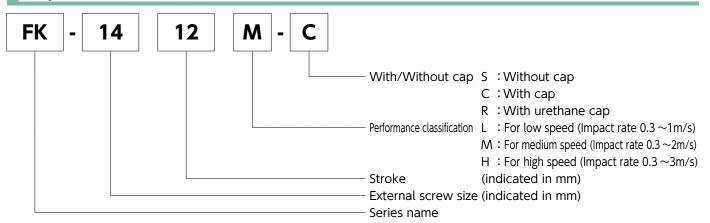

Please refer to pages 104–107 for optional parts.

**FK Series** 

**RoHS Compliant** 

●Products specification might be changed without notice.

# **Optional Parts Compatibility Chart**

Model	Eccentric angle	Stopp	er nut	Holder with a	Flance	Liquid proof can	Lirothono con	Nut
Model	adaptor	Without cap	With cap	switch	Flange	Liquid-proof cap	Urethane cap	Nut
FK-1008□-*	OP-010PB	OP-020PB-S	OP-020PB-C	_	OP-040PB	FK-1008□-C-060	OP-090M10A	-
FK-1210□-*	OP-010KB	OP-020KB-S	OP-020KB-C	OP-032KB	OP-040KB	FK-1210□-C-060	OP-090M12A	-
FK-1412□-*	OP-010RD	OP-020RB-S	OP-020RB-C	OP-032RB	OP-040RB	FK-1412□-C-060	OP-090M14A	-
FK-1417□-*	_	OP-020RB-S	OP-020RB-C	_	OP-040RB	_	OP-090M14B	_
FK-1612□-*	OP-010XB	OP-020HB-S	OP-020HB-C	OP-032HB	OP-040XB	FK-1612□-C-060	OP-090M16A	-
FK-2016□-*	OP-010EB	OP-020EB-S	OP-020EB-C	OP-032EB	OP-040EB	FK-2016□-C-060	OP-090M20A	_
FK-2022□-*	_	OP-020EB-S	OP-020EB-C	_	OP-040EB	_	OP-090M20A	_
FK-2050□-R	_	OP-020EB-S	OP-020EB-C	_	OP-040EB	_	OP-090M20A	_
FK-2530□-*	OP-010GB	OP-020GB-S	OP-020GB-C	OP-032GB	OP-040GB	FK-2530□-C-060	OP-090M25A	_
FK-2540□-*	_	OP-020LB	OP-020LB	_	OP-040GB	_	OP-090M25A	_
FK-2550□-R	_	_	_	_	_	_	OP-090M25A	_
FK-2725□-*	OP-010FB	OP-020FB-S	OP-020FB-C	OP-032FB	OP-040FB	FK-2725□-C-060	_	_
FK-3035□-*	OP-010TB	OP-020TB-S	OP-020TB-C	_	OP-040TB	FK-3035□-C-060	OP-090M30A	_
FK-3625A□-C	OP-010M3625	-	OP-020M36	_	OP-040UB	_	OP-090M36B	_
FK-3650A□-C	OP-010M3650	_	OP-020M36	_	OP-040UB	_	OP-090M36B	_
FK-3650□-*	OP-010UB	OP-020UB-S	OP-020UB-C	_	OP-040UB	_	OP-090M36A	_
FK-4225B□-C	OP-010M4225	_	OP-020M42	_	Square flange	_	OP-090M42A	OP-M42
FK-4250B□-C	OP-010M4250	-	OP-020M42	_	OP-040M42ŠF Rectangle flange	_	OP-090M42A	OP-M42
FK-4275B□-C	_	_	OP-020M42	_	OP-040M42RF	_	OP-090M42A	OP-M42
FK-6450□-C	_	_	OP-020M64S	_	6	_	OP-090M64A	OP-M64
FK-64100□-C	_	_	OP-020M64S		Square flange OP-040M64SF	_	OP-090M64A	OP-M64
FK-64150□-C	_	_	OP-020M64L	_	01-040//043/	_	OP-090M64A	OP-M64

\*Standard nuts are sold separately as well.

Applicable Models	Model
FK-0404	M04 nut
FK-0604	M06 nut
FK-1008	M10 nut
FK-1210	M12 nut
FK-1412	M14 nut
FK-1417	M14 nut
FK-1612	M16 nut
FK-2016	M20 nut
FK-2022	M20 nut
FK-2050	M20 nut
FK-2530	M25 nut
FK-2540	M25 nut
FK-2550 P2.0	M25-P2 nut
FK-2725	M27 nut
FK-3035	M30 nut
FK-3625A	M36A nut
FK-3650A	M36A nut
FK-3650	M36 nut


**FK Series RoHS Compliant** 


Products specification might be changed without notice.

## **Optional Parts**

#### **Eccentric angle adaptor OP-010** С E G Κ Mass g Model В D M16×1.5 OP-010PB 21.9 OP-010KB M18×1.5 24.3 OP-010RD M22×1.5 27.7 OP-010XB M22×1.5 27.7 OP-010EB M27×1.5 OP-010GB 107.5 67.5 M36×1.5 53.1 197.5 OP-010FB M36×1.5 53.1 M40×1.5 OP-010TB 57.7 M45×1.5 1,273 OP-010UB 63.5 OP-010M3625 M45×1.5 63.5 OP-010M3650 M45×1.5 63.5 1,270 OP-010M4225 M64×2 1,600 OP-010M4250 M64×2 2,500

When attaching the eccentric angle adaptor, screw it into the main unit until the cap for eccentric angle and the piston rod form a tight connection. While maintaining this position, fasten the main unit's nut until secured. \* If the eccentric angle adaptor is secured without establishing a tight fit, a sufficient stroke cannot be obtained. Furthermore, if the eccentric angle adaptor is further screwed in, after it has formed a tight connection, and then secured in place, the cap for eccentric angle cannot be pushed all the way to the stroke end.

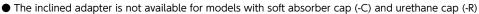

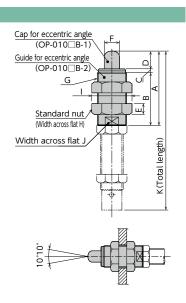


						Stopper nu	t OF	P-020
	Stanc	lard	With	сар	Come	non dimensions		
Model	Model OP-020□-S		OP-02	20□-C	Comi	non aimensions	Mass g	
	Α	В	C D		E	F		
ND 020DD C.C	10	1.5	1.6	1.5	12	M10×1	S	6

Model	OP-02			20□-C	Comr	mon dimensions	М	ass g
	Α	В	С	D	E	F		0
OP-020PB-S•C	10	15	16	15	13	M10×1	S	6
O1-0201 B-3-C	10	13	10	13	13	70110/1	С	9
OP-020KB-S•C	12	16.2	16	16.2	14	M12×1	S	6
01 020185 0		10.2		10.2		77112-11	С	8
OP-020RB-S•C	12	19.6	20	19.6	17	M14×1.5	S	10
						_	С	17
OP-020HB-S•C	15	21.9	30	21.9	19	M16×1.5	S	15
							С	28
OP-020EB-S•C	30	27.7	47	27.7	24	M20×1.5	S	46
							C S	68 65
OP-020GB-S•C	20	37	32	37	32	M25×1.5	C	102
							C   102	
OP-020LB	_	_	50	37	32	M25×1.5	153	
OP-020FB-S•C	35	37	55	37	32	M27×1.5	S	90
OP-020FB-3*C	35	3/	55	3/	32	1012/ × 1.5	С	137
OP-020TB-S•C	38	41.6	58	41.6	36	M30×1.5	S	129
O1-0201b-3-C	30	41.0	30	41.0	30	10150/1.5	С	197
OP-020UB-S•C	45	53.1	65	53.1	46	M36×1.5	S	291
	7.5	33.1					С	422
OP-020M36	_	_	45	53.1	46	M36×1.5		291
OP-020M42	_	_	59	φ56	_	M42×1.5	370	
OP-020M64S	_	_	86	φ78	_	M64×2		850
OP-020M64L	_	_	115	φ78	_	M64×2	1	,150

● Adjust so that it stops 1mm before the stroke end, and fasten with the main unit's nut

Note) When attaching, make sure that the side without a bearing chamfer is the impact surface.

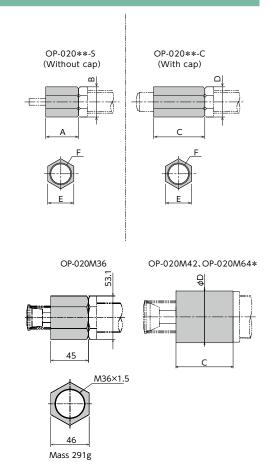

## **FK Series**


**RoHS Compliant** 


●Products specification might be changed without notice.

# **Optional Parts**

	Holder with a switch OP-032									
Model	Α	В	φС	D	Е	F	(G)	Н	J	Mass g
OP-032KB	29	23	8	10	8	8	19.6	12.8	16	38
OP-032RB	29	23	10	12	8	8	19.6	13.8	17	34
OP-032HB	40	23	13.5	12	15	8	21.9	14.8	19	46
OP-032EB	50	23	18	16	17	8	27.7	17.3	24	80
OP-032GB	37	23	22	30	18	8	33.5	19.8	29	82
OP-032FB	56	23	23	25	20	8	34.6	20.3	30	107

- Position the holder in such a way that the tip of the switch and one of the ends of the metal ring for the rod cap are separated more than 0.5 mm. Cause of malfunction.
- Please refer to below for the specification of switches and precautions for use.

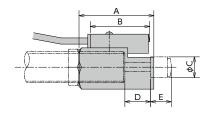

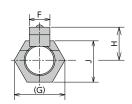

	Model GXL-8F specifications Man	ufactured by SUNX				
Item	Summary	Specification				
Detection distance	Standard detected object 15X15X1 (Iron)	2.1mm				
Power voltage		12~24VDC±10%				
Consumption current		15mA or lower				
	Behaviour form	NO type				
	Output form	NPN open collector				
	Output capacity (with 24VDC power voltage)	100mA or lower				
	Protection feature	Comes with a surge absorption circuit				
	Residual voltage At 100mA inflowing current	2V or lower				
	Alnput/Output circuit diagram  +V (Brown)  Main  circuit  Output (Black)  0 (Blue)	Operation indicator light Red LED $-12{\sim}24V \qquad \text{(lights up when the output is ON)}$ DC $\pm10\%$				
Response frequency		500Hz				
Ambient operating temperature		−25~70℃				
Ambient storage temperature		−40~85°C				
Ambient operating humidity		35~85%RH				
Ambient storage humidity		35~95%RH				
Lead wire length		Approximately 1m				
Mass	Including cable	Approximately15g				

- 1) Do not use when it is in a transient state after the power is turned on (approx.10ms).
- 2) Keep the cables as short as possible when using in places with a lot of noise.

Also, please take all precautions, such as avoiding the parallel wiring ofelectric lines and power lines, as well as wiring within the same conduit.

- 3) Ensure that the switch does not come in direct contact with thinner-type chemicals.
- 4) Because it does not have a short-circuit protection circuit, wiring must be done correctly.

**FK Series** 


RoHS Compliant

Products specification might be changed without notice.

# **Optional Parts**

### Flange OP-040


Model	Α	В	С	D	Е	Mass g
OP-040PB	25	18	M10×1	3.2	4	16
OP-040KB	25	18	M12×1	3.2	4	15
OP-040RB	34	24	M14×1.5	4.5	4	30
OP-040XB	34	24	M16×1.5	4.5	4	29
OP-040EB	40	28	M20×1.5	6.5	12	109
OP-040GB	54	40	M25×1.5	9	12	206
OP-040FB	50	36	M27×1.5	9	12	157
OP-040TB	65	45	M30×1.5	11	14	344
OP-040UB	78	56	M36×1.5	14	16	566

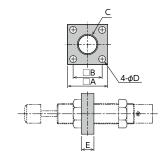

This is a mounting fixture for soft absorbers.

#### Liquid-proof cap -060


Model	Α	В	С	D	E	Mass g
FK-1008□-C-060	13	18	3	8	55	10
FK-1210□-C-060	17	28	9.5	10	71.5	25
FK-1412□-C-060	19	30	9	12	78.5	31
FK-1612□-C-060	21	34	9.5	12	87.5	46
FK-2016□-C-060	24	35	4	16	108	59
FK-2530□-C-060	28	51	6.5	30	154.5	77
FK-2725□-C-060	30	50	5	25	137.5	112
FK-3035□-C-060	38	60	5	35	191.5	255

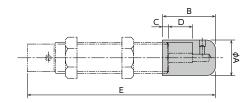


- The main unit is supplied in assembly
- $\bullet$   $\square$  will be filled in with either one of L, M, or H indicated in the catalog.
- Ideal for use in environments where oil splatter poses a problem.
- Ensure that the cap is facing upward. If the cap is facing sideways or downward, it cannot provide an effective means for liquid proofing. Note) Liquid-proof caps are not sold separately.

#### Urethane cap OP-090

Model	Α	С	Mass g
OP-090M36B	10	34	7
OP-090M42A	24.5	44	22
OP-090M64A	(24.1)	57	35

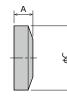


OP-090M36B

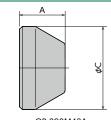


OP-090M42A OP-090M64A

#### Nut

Model	Α	В	С	D	E	Mass g
OP-M42	53	M42×1.5	4-φ4.6	4-2.5	10	64
OP-M64	76	M64×2.0	4-7	2-70	10	100

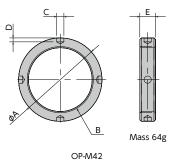

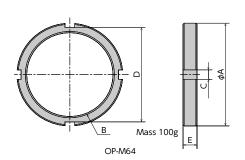

# FK Series (M20~M25)



### **Characteristics**

- With a fixed, specially-designed orifice structure, an optimal impact absorption can be achieved, even under variable operating conditions.
- The main unit can also be used as a stopper.
   (No external stopper required)
- We have three available types to accommodate various speeds.
  - For low-speed: L, for medium-speed: M, for highspeed:H
- Urethane cap specification is also available.
- 2 or more of this product can be used in parallel.
- This product can also be custom-designed for optimal impact absorption.

# **Specifications**

Model	Stroke mm	Max. absorption energy J(kgf·m)	Max. equivalent mass kg(kgf)	Rarge of impact rate m/s	Max. drag N(kgf)	Max.cycle rate cycle/min	Max. absorption energy per minute J/min (kgf·m/min)	ecovering power of the piston rod N (kgf)	Operating temperature	Mass Stype g (Ctype g)	Urethane Cap Specification (Type-R)
FK-2016L-□			230 (230)	0.3~1	2.500			40.4 (4.0F)		4.47	
FK-2016M-□	16	29.4(3.0)	60 (60)	0.3~2	3,528 (360)	60	343 (35)	18.1 (1.85) or lower	-5~70	147 (168)	0
FK-2016H-□			25 (25)	0.3~3	(300)			tovvei		(100)	
FK-2022L-□			73 (73)	0.3~1	2.020			20.2(4)		160	
FK-2022M-□	22	44.1 (4.5)	30(30)	0.3~2	3,920 (400)	60	392(40)	39.2(4) or lower	-5~70	163 (178)	0
FK-2022H-□	1		15(15)	0.3~3	(400)			or tower		(170)	
FK-2050L-R			30(30)	0.3~2	4.000			20.2(4)		20.4	
FK-2050M-R	50	98(10)	15(15)	0.3~3	4,900 (500)	30	490 (50)	39.2(4) or lower	-5~70	294 (294)	0
FK-2050H-R	1		8(8)	0.3~3	(500)			or tower		(294)	
FK-2530L-□			390 (390)	0.3~1	6 270			20.4(2.0)		264	
FK-2530M-□	30	88.2(9.0)	175 (175)	0.3~2	6,370 (650)	60	490 (50)	29.4(3.0) or lower	-5~70	361	0
FK-2530H-□	1		75 (75)	0.3~3	(050)			lower		(391)	
FK-2540L-□			480 (480)	0.3~1				(- o)			
FK-2540M-□	40	117(12)	235 (235)	0.3~2	6,370	60	490 (50)	71.5(7.3) or	-5~70	437	0
FK-2540H-□	1		30(30)	0.3~3	(650)			lower		(437)	
FK-2550L-R			100(100)	0.3~1.5				22.2(1)			
FK-2550M-R	50	147(15)	50(50)	0.3~2	6,370	30	637(65)	39.2(4) or lower	-5~70	516	0
FK-2550H-R	1		30(30)	0.3~3	(650)			or tower		(516)	


Note) Insert S in the  $\square$  to order without a cap, and insert C in the  $\square$  to order with a cap (R if ordering urethane cap). (-S is not available for FK-2540.) Note) Urethane cap is the only available specification for FK-2022, 2050, and 2550 with a cap.

- \* Do not use this product without carefully reading the attached owner's manual.
- \* Do not turn the oil inlet screw located at the bottom of the main unit.
- \* Ensure that sufficient mounting strength is secured for this product. (As a guideline, it should be 2 to 3 times the maximum drag listed in the catalogue.)
- \* Do not use this product in a vacuum or a location where it may come in contact with oil.
- \* Ensure that an eccentric load is not applied to the soft absorber. (Allowable eccentric angle:  $\pm 2.5^{\circ}$ ) Allowable eccentric angle in FK-2050 and 2550:  $\pm 1.0^{\circ}$
- \* Urethane caps are consumable goods that need to be replaced with new ones if necessary

stable type | Self-adjusting

#### **RoHS Compliant**

Products specification might be changed without notice.

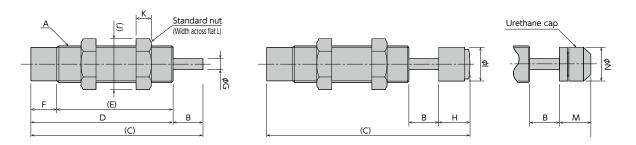


### **Dimensions**

Model	Α	В	С	D	E	F	φG	Н	φl	J	K	L	M	φN
FK-2016□-S	M20×1.5	16	93	77	63	14	6	_		27.7	8	24	_	-
FK-2016□-C	10120 ~ 1.5	16	110	//	65	14	6	17	18	27.7	0	24	17	18
FK-2022□-S	M20×1.5	22	112	90	76	14	6	_	_	27.7	8	24	_	_
FK-2022□-R	10120 ~ 1.5	22	126.5	90	/6	14	0	_	_	27.7	0	24	14.5	18
FK-2050□-R	M20×1.5	50	223.5	156.5	142.5	14	6	_	_	27.7	8	24	17	18
FK-2530□-S	M25×1.5	30	140	110	95	15	8	_	_	37	10	32	_	_
FK-2530□-C	10125~1.5	30	158	110	95	15	0	18	22	3/	10	32	18	22
FK-2540□-C	M25×1.5	40	185.5	124.5	109.5	15	8	21	22	37	10	32	26	22
FK-2550□-R	M25×2.0	50	228	160	145	15	8	_	_	37	10	32	18	22

Note) Urethane cap is the only available specification for FK-2022, 2050, and 2550 with a cap.

# Key to Model Number

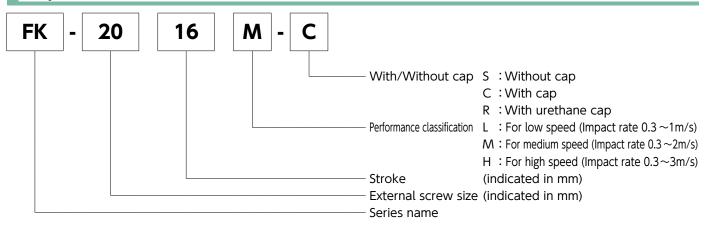

Please refer to pages 104-107 for optional parts.

**FK Series** 

**RoHS Compliant** 

●Products specification might be changed without notice.

# **Optional Parts Compatibility Chart**

Model	Eccentric angle	Stopp	er nut	Holder with a	Flance	Liquid proof can	Lirothono con	Nut
Model	adaptor	Without cap	With cap	switch	Flange	Liquid-proof cap	Urethane cap	Nut
FK-1008□-*	OP-010PB	OP-020PB-S	OP-020PB-C	_	OP-040PB	FK-1008□-C-060	OP-090M10A	-
FK-1210□-*	OP-010KB	OP-020KB-S	OP-020KB-C	OP-032KB	OP-040KB	FK-1210□-C-060	OP-090M12A	-
FK-1412□-*	OP-010RD	OP-020RB-S	OP-020RB-C	OP-032RB	OP-040RB	FK-1412□-C-060	OP-090M14A	-
FK-1417□-*	_	OP-020RB-S	OP-020RB-C	_	OP-040RB	_	OP-090M14B	_
FK-1612□-*	OP-010XB	OP-020HB-S	OP-020HB-C	OP-032HB	OP-040XB	FK-1612□-C-060	OP-090M16A	-
FK-2016□-*	OP-010EB	OP-020EB-S	OP-020EB-C	OP-032EB	OP-040EB	FK-2016□-C-060	OP-090M20A	_
FK-2022□-*	_	OP-020EB-S	OP-020EB-C	_	OP-040EB	_	OP-090M20A	_
FK-2050□-R	_	OP-020EB-S	OP-020EB-C	_	OP-040EB	_	OP-090M20A	_
FK-2530□-*	OP-010GB	OP-020GB-S	OP-020GB-C	OP-032GB	OP-040GB	FK-2530□-C-060	OP-090M25A	_
FK-2540□-*	_	OP-020LB	OP-020LB	_	OP-040GB	_	OP-090M25A	_
FK-2550□-R	_	_	_	_	_	_	OP-090M25A	_
FK-2725□-*	OP-010FB	OP-020FB-S	OP-020FB-C	OP-032FB	OP-040FB	FK-2725□-C-060	_	_
FK-3035□-*	OP-010TB	OP-020TB-S	OP-020TB-C	_	OP-040TB	FK-3035□-C-060	OP-090M30A	_
FK-3625A□-C	OP-010M3625	-	OP-020M36	_	OP-040UB	_	OP-090M36B	_
FK-3650A□-C	OP-010M3650	_	OP-020M36	_	OP-040UB	_	OP-090M36B	_
FK-3650□-*	OP-010UB	OP-020UB-S	OP-020UB-C	_	OP-040UB	_	OP-090M36A	_
FK-4225B□-C	OP-010M4225	_	OP-020M42	_	Square flange	_	OP-090M42A	OP-M42
FK-4250B□-C	OP-010M4250	-	OP-020M42	_	OP-040M42ŠF Rectangle flange	_	OP-090M42A	OP-M42
FK-4275B□-C	_	_	OP-020M42	_	OP-040M42RF	_	OP-090M42A	OP-M42
FK-6450□-C	_	_	OP-020M64S	_	6	_	OP-090M64A	OP-M64
FK-64100□-C	_	_	OP-020M64S		Square flange OP-040M64SF	_	OP-090M64A	OP-M64
FK-64150□-C	_	_	OP-020M64L	_	01-040//043/	_	OP-090M64A	OP-M64

\*Standard nuts are sold separately as well.

Applicable Models	Model
FK-0404	M04 nut
FK-0604	M06 nut
FK-1008	M10 nut
FK-1210	M12 nut
FK-1412	M14 nut
FK-1417	M14 nut
FK-1612	M16 nut
FK-2016	M20 nut
FK-2022	M20 nut
FK-2050	M20 nut
FK-2530	M25 nut
FK-2540	M25 nut
FK-2550 P2.0	M25-P2 nut
FK-2725	M27 nut
FK-3035	M30 nut
FK-3625A	M36A nut
FK-3650A	M36A nut
FK-3650	M36 nut


**FK Series RoHS Compliant** 


Products specification might be changed without notice.

## **Optional Parts**

#### **Eccentric angle adaptor OP-010** С E G Κ Mass g Model В D M16×1.5 OP-010PB 21.9 OP-010KB M18×1.5 24.3 OP-010RD M22×1.5 27.7 OP-010XB M22×1.5 27.7 OP-010EB M27×1.5 OP-010GB 107.5 67.5 M36×1.5 53.1 197.5 OP-010FB M36×1.5 53.1 M40×1.5 OP-010TB 57.7 M45×1.5 1,273 OP-010UB 63.5 OP-010M3625 M45×1.5 63.5 OP-010M3650 M45×1.5 63.5 1,270 OP-010M4225 M64×2 1,600 OP-010M4250 M64×2 2,500

When attaching the eccentric angle adaptor, screw it into the main unit until the cap for eccentric angle and the piston rod form a tight connection. While maintaining this position, fasten the main unit's nut until secured. \* If the eccentric angle adaptor is secured without establishing a tight fit, a sufficient stroke cannot be obtained. Furthermore, if the eccentric angle adaptor is further screwed in, after it has formed a tight connection, and then secured in place, the cap for eccentric angle cannot be pushed all the way to the stroke end.

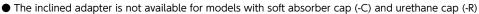

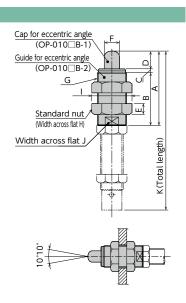


						Stopper nu	t OF	P-020
	Stanc	lard	With	сар	Come	non dimensions		
Model	OP-02	0□-S	OP-02	20□-C	Comi	non aimensions	Mass g	
	Α	В	С	D	E F			
ND 020DD C.C	10	1.5	1.6	1.5	12	M10×1	S	6

Model	OP-02			20□-C	Common dimensions Mas		ass g	
	Α	В	С	D	E	F		0
OP-020PB-S•C	10	15	16	15	13	M10×1	S	6
O1-0201 B-3-C	10	13	10	13	13	70110/1	С	9
OP-020KB-S•C	12	16.2	16	16.2	14	M12×1	S	6
01 020185 0		10.2		10.2		77112-11	С	8
OP-020RB-S•C	12	19.6	20	19.6	17	M14×1.5	S	10
						_	С	17
OP-020HB-S•C	15	21.9	30	21.9	19	M16×1.5	S	15
							С	28
OP-020EB-S•C	30	27.7	47	27.7	24	M20×1.5	S	46
							C S	68 65
OP-020GB-S•C	20	37	32	37	32	M25×1.5	C	102
								102
OP-020LB	_	_	50	37	32	M25×1.5	153	
OP-020FB-S•C	35	37	55	37	32	M27×1.5	S	90
OP-020FB-3*C	35	3/	55	3/	32	1012/ × 1.5	С	137
OP-020TB-S•C	38	41.6	58	41.6	36	M30×1.5	S	129
O1-0201b-3-C	30	41.0	30	41.0	30	10150/1.5	С	197
OP-020UB-S•C	45	53.1	65	53.1	46	M36×1.5	S	291
	7.5	33.1					С	422
OP-020M36	_	_	45	53.1	46	M36×1.5		291
OP-020M42	_	_	59	φ56	_	M42×1.5		370
OP-020M64S	_	_	86	φ78	_	M64×2		850
OP-020M64L	_	_	115	φ78	_	M64×2	1	,150

● Adjust so that it stops 1mm before the stroke end, and fasten with the main unit's nut

Note) When attaching, make sure that the side without a bearing chamfer is the impact surface.

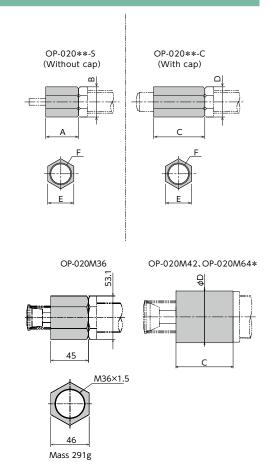

## **FK Series**


**RoHS Compliant** 


●Products specification might be changed without notice.

# **Optional Parts**

	Holder with a switch OP-032									
Model	Α	В	φС	D	Е	F	(G)	Н	J	Mass g
OP-032KB	29	23	8	10	8	8	19.6	12.8	16	38
OP-032RB	29	23	10	12	8	8	19.6	13.8	17	34
OP-032HB	40	23	13.5	12	15	8	21.9	14.8	19	46
OP-032EB	50	23	18	16	17	8	27.7	17.3	24	80
OP-032GB	37	23	22	30	18	8	33.5	19.8	29	82
OP-032FB	56	23	23	25	20	8	34.6	20.3	30	107

- Position the holder in such a way that the tip of the switch and one of the ends of the metal ring for the rod cap are separated more than 0.5 mm. Cause of malfunction.
- Please refer to below for the specification of switches and precautions for use.

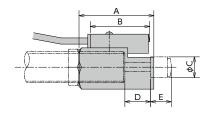

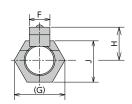

	Model GXL-8F specifications Man	ufactured by SUNX		
Item	Summary	Specification		
Detection distance	Standard detected object 15X15X1 (Iron)	2.1mm		
Power voltage		12~24VDC±10%		
Consumption current		15mA or lower		
	Behaviour form	NO type		
	Output form	NPN open collector		
	Output capacity (with 24VDC power voltage)	100mA or lower		
	Protection feature	Comes with a surge absorption circuit		
	Residual voltage At 100mA inflowing current	2V or lower		
	Alnput/Output circuit diagram  +V (Brown)  Main  circuit  Output (Black)  0 (Blue)	Operation indicator light Red LED $-12{\sim}24V \qquad \text{(lights up when the output is ON)}$ DC $\pm10\%$		
Response frequency		500Hz		
Ambient operating temperature		−25~70℃		
Ambient storage temperature		−40~85°C		
Ambient operating humidity		35~85%RH		
Ambient storage humidity		35~95%RH		
Lead wire length		Approximately 1m		
Mass	Including cable	Approximately15g		

- 1) Do not use when it is in a transient state after the power is turned on (approx.10ms).
- 2) Keep the cables as short as possible when using in places with a lot of noise.

Also, please take all precautions, such as avoiding the parallel wiring ofelectric lines and power lines, as well as wiring within the same conduit.

- 3) Ensure that the switch does not come in direct contact with thinner-type chemicals.
- 4) Because it does not have a short-circuit protection circuit, wiring must be done correctly.

**FK Series** 


RoHS Compliant

Products specification might be changed without notice.

# **Optional Parts**

### Flange OP-040


Model	Α	В	С	D	Е	Mass g
OP-040PB	25	18	M10×1	3.2	4	16
OP-040KB	25	18	M12×1	3.2	4	15
OP-040RB	34	24	M14×1.5	4.5	4	30
OP-040XB	34	24	M16×1.5	4.5	4	29
OP-040EB	40	28	M20×1.5	6.5	12	109
OP-040GB	54	40	M25×1.5	9	12	206
OP-040FB	50	36	M27×1.5	9	12	157
OP-040TB	65	45	M30×1.5	11	14	344
OP-040UB	78	56	M36×1.5	14	16	566

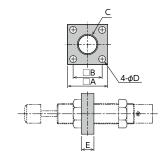

This is a mounting fixture for soft absorbers.

#### Liquid-proof cap -060


Model	Α	В	С	D	E	Mass g
FK-1008□-C-060	13	18	3	8	55	10
FK-1210□-C-060	17	28	9.5	10	71.5	25
FK-1412□-C-060	19	30	9	12	78.5	31
FK-1612□-C-060	21	34	9.5	12	87.5	46
FK-2016□-C-060	24	35	4	16	108	59
FK-2530□-C-060	28	51	6.5	30	154.5	77
FK-2725□-C-060	30	50	5	25	137.5	112
FK-3035□-C-060	38	60	5	35	191.5	255

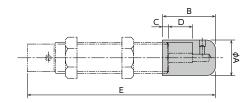


- The main unit is supplied in assembly
- $\bullet$   $\square$  will be filled in with either one of L, M, or H indicated in the catalog.
- Ideal for use in environments where oil splatter poses a problem.
- Ensure that the cap is facing upward. If the cap is facing sideways or downward, it cannot provide an effective means for liquid proofing. Note) Liquid-proof caps are not sold separately.

#### Urethane cap OP-090

Model	Α	С	Mass g
OP-090M36B	10	34	7
OP-090M42A	24.5	44	22
OP-090M64A	(24.1)	57	35

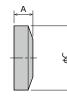


OP-090M36B

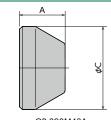


OP-090M42A OP-090M64A

#### Nut

Model	Α	В	С	D	E	Mass g
OP-M42	53	M42×1.5	4-φ4.6	4-2.5	10	64
OP-M64	76	M64×2.0	4-7	2-70	10	100

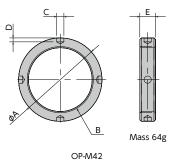

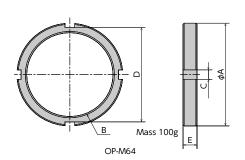

### FK Series (M27~M36)



### **Characteristics**

- With a fixed, specially-designed orifice structure,an optimal impact absorption can be achieved,even under variable operating conditions.
- The main unit can also be used as a stopper. (Noexternal stopper required, except for FK-3625A□)
- We have three available types to accommodate various speeds.
  - For low-speed: L, for medium-speed: M, for high-speed: H
- Urethane cap specification is also available.
- 2 or more of this product can be used in parallel.
- This product can also be custom-designed for optimal impact absorption.

## **Specifications**


Model	Stroke mm	Max. absorption energy J(kgf·m)	Max. equivalent mass kg (kgf)	Rarge of impact rate m/s	Max. drag N(kgf)	Max. cycle rate cycle/min	Max. absorption energy per minute J/min (kgf·m/min)	ecovering power of the piston rod N(kgf)	Operating temperature	Mass Stype g (Ctype g)	Urethane Cap Specification (Type-R)
FK-2725L-□			420 (420)	0.3~1		E20		27 2 (2 70)			
FK-2725M-□	25	79(8.1)	105 (105)	0.3~2	60	539 (55)	6,370 (650)	27.3 (2.78) or lower	<b>−5~70</b>	341 (385)	×
FK-2725H-□			47 (47)	0.3~3		(33)					
FK-3035L-□			1,560 (1,560)	0.3~1	0.3~1		14,700(1,500)	47.1 (4.8) or lower -5~7			
FK-3035M-□	35	196 (20)	390 (390)	0.3~2 30	1,176 (120)	-5~70			628 (681)	0	
FK-3035H-□			173 (173)	0.3~3	0.3~3	(120)		OI LOVVEI			
FK-3625AL-C		150(15.3)	2,000	0.3~1		1 500		100/10 2)			
FK-3625AM-C	25	200(20.4)	800	0.3~2	30	1,500 (153)	25,000(2,551)	100 (10.2) or lower	-5~70	(900)	0
FK-3625AH-C		200(20.4)	150	0.3~3						(900)	
FK-3650AL-C			3,400	0.3~1		2 252		120/12 2)			
FK-3650AM-C	50	400	1,400	0.3~2	30	2,352 (240)	25,000 (2,551)	120 (12.2) or lower	-5~70	(980)	
FK-3650AH-C			300	0.3~3	7	(240)		OI towel		(900)	
FK-3650L-□			3,137(3,137)	0.3~1		2.252		(0 ( (7 0)			
FK-3650M-□	50	392(40)	784 (784)	0.3~2	0.3~2 30	2,352 (240)	21,110(2,154)	68.6(7.0) or lower	-5~70	1,177 (1,259)	
FK-3650H-□			306 (306)	0.3~3		(240)		OI TOWEI		(1,233)	

Note) Insert S in the  $\square$  to order without a cap, and insert C in the  $\square$  to order with a cap (R if ordering urethane cap). (-S is not available for FK-3625  $\square$ .) Note: An additional urethane cap (OP-090M36B) can be mounted on FK-3625A $\square$ -C, FK-3650A $\square$ -C

- \* Do not use this product without carefully reading the attached owner's manual.
- \* Do not turn the oil inlet screw located at the bottom of the main unit.
- \* Ensure that sufficient mounting strength is secured for this product. (As a guideline, it should be 2 to 3 times the maximum drag listed in the catalogue.)
- \* Do not use this product in a vacuum or a location where it may come in contact with oil.
- \* Ensure that an eccentric load is not applied to the soft absorber. (Allowable eccentric angle:  $\pm 2.5^{\circ}$ )
- \* We recommend that you use it with an external stopper(OP-020\*\*).
- \* Urethane caps are consumable goods that need to be replaced with new ones if necessary.

#### **RoHS Compliant**


●Products specification might be changed without notice.

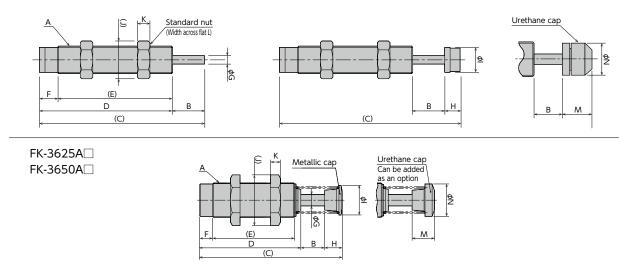

### **Dimensions**

Model	Α	В	С	D	E	F	φG	Н	φl	J	K	L	M	φΝ
FK-2725□-S	M27×1.5	25	117.5	92.5	77.5	15	8	_	_	37	10	32	_	_
FK-2725□-C	1012/ 1.5	25	137.5	92.5	//.5	15	0	20	23	3/	10	32	_	_
FK-3035□-S	M30×1.5	35	171.5	136.5	116.5	20	10	_	_	41.6	14	36	_	_
FK-3035□-C	1///30×1.5	35	190	130.5	116.5	20	10	18.5	27	41.6	14	36	25	27
FK-3625A□-C	M36×1.5	25	150	106.5	86	14	12	18.5	31	53.1	10	46	23.5	34
FK-3650A□-C	M36×1.5	50	217	148.5	128	14	12	18.5	31	53.1	10	46	23.5	34
FK-3650□-S	M36×1.5	50	218.5	168.5	148.5	20	12	_	_	53.1	15	46	_	_
FK-3650□-C	1/1/20/1/2	50	238	100.5	140.5	20	12	19.5	33	55.1	15	46	24.3	33

# Key to Model Number

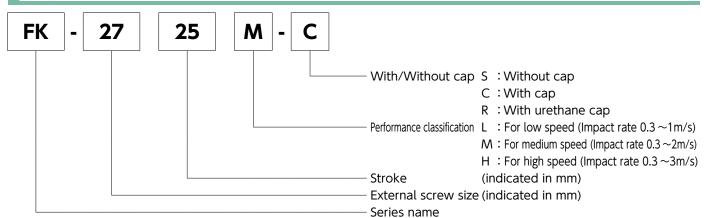

Please refer to pages 110-113 for optional parts.

**FK Series** 

**RoHS Compliant** 

●Products specification might be changed without notice.

# **Optional Parts Compatibility Chart**

Model	Eccentric angle	Stopper nut		Holder with a	Flance	Liquid proof can	Lirothono con	Nut
Model	adaptor	Without cap	With cap	switch	Flange	Liquid-proof cap	Urethane cap	Nut
FK-1008□-*	OP-010PB	OP-020PB-S	OP-020PB-C	_	OP-040PB	FK-1008□-C-060	OP-090M10A	-
FK-1210□-*	OP-010KB	OP-020KB-S	OP-020KB-C	OP-032KB	OP-040KB	FK-1210□-C-060	OP-090M12A	-
FK-1412□-*	OP-010RD	OP-020RB-S	OP-020RB-C	OP-032RB	OP-040RB	FK-1412□-C-060	OP-090M14A	-
FK-1417□-*	_	OP-020RB-S	OP-020RB-C	_	OP-040RB	_	OP-090M14B	_
FK-1612□-*	OP-010XB	OP-020HB-S	OP-020HB-C	OP-032HB	OP-040XB	FK-1612□-C-060	OP-090M16A	-
FK-2016□-*	OP-010EB	OP-020EB-S	OP-020EB-C	OP-032EB	OP-040EB	FK-2016□-C-060	OP-090M20A	_
FK-2022□-*	_	OP-020EB-S	OP-020EB-C	_	OP-040EB	_	OP-090M20A	_
FK-2050□-R	_	OP-020EB-S	OP-020EB-C	_	OP-040EB	_	OP-090M20A	_
FK-2530□-*	OP-010GB	OP-020GB-S	OP-020GB-C	OP-032GB	OP-040GB	FK-2530□-C-060	OP-090M25A	_
FK-2540□-*	_	OP-020LB	OP-020LB	_	OP-040GB	_	OP-090M25A	_
FK-2550□-R	_	_	_	_	_	_	OP-090M25A	_
FK-2725□-*	OP-010FB	OP-020FB-S	OP-020FB-C	OP-032FB	OP-040FB	FK-2725□-C-060	_	_
FK-3035□-*	OP-010TB	OP-020TB-S	OP-020TB-C	_	OP-040TB	FK-3035□-C-060	OP-090M30A	_
FK-3625A□-C	OP-010M3625	-	OP-020M36	_	OP-040UB	_	OP-090M36B	_
FK-3650A□-C	OP-010M3650	_	OP-020M36	_	OP-040UB	_	OP-090M36B	_
FK-3650□-*	OP-010UB	OP-020UB-S	OP-020UB-C	_	OP-040UB	_	OP-090M36A	_
FK-4225B□-C	OP-010M4225	_	OP-020M42	_	Square flange	_	OP-090M42A	OP-M42
FK-4250B□-C	OP-010M4250	-	OP-020M42	_	OP-040M42ŠF Rectangle flange	_	OP-090M42A	OP-M42
FK-4275B□-C	_	_	OP-020M42	_	OP-040M42RF	_	OP-090M42A	OP-M42
FK-6450□-C	_	_	OP-020M64S	_	6	_	OP-090M64A	OP-M64
FK-64100□-C	_	_	OP-020M64S	_	Square flange OP-040M64SF	_	OP-090M64A	OP-M64
FK-64150□-C	_	_	OP-020M64L	_	01 0-01110-01	_	OP-090M64A	OP-M64

\*Standard nuts are sold separately as well.

Applicable Models	Model
FK-0404	M04 nut
FK-0604	M06 nut
FK-1008	M10 nut
FK-1210	M12 nut
FK-1412	M14 nut
FK-1417	M14 nut
FK-1612	M16 nut
FK-2016	M20 nut
FK-2022	M20 nut
FK-2050	M20 nut
FK-2530	M25 nut
FK-2540	M25 nut
FK-2550 P2.0	M25-P2 nut
FK-2725	M27 nut
FK-3035	M30 nut
FK-3625A	M36A nut
FK-3650A	M36A nut
FK-3650	M36 nut


**FK Series RoHS Compliant** 


Products specification might be changed without notice.

# **Optional Parts**

#### **Eccentric angle adaptor OP-010** С Ε G Κ Mass g Model В D M16×1.5 OP-010PB 21.9 OP-010KB M18×1.5 24.3 OP-010RD M22×1.5 27.7 OP-010XB M22×1.5 27.7 OP-010EB M27×1.5 OP-010GB 107.5 67.5 M36×1.5 53.1 197.5 OP-010FB M36×1.5 53.1 M40×1.5 OP-010TB 57.7 M45×1.5 1,273 OP-010UB 63.5 OP-010M3625 M45×1.5 63.5 OP-010M3650 M45×1.5 63.5 1,270 OP-010M4225 M64×2 1,600 OP-010M4250 M64×2 2,500

When attaching the eccentric angle adaptor, screw it into the main unit until the cap for eccentric angle and the piston rod form a tight connection. While maintaining this position, fasten the main unit's nut until secured. \* If the eccentric angle adaptor is secured without establishing a tight fit, a sufficient stroke cannot be obtained. Furthermore, if the eccentric angle adaptor is further screwed in, after it has formed a tight connection, and then secured in place, the cap for eccentric angle cannot be pushed all the way to the stroke end.

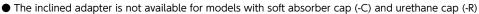

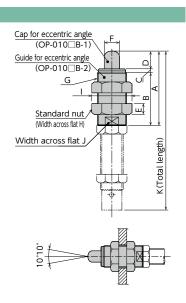


		Stopper nu						P-020		
	Stanc	lard	With	сар	Come	non dimensions	Mass g			
Model	OP-02	0□-S	OP-02	20□-C	Comi	non aimensions				
	Α	В	С	D	) E F					
ND 020DD C.C	10	1.5	1.6	1.5	12	M10×1	S	6		

Model	OP-02			20□-C	Comr	mon dimensions	М	ass g
	Α	В	С	D	E	F		0
OP-020PB-S•C	10	15	16	15	13	M10×1	S	6
O1-0201 B-3-C	10	13	10	13	13	70110/1	С	9
OP-020KB-S•C	12	16.2	16	16.2	14	M12×1	S	6
01 020185 0		10.2		10.2		77112-11	С	8
OP-020RB-S•C	12	19.6	20	19.6	17	M14×1.5	S	10
						_	С	17
OP-020HB-S•C	15	21.9	30	21.9	19	M16×1.5	S	15
							С	28
OP-020EB-S•C	30	27.7	47	27.7	24	M20×1.5	S	46
							C S	68 65
OP-020GB-S•C	20	37	32	37	32	M25×1.5	C	102
								102
OP-020LB	_	_	50	37	32	M25×1.5	153	
OP-020FB-S•C	35	37	55	37	32	M27×1.5	S	90
OP-020FB-3*C	35	3/	55	3/	32	1012/ × 1.5	С	137
OP-020TB-S•C	38	41.6	58	41.6	36	M30×1.5	S	129
O1-0201b-3-C	30	41.0	30	41.0	30	10150/1.5	С	197
OP-020UB-S•C	45	53.1	65	53.1	46	M36×1.5	S	291
	7.5	33.1					С	422
OP-020M36	_	_	45	53.1	46	M36×1.5		291
OP-020M42	_	_	59	φ56	_	M42×1.5	:	370
OP-020M64S	_	_	86	φ78	_	M64×2		850
OP-020M64L	_	_	115	φ78	_	M64×2	1,150	

● Adjust so that it stops 1mm before the stroke end, and fasten with the main unit's nut

Note) When attaching, make sure that the side without a bearing chamfer is the impact surface.

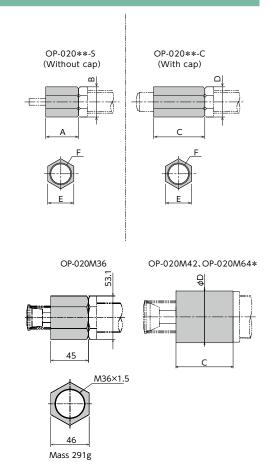

### **FK Series**


**RoHS Compliant** 


●Products specification might be changed without notice.

# **Optional Parts**

	Holder with a switch OP-032											
Model	Α	В	φС	D	Е	F	(G)	Н	J	Mass g		
OP-032KB	29	23	8	10	8	8	19.6	12.8	16	38		
OP-032RB	29	23	10	12	8	8	19.6	13.8	17	34		
OP-032HB	40	23	13.5	12	15	8	21.9	14.8	19	46		
OP-032EB	50	23	18	16	17	8	27.7	17.3	24	80		
OP-032GB	37	23	22	30	18	8	33.5	19.8	29	82		
OP-032FB	56	23	23	25	20	8	34.6	20.3	30	107		

- Position the holder in such a way that the tip of the switch and one of the ends of the metal ring for the rod cap are separated more than 0.5 mm. Cause of malfunction.
- Please refer to below for the specification of switches and precautions for use.

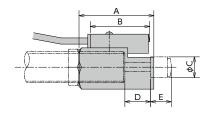

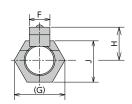

	Model GXL-8F specifications Man	Model GXL-8F specifications Manufactured by SUNX										
Item	Summary	Specification										
Detection distance	Standard detected object 15X15X1 (Iron)	2.1mm										
Power voltage		12~24VDC±10%										
Consumption current		15mA or lower										
	Behaviour form	NO type										
	Output form	NPN open collector										
	Output capacity (with 24VDC power voltage)	100mA or lower										
	Protection feature	Comes with a surge absorption circuit										
	Residual voltage At 100mA inflowing current	2V or lower										
	Alnput/Output circuit diagram  +V (Brown)  Main  circuit  Output (Black)  0 (Blue)	Operation indicator light Red LED $-12{\sim}24V \qquad \text{(lights up when the output is ON)}$ DC $\pm10\%$										
Response frequency		500Hz										
Ambient operating temperature		−25~70℃										
Ambient storage temperature		−40~85°C										
Ambient operating humidity		35~85%RH										
Ambient storage humidity		35~95%RH										
Lead wire length		Approximately 1m										
Mass	Including cable	Approximately15g										

- 1) Do not use when it is in a transient state after the power is turned on (approx.10ms).
- 2) Keep the cables as short as possible when using in places with a lot of noise.

Also, please take all precautions, such as avoiding the parallel wiring ofelectric lines and power lines, as well as wiring within the same conduit.

- 3) Ensure that the switch does not come in direct contact with thinner-type chemicals.
- 4) Because it does not have a short-circuit protection circuit, wiring must be done correctly.

**FK Series** 


RoHS Compliant

Products specification might be changed without notice.

# **Optional Parts**

### Flange OP-040


Model	Α	В	С	D	Е	Mass g
OP-040PB	25	18	M10×1	3.2	4	16
OP-040KB	25	18	M12×1	3.2	4	15
OP-040RB	34	24	M14×1.5	4.5	4	30
OP-040XB	34	24	M16×1.5	4.5	4	29
OP-040EB	40	28	M20×1.5	6.5	12	109
OP-040GB	54	40	M25×1.5	9	12	206
OP-040FB	50	36	M27×1.5	9	12	157
OP-040TB	65	45	M30×1.5	11	14	344
OP-040UB	78	56	M36×1.5	14	16	566

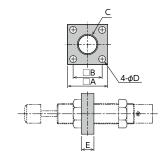

This is a mounting fixture for soft absorbers.

#### Liquid-proof cap -060


Model	Α	В	С	D	E	Mass g
FK-1008□-C-060	13	18	3	8	55	10
FK-1210□-C-060	17	28	9.5	10	71.5	25
FK-1412□-C-060	19	30	9	12	78.5	31
FK-1612□-C-060	21	34	9.5	12	87.5	46
FK-2016□-C-060	24	35	4	16	108	59
FK-2530□-C-060	28	51	6.5	30	154.5	77
FK-2725□-C-060	30	50	5	25	137.5	112
FK-3035□-C-060	38	60	5	35	191.5	255

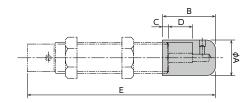


- The main unit is supplied in assembly
- $\bullet$   $\square$  will be filled in with either one of L, M, or H indicated in the catalog.
- Ideal for use in environments where oil splatter poses a problem.
- Ensure that the cap is facing upward. If the cap is facing sideways or downward, it cannot provide an effective means for liquid proofing. Note) Liquid-proof caps are not sold separately.

### Urethane cap OP-090

Model	Α	С	Mass g
OP-090M36B	10	34	7
OP-090M42A	24.5	44	22
OP-090M64A	(24.1)	57	35

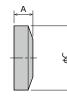


OP-090M36B

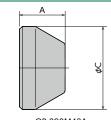


OP-090M42A OP-090M64A

#### Nut


Model	Α	В	С	D	E	Mass g
OP-M42	53	M42×1.5	4-φ4.6	4-2.5	10	64
OP-M64	76	M64×2.0	4-7	2-70	10	100

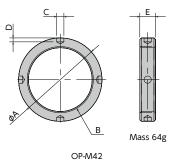

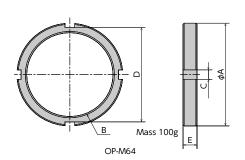

### FK-4225B/FK-4250B/FK-4275B Series



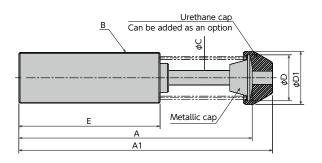

\* The absorber's main unit does not come with nuts.

### **Dimensions**

Model	Α	A1	В	С	D	D1	Е
FK-4225B□-C	144	162					92
FK-4250B□-C	195	213	M42×1.5	12	38	44	118
FK-4275B□-C	246	264					143

<sup>\*</sup> A1 and D1 are the dimensions with a mounted urethane cap (optional). (Urethane Cap Type: OP-090M42A)

# **Specifications**

Model	Stroke mm	Max. absorption energy J(kgf·m)	Max. equivalent mass kg(kgf)	Rarge of impact rate m/s	Max. drag N(kgf)	Max.cycle rate cycle/min	Max. absorption energy per minute J/min (kgf·m/min)	ecovering power of the piston rod N (kgf)	Operating temperature	Mass g	Allowable eccentric angle
FK-4225BL-C			14,000	0.1~0.5		16					
FK-4225BM-C	25	260 (26.5)	1,350	0.3~1.5		20	1,858(190)			795	
FK-4225BH-C			200	0.3~3.6		20					
FK-4250BL-C			23,000	0.1~0.5	24 500	8		120(12.2)	-5~70		
FK-4250BM-C	50	520(53.1)	2,800	0.3~1.5	31,590 (3,223)	10	2,372(242)			1,020	±2.5
FK-4250BH-C			450	0.3~3.6	(3,223)	10					
FK-4275BL-C			30,000	0.1~0.5		5					]
FK-4275BM-C	75	780(79.6)	3,400	0.3~1.5		6	3,345(341)			1,240	
FK-4275BH-C			670	0.3~3.6		0					

### **Precautions for Use**

- \* Do not use this product without carefully reading the attached owner's manual.
- \* We recommend that you use it with an external stopper (Stopper nut OP-020M42).
- \* Ensure that sufficient mounting strength is secured for this product. (As a guideline, it should be 2 to 3 times the maximum drag listed in the catalogue.)
- \* Do not use this product in a vacuum or a location where it may come in contact with oil.
- \* Ensure that an eccentric load is not applied to the soft absorber. (Allowable eccentric angle:  $\pm 2.5^{\circ}$ )

- \* Ensure that an eccentric load is not applied to the soft absorber.
- \* Urethane caps are consumable goods that need to be replaced with new ones if necessary.


### **RoHS Compliant**

•Products specification might be changed without notice.

# **Optional Parts**


#### Nut OP-M42

Model OP-M42

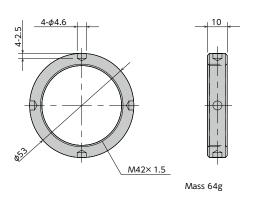

#### Square flange OP-040 M42SF


Model

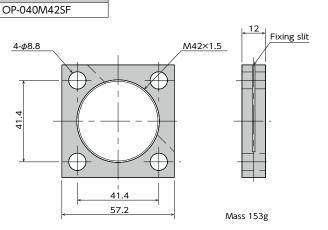


#### Stopper nut OP-020 M42

Model OP-020M42

• Adjust so that it stops 1mm before thestroke end, and fasten with the main unit's nut until secured.

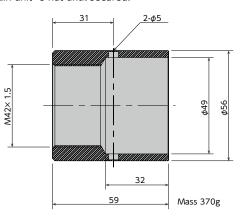


#### Rectangle flange OP-040 M42RF

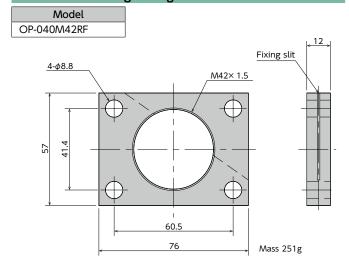


#### Urethane cap OP-090 M42A

Model OP-090M42A

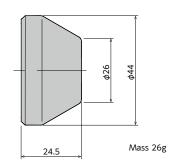

### Side mount OP-M42SM

\*Side mount is sold as a set of two. Model \*Recommended bolt: M8 X 50 hexagon socket head bolt OP-M42SM

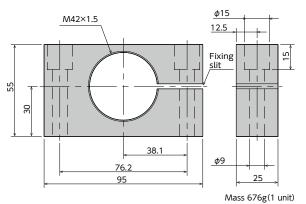

Fixed Type | Adjustable type | Self-adjusting

### FK-4225B/FK-4250B Series

**RoHS Compliant** 


•Products specification might be changed without notice.

# **Optional Parts**

#### Eccentric angle adaptor OP-010M4225/M4250

OP-010M4225
OP-010M4250

- Screw the eccentric angle adaptor into the main unit until the cap for the eccentric angle and the piston rod form tight connection. While maintaining this position, fasten the main unit's nut until secured.
- Use the eccentric angle adaptor when the eccentric angle is 2.5° or larger.
- The main unit can also be used as a stopper.
- Use it with a capless soft absorber
- The maximum operating eccentric angle with an eccentric angle adaptor is  $\pm$  10°.
- Nut for unit is not inclusive.
- Not usable for FA-4250YD-C, FWM-4250YBD-C.

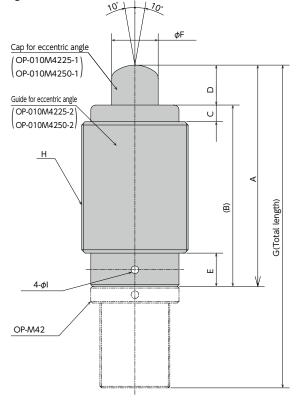


Model	Α	В	С	D	E	φF	G	Н	φI	Weight g
OP-010M4225	133	109	10	24	20	28	194	M64×2	16	1,600
OP-010M4250	203	154	10	49	20	28	290	1010472	4.6	2,500

#### Nut OP-M64

Model	
OP-M64	

Usable as the nut for eccentric angle adaptor

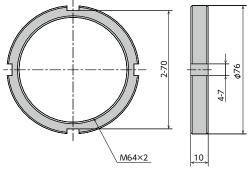

Weight 100g

**FK Series** 

**RoHS Compliant** 

●Products specification might be changed without notice.

# **Optional Parts Compatibility Chart**

Model	Model Eccentric angle Stopper		er nut	Holder with a	Flance	Liquid proof can	Lirothono con	Nut
Model	adaptor	Without cap	With cap	switch	Flange	Liquid-proof cap	Urethane cap	Nut
FK-1008□-*	OP-010PB	OP-020PB-S	OP-020PB-C	_	OP-040PB	FK-1008□-C-060	OP-090M10A	-
FK-1210□-*	OP-010KB	OP-020KB-S	OP-020KB-C	OP-032KB	OP-040KB	FK-1210□-C-060	OP-090M12A	-
FK-1412□-*	OP-010RD	OP-020RB-S	OP-020RB-C	OP-032RB	OP-040RB	FK-1412□-C-060	OP-090M14A	-
FK-1417□-*	_	OP-020RB-S	OP-020RB-C	_	OP-040RB	_	OP-090M14B	_
FK-1612□-*	OP-010XB	OP-020HB-S	OP-020HB-C	OP-032HB	OP-040XB	FK-1612□-C-060	OP-090M16A	-
FK-2016□-*	OP-010EB	OP-020EB-S	OP-020EB-C	OP-032EB	OP-040EB	FK-2016□-C-060	OP-090M20A	_
FK-2022□-*	_	OP-020EB-S	OP-020EB-C	_	OP-040EB	_	OP-090M20A	_
FK-2050□-R	_	OP-020EB-S	OP-020EB-C	_	OP-040EB	_	OP-090M20A	_
FK-2530□-*	OP-010GB	OP-020GB-S	OP-020GB-C	OP-032GB	OP-040GB	FK-2530□-C-060	OP-090M25A	_
FK-2540□-*	_	OP-020LB	OP-020LB	_	OP-040GB	_	OP-090M25A	_
FK-2550□-R	_	_	_	_	_	_	OP-090M25A	_
FK-2725□-*	OP-010FB	OP-020FB-S	OP-020FB-C	OP-032FB	OP-040FB	FK-2725□-C-060	_	_
FK-3035□-*	OP-010TB	OP-020TB-S	OP-020TB-C	_	OP-040TB	FK-3035□-C-060	OP-090M30A	_
FK-3625A□-C	OP-010M3625	-	OP-020M36	_	OP-040UB	_	OP-090M36B	_
FK-3650A□-C	OP-010M3650	_	OP-020M36	_	OP-040UB	_	OP-090M36B	_
FK-3650□-*	OP-010UB	OP-020UB-S	OP-020UB-C	_	OP-040UB	_	OP-090M36A	_
FK-4225B□-C	OP-010M4225	_	OP-020M42	_	Square flange	_	OP-090M42A	OP-M42
FK-4250B□-C	OP-010M4250	-	OP-020M42	_	OP-040M42ŠF Rectangle flange	_	OP-090M42A	OP-M42
FK-4275B□-C	_	_	OP-020M42	_	OP-040M42RF	_	OP-090M42A	OP-M42
FK-6450□-C	_	_	OP-020M64S	_	6	_	OP-090M64A	OP-M64
FK-64100□-C	_	_	OP-020M64S		Square flange OP-040M64SF	_	OP-090M64A	OP-M64
FK-64150□-C	_	_	OP-020M64L	_	01-040//043/	_	OP-090M64A	OP-M64

Applicable Models	Model
FK-0404	M04 nut
FK-0604	M06 nut
FK-1008	M10 nut
FK-1210	M12 nut
FK-1412	M14 nut
FK-1417	M14 nut
FK-1612	M16 nut
FK-2016	M20 nut
FK-2022	M20 nut
FK-2050	M20 nut
FK-2530	M25 nut
FK-2540	M25 nut
FK-2550 P2.0	M25-P2 nut
FK-2725	M27 nut
FK-3035	M30 nut
FK-3625A	M36A nut
FK-3650A	M36A nut
FK-3650	M36 nut


**FK Series RoHS Compliant** 


Products specification might be changed without notice.

# **Optional Parts**

#### **Eccentric angle adaptor OP-010** С Ε G Κ Mass g Model В D M16×1.5 OP-010PB 21.9 OP-010KB M18×1.5 24.3 OP-010RD M22×1.5 27.7 OP-010XB M22×1.5 27.7 OP-010EB M27×1.5 OP-010GB 107.5 67.5 M36×1.5 53.1 197.5 OP-010FB M36×1.5 53.1 M40×1.5 OP-010TB 57.7 M45×1.5 1,273 OP-010UB 63.5 OP-010M3625 M45×1.5 63.5 OP-010M3650 M45×1.5 63.5 1,270 OP-010M4225 M64×2 1,600 OP-010M4250 M64×2 2,500

When attaching the eccentric angle adaptor, screw it into the main unit until the cap for eccentric angle and the piston rod form a tight connection. While maintaining this position, fasten the main unit's nut until secured. \* If the eccentric angle adaptor is secured without establishing a tight fit, a sufficient stroke cannot be obtained. Furthermore, if the eccentric angle adaptor is further screwed in, after it has formed a tight connection, and then secured in place, the cap for eccentric angle cannot be pushed all the way to the stroke end.

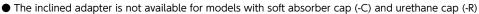

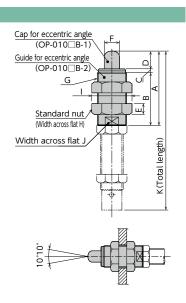


						Stopper nu	t OF	P-020
	Stanc	lard	With	Vith cap Common dimensions				
Model	OP-02	0□-S	OP-02	OP-020 Common dimensions		non aimensions	Mass g	
	Α	В	С	D	E	F		
ND 020DD C.C	10	1.5	1.6	1.5	12	M10×1	S	6

Model	OP-020□-S			OP-020□-C		mon dimensions	Mass g		
	Α	В	С	D	E	F		0	
OP-020PB-S•C	10	15	16	15	13	M10×1	S	6	
O1-0201 B-3-C	10	13	10	13	13	70110/1	С	9	
OP-020KB-S•C	12	16.2	16	16.2	14	M12×1	S	6	
01 020185 0		10.2		10.2		77112-11	С	8	
OP-020RB-S•C	12	19.6	20	19.6	17	M14×1.5	S	10	
						_	С	17	
OP-020HB-S•C	15	21.9	30	21.9	19	M16×1.5	S	15	
							С	28	
OP-020EB-S•C	30	27.7	47	27.7	24	M20×1.5	S	46	
							C S	68 65	
OP-020GB-S•C	20	37	32	37	32	M25×1.5	C	102	
								102	
OP-020LB	_	_	50	37	32 M25×1.5			153	
OP-020FB-S•C	35	37	55	37	32	M27×1.5	S	90	
OP-020FB-3*C	35	3/	55	3/	32	1012/ × 1.5	С	137	
OP-020TB-S•C	38	41.6	58	41.6	36	M30×1.5	S	129	
O1-0201b-3-C	30	41.0	30	41.0	30	10150/1.5	С	197	
OP-020UB-S•C	45	53.1	65	53.1	46	M36×1.5	S	291	
	7.5	33.1					С	422	
OP-020M36	_	_	45	53.1	46	M36×1.5		291	
OP-020M42	_	_	59	φ56	_	M42×1.5	:	370	
OP-020M64S	_	_	86	φ78	_	M64×2		850	
OP-020M64L	_	_	115	φ78	_	M64×2	1	,150	

● Adjust so that it stops 1mm before the stroke end, and fasten with the main unit's nut

Note) When attaching, make sure that the side without a bearing chamfer is the impact surface.

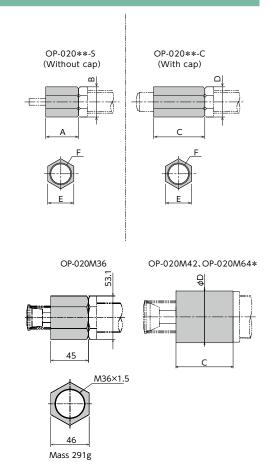

### **FK Series**


**RoHS Compliant** 


●Products specification might be changed without notice.

# **Optional Parts**

		Holder with a switch OP-032										
Model	Α	В	φС	D	Е	F	(G)	Н	J	Mass g		
OP-032KB	29	23	8	10	8	8	19.6	12.8	16	38		
OP-032RB	29	23	10	12	8	8	19.6	13.8	17	34		
OP-032HB	40	23	13.5	12	15	8	21.9	14.8	19	46		
OP-032EB	50	23	18	16	17	8	27.7	17.3	24	80		
OP-032GB	37	23	22	30	18	8	33.5	19.8	29	82		
OP-032FB	56	23	23	25	20	8	34.6	20.3	30	107		

- Position the holder in such a way that the tip of the switch and one of the ends of the metal ring for the rod cap are separated more than 0.5 mm. Cause of malfunction.
- Please refer to below for the specification of switches and precautions for use.

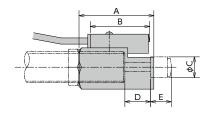

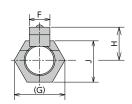

	Model GXL-8F specifications Man	ufactured by SUNX				
Item	Summary	Specification				
Detection distance	Standard detected object 15X15X1 (Iron)	2.1mm				
Power voltage		12~24VDC±10%				
Consumption current		15mA or lower				
	Behaviour form	NO type				
	Output form	NPN open collector				
	Output capacity (with 24VDC power voltage)	100mA or lower				
	Protection feature	Comes with a surge absorption circuit				
	Residual voltage At 100mA inflowing current	2V or lower				
	Alnput/Output circuit diagram  +V (Brown)  Main  circuit  Output (Black)  0 (Blue)	Operation indicator light Red LED $-12{\sim}24V \qquad \text{(lights up when the output is ON)}$ DC $\pm10\%$				
Response frequency		500Hz				
Ambient operating temperature		−25~70℃				
Ambient storage temperature		−40~85°C				
Ambient operating humidity		35~85%RH				
Ambient storage humidity		35~95%RH				
Lead wire length		Approximately 1m				
Mass	Including cable	Approximately15g				

- 1) Do not use when it is in a transient state after the power is turned on (approx.10ms).
- 2) Keep the cables as short as possible when using in places with a lot of noise.

Also, please take all precautions, such as avoiding the parallel wiring ofelectric lines and power lines, as well as wiring within the same conduit.

- 3) Ensure that the switch does not come in direct contact with thinner-type chemicals.
- 4) Because it does not have a short-circuit protection circuit, wiring must be done correctly.

**FK Series** 


RoHS Compliant

Products specification might be changed without notice.

# **Optional Parts**

### Flange OP-040


Model	Α	В	С	D	Е	Mass g
OP-040PB	25	18	M10×1	3.2	4	16
OP-040KB	25	18	M12×1	3.2	4	15
OP-040RB	34	24	M14×1.5	4.5	4	30
OP-040XB	34	24	M16×1.5	4.5	4	29
OP-040EB	40	28	M20×1.5	6.5	12	109
OP-040GB	54	40	M25×1.5	9	12	206
OP-040FB	50	36	M27×1.5	9	12	157
OP-040TB	65	45	M30×1.5	11	14	344
OP-040UB	78	56	M36×1.5	14	16	566

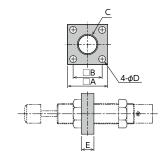

This is a mounting fixture for soft absorbers.

#### Liquid-proof cap -060


Model	Α	В	С	D	E	Mass g
FK-1008□-C-060	13	18	3	8	55	10
FK-1210□-C-060	17	28	9.5	10	71.5	25
FK-1412□-C-060	19	30	9	12	78.5	31
FK-1612□-C-060	21	34	9.5	12	87.5	46
FK-2016□-C-060	24	35	4	16	108	59
FK-2530□-C-060	28	51	6.5	30	154.5	77
FK-2725□-C-060	30	50	5	25	137.5	112
FK-3035□-C-060	38	60	5	35	191.5	255

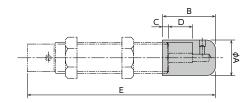


- The main unit is supplied in assembly
- $\bullet$   $\square$  will be filled in with either one of L, M, or H indicated in the catalog.
- Ideal for use in environments where oil splatter poses a problem.
- Ensure that the cap is facing upward. If the cap is facing sideways or downward, it cannot provide an effective means for liquid proofing. Note) Liquid-proof caps are not sold separately.

### Urethane cap OP-090

Model	Α	С	Mass g
OP-090M36B	10	34	7
OP-090M42A	24.5	44	22
OP-090M64A	(24.1)	57	35

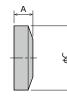


OP-090M36B

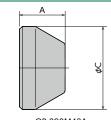


OP-090M42A OP-090M64A

#### Nint

Model	Α	В	С	D	E	Mass g
OP-M42	53	M42×1.5	4-φ4.6	4-2.5	10	64
OP-M64	76	M64×2.0	4-7	2-70	10	100

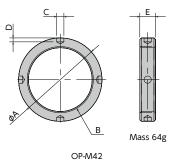

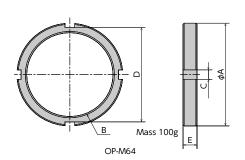

Fixed Type | Adjustable type | Self-adjusting

### FK-6450/64100/64150/%64200 Series

**RoHS Compliant** 

•Products specification might be changed without notice.



# **Specifications**

Model	Stroke mm	Max. absorption energy J (kgf·m)	Max. equivalent mass kg(kgf)	Rarge of impact rate m/s				nower of	Operating temperature	Mass kg	Allowable eccentric angle
FK-6450L-C		2,000 (204.7)	2,800~36,000(2,800~36,000)	0.1~0.5		10	164600				
FK-6450M-C	50		390~4,000(390~4,000)	0.3~1.5		15	164,608 (16,797)	150(15.3)		2.5	±2.5
FK-6450H-C	]		130~500(130~500)	0.3~3.6		15					
FK-64100L-C		4.000	4,000~40,000(4,000~40,000)	0.1~0.6		8	214,118 (21,849)		_5~70	3.2	
FK-64100M-C	100	4,000 (408.2)	1,000~7,000(1,000~7,000)	0.3~1.5	90,000	10		180(18.4)			
FK-64100H-C	]	(400.2)	250~1,300(250~1,300)	0.3~3.6	(9,184)	10	(21,049)		-5~70		
FK-64150L-C		6.000	9,000~56,000(9,000~56,000)	0.1~0.6		6	275 556				±1.0
FK-64150M-C	150	6,000 (612.2)	1,200~11,000(1,200~11,000)	0.3~1.5		8	275,556 (28,118)	370 (37.8)		4.2	
FK-64150H-C	1	(012.2)	350~2,200(350~2,200)	0.3~3.6		8	(20,110)				
FK-64200-C-	200	8,000 (816.3)			]			400 (40.8)		5.5	

Note 1) of FK-64200-C-our will be filled in with a branch number. (made to order product)

### **Precautions for Use**


- \* Do not use this product without carefully reading the attached owner's manual.
- \* Do not turn the oil inlet screw located at the bottom of the main unit.
- \* We recommend that you use it with an external stopper (Stopper nut OP-020M64 $\square$ ).
- \* Ensure that sufficient mounting strength is secured for this product. (As a guideline, it should be 2 to 3 times the maximum drag listed in the catalog.)
- \* Do not use this product in a vacuum or a location where it may come in contact with oil.
- \* Ensure that an eccentric load is not applied to the soft absorber.
- \* The urethane caps are consumables. Please replace them when necessary.
- \* FK-64200-Cfor normal use. (Customized orders)

Fixed Type Adjustable type Self-adjusting

FK Series (M64)

**RoHS Compliant** 

Products specification might be changed without notice.

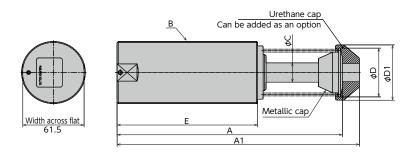


\* The absorber's main unit does not come with nuts.

### **Dimensions**

Model	Α	A1	В	φС	φD	φD1	Е
FK-6450□-C	226	243			50.2	- 57	141
FK-64100□-C	328	345	146.452	20			191
FK-64150□-C	456	473	M64×2	20			241
%FK-64200-C-□□□	556	573			60		291

- \* A1 and D1 are dimensions with the optional urethane cap attached. (Urethane cap type: OP-090M64A)
- \* The optional parts are common with those of the adjustable type. Please refer to page 81.

# **Key to Model Number**

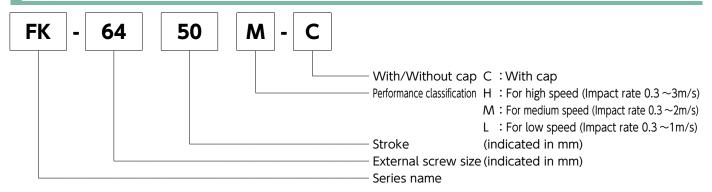

<sup>\*</sup> FK-64200-C-

**FK Series** 

**RoHS Compliant** 

●Products specification might be changed without notice.

# **Optional Parts Compatibility Chart**

Model	Eccentric angle	Stopp	er nut	Holder with a	Flance	Liquid proof can	Lirothono con	Nut
Model	adaptor	Without cap	With cap	switch	Flange	Liquid-proof cap	Urethane cap	Nut
FK-1008□-*	OP-010PB	OP-020PB-S	OP-020PB-C	_	OP-040PB	FK-1008□-C-060	OP-090M10A	-
FK-1210□-*	OP-010KB	OP-020KB-S	OP-020KB-C	OP-032KB	OP-040KB	FK-1210□-C-060	OP-090M12A	-
FK-1412□-*	OP-010RD	OP-020RB-S	OP-020RB-C	OP-032RB	OP-040RB	FK-1412□-C-060	OP-090M14A	-
FK-1417□-*	_	OP-020RB-S	OP-020RB-C	_	OP-040RB	_	OP-090M14B	_
FK-1612□-*	OP-010XB	OP-020HB-S	OP-020HB-C	OP-032HB	OP-040XB	FK-1612□-C-060	OP-090M16A	-
FK-2016□-*	OP-010EB	OP-020EB-S	OP-020EB-C	OP-032EB	OP-040EB	FK-2016□-C-060	OP-090M20A	_
FK-2022□-*	_	OP-020EB-S	OP-020EB-C	_	OP-040EB	_	OP-090M20A	_
FK-2050□-R	_	OP-020EB-S	OP-020EB-C	_	OP-040EB	_	OP-090M20A	_
FK-2530□-*	OP-010GB	OP-020GB-S	OP-020GB-C	OP-032GB	OP-040GB	FK-2530□-C-060	OP-090M25A	_
FK-2540□-*	_	OP-020LB	OP-020LB	_	OP-040GB	_	OP-090M25A	_
FK-2550□-R	_	_	_	_	_	_	OP-090M25A	_
FK-2725□-*	OP-010FB	OP-020FB-S	OP-020FB-C	OP-032FB	OP-040FB	FK-2725□-C-060	_	_
FK-3035□-*	OP-010TB	OP-020TB-S	OP-020TB-C	_	OP-040TB	FK-3035□-C-060	OP-090M30A	_
FK-3625A□-C	OP-010M3625	-	OP-020M36	_	OP-040UB	_	OP-090M36B	_
FK-3650A□-C	OP-010M3650	_	OP-020M36	_	OP-040UB	_	OP-090M36B	_
FK-3650□-*	OP-010UB	OP-020UB-S	OP-020UB-C	_	OP-040UB	_	OP-090M36A	_
FK-4225B□-C	OP-010M4225	_	OP-020M42	_	Square flange	_	OP-090M42A	OP-M42
FK-4250B□-C	OP-010M4250	-	OP-020M42	_	OP-040M42ŠF Rectangle flange	_	OP-090M42A	OP-M42
FK-4275B□-C	_	_	OP-020M42	_	OP-040M42RF	_	OP-090M42A	OP-M42
FK-6450□-C	_	_	OP-020M64S	_	6	_	OP-090M64A	OP-M64
FK-64100□-C	_	_	OP-020M64S		Square flange OP-040M64SF	_	OP-090M64A	OP-M64
FK-64150□-C	_	_	OP-020M64L	_	01-040//043/	_	OP-090M64A	OP-M64

Applicable Models	Model
FK-0404	M04 nut
FK-0604	M06 nut
FK-1008	M10 nut
FK-1210	M12 nut
FK-1412	M14 nut
FK-1417	M14 nut
FK-1612	M16 nut
FK-2016	M20 nut
FK-2022	M20 nut
FK-2050	M20 nut
FK-2530	M25 nut
FK-2540	M25 nut
FK-2550 P2.0	M25-P2 nut
FK-2725	M27 nut
FK-3035	M30 nut
FK-3625A	M36A nut
FK-3650A	M36A nut
FK-3650	M36 nut


**FK Series RoHS Compliant** 


Products specification might be changed without notice.

# **Optional Parts**

#### **Eccentric angle adaptor OP-010** С Ε G Κ Mass g Model В D M16×1.5 OP-010PB 21.9 OP-010KB M18×1.5 24.3 OP-010RD M22×1.5 27.7 OP-010XB M22×1.5 27.7 OP-010EB M27×1.5 OP-010GB 107.5 67.5 M36×1.5 53.1 197.5 OP-010FB M36×1.5 53.1 M40×1.5 OP-010TB 57.7 M45×1.5 1,273 OP-010UB 63.5 OP-010M3625 M45×1.5 63.5 OP-010M3650 M45×1.5 63.5 1,270 OP-010M4225 M64×2 1,600 OP-010M4250 M64×2 2,500

When attaching the eccentric angle adaptor, screw it into the main unit until the cap for eccentric angle and the piston rod form a tight connection. While maintaining this position, fasten the main unit's nut until secured. \* If the eccentric angle adaptor is secured without establishing a tight fit, a sufficient stroke cannot be obtained. Furthermore, if the eccentric angle adaptor is further screwed in, after it has formed a tight connection, and then secured in place, the cap for eccentric angle cannot be pushed all the way to the stroke end.

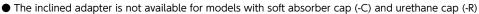

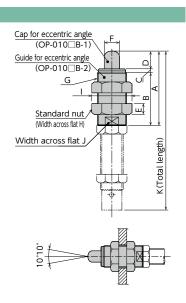


Stopper nut OP-020									
	Stand	Standard With cap							
Model	OP-02	0□-S	OP-02	20□-C	Comi	ommon dimensions		Mass g	
	Α	В	С	D	E F				
ND 020DD C.C	10	1.5	1.6	1.5	12	M10×1	S	6	

Model	OP-02			20□-C	Comr	mon dimensions	М	ass g
	Α	В	С	D	E	F		0
OP-020PB-S•C	10	15	16	15	13	M10×1	S	6
O1-0201 B-3-C	10	13	10	13	13	70110/1	С	9
OP-020KB-S•C	12	16.2	16	16.2	14	M12×1	S	6
01 020185 0		10.2		10.2		77112-11	С	8
OP-020RB-S•C	12	19.6	20	19.6	17	M14×1.5	S	10
						_	С	17
OP-020HB-S•C	15	21.9	30	21.9	19	M16×1.5	S	15
							С	28
OP-020EB-S•C	30	27.7	47	27.7	24	M20×1.5	S	46
							C S	68 65
OP-020GB-S•C	20	37	32	37	32	M25×1.5	C	102
								102
OP-020LB	_	_	50	37	32	M25×1.5		153
OP-020FB-S•C	35	37	55	37	32	M27×1.5	S	90
OP-020FB-3*C	35	3/	55	3/	32	1012/ × 1.5	С	137
OP-020TB-S•C	38	41.6	58	41.6	36	M30×1.5	S	129
O1-0201b-3-C	30	41.0	30	41.0	30	10150/1.5	С	197
OP-020UB-S•C	45	53.1	65	53.1	46	M36×1.5	S	291
	7.5	33.1					С	422
OP-020M36	_	_	45	53.1	46	M36×1.5		291
OP-020M42	_	_	59	φ56	_	M42×1.5	:	370
OP-020M64S	_	_	86	φ78	_	M64×2		850
OP-020M64L	_	_	115	φ78	_	M64×2	1	,150

● Adjust so that it stops 1mm before the stroke end, and fasten with the main unit's nut

Note) When attaching, make sure that the side without a bearing chamfer is the impact surface.

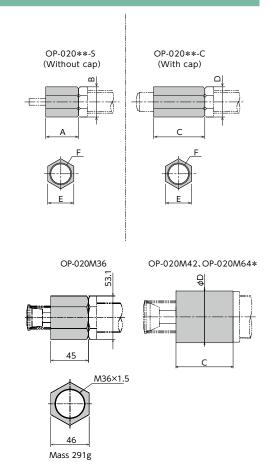

### **FK Series**


**RoHS Compliant** 


●Products specification might be changed without notice.

# **Optional Parts**

Holder with a switch OP-032										
Model	Α	В	φС	D	Е	F	(G)	Н	J	Mass g
OP-032KB	29	23	8	10	8	8	19.6	12.8	16	38
OP-032RB	29	23	10	12	8	8	19.6	13.8	17	34
OP-032HB	40	23	13.5	12	15	8	21.9	14.8	19	46
OP-032EB	50	23	18	16	17	8	27.7	17.3	24	80
OP-032GB	37	23	22	30	18	8	33.5	19.8	29	82
OP-032FB	56	23	23	25	20	8	34.6	20.3	30	107

- Position the holder in such a way that the tip of the switch and one of the ends of the metal ring for the rod cap are separated more than 0.5 mm. Cause of malfunction.
- Please refer to below for the specification of switches and precautions for use.

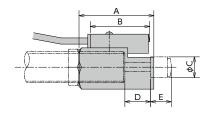

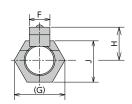

	Model GXL-8F specifications Manufactured by SUNX									
Item	Summary	Specification								
Detection distance	Standard detected object 15X15X1 (Iron)	2.1mm								
Power voltage		12~24VDC±10%								
Consumption current		15mA or lower								
	Behaviour form	NO type								
	Output form	NPN open collector								
	Output capacity (with 24VDC power voltage)	100mA or lower								
	Protection feature	Comes with a surge absorption circuit								
	Residual voltage At 100mA inflowing current	2V or lower								
	Alnput/Output circuit diagram  +V (Brown)  Main  circuit  Output (Black)  0 (Blue)	Operation indicator light Red LED $-12{\sim}24V \qquad \text{(lights up when the output is ON)}$ DC $\pm10\%$								
Response frequency		500Hz								
Ambient operating temperature		−25~70℃								
Ambient storage temperature		−40~85°C								
Ambient operating humidity		35~85%RH								
Ambient storage humidity		35~95%RH								
Lead wire length		Approximately 1m								
Mass	Including cable	Approximately15g								

- 1) Do not use when it is in a transient state after the power is turned on (approx.10ms).
- 2) Keep the cables as short as possible when using in places with a lot of noise.

Also, please take all precautions, such as avoiding the parallel wiring ofelectric lines and power lines, as well as wiring within the same conduit.

- 3) Ensure that the switch does not come in direct contact with thinner-type chemicals.
- 4) Because it does not have a short-circuit protection circuit, wiring must be done correctly.

**FK Series** 


RoHS Compliant

Products specification might be changed without notice.

# **Optional Parts**

### Flange OP-040


Model	Α	В	С	D	Е	Mass g
OP-040PB	25	18	M10×1	3.2	4	16
OP-040KB	25	18	M12×1	3.2	4	15
OP-040RB	34	24	M14×1.5	4.5	4	30
OP-040XB	34	24	M16×1.5	4.5	4	29
OP-040EB	40	28	M20×1.5	6.5	12	109
OP-040GB	54	40	M25×1.5	9	12	206
OP-040FB	50	36	M27×1.5	9	12	157
OP-040TB	65	45	M30×1.5	11	14	344
OP-040UB	78	56	M36×1.5	14	16	566

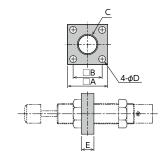

This is a mounting fixture for soft absorbers.

#### Liquid-proof cap -060


Model	Α	В	С	D	E	Mass g
FK-1008□-C-060	13	18	3	8	55	10
FK-1210□-C-060	17	28	9.5	10	71.5	25
FK-1412□-C-060	19	30	9	12	78.5	31
FK-1612□-C-060	21	34	9.5	12	87.5	46
FK-2016□-C-060	24	35	4	16	108	59
FK-2530□-C-060	28	51	6.5	30	154.5	77
FK-2725□-C-060	30	50	5	25	137.5	112
FK-3035□-C-060	38	60	5	35	191.5	255

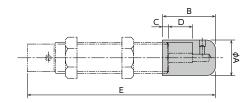


- The main unit is supplied in assembly
- $\bullet$   $\square$  will be filled in with either one of L, M, or H indicated in the catalog.
- Ideal for use in environments where oil splatter poses a problem.
- Ensure that the cap is facing upward. If the cap is facing sideways or downward, it cannot provide an effective means for liquid proofing. Note) Liquid-proof caps are not sold separately.

### Urethane cap OP-090

Model	Α	С	Mass g
OP-090M36B	10	34	7
OP-090M42A	24.5	44	22
OP-090M64A	(24.1)	57	35

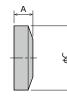


OP-090M36B

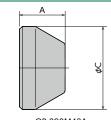


OP-090M42A OP-090M64A

#### Nint

Model	Α	В	С	D	Е	Mass g
OP-M42	53	M42×1.5	4-φ4.6	4-2.5	10	64
OP-M64	76	M64×2.0	4-7	2-70	10	100

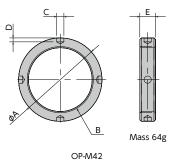


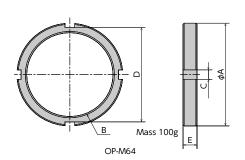

Customized orders For emergency stop
Fixed Type Adjustable type Self-adjusting

Products specification might be changed without notice.



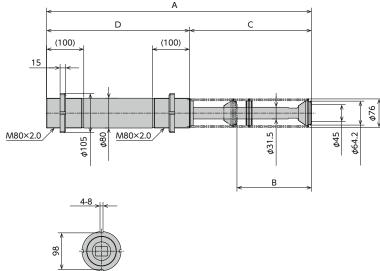

# **Dimensions**

Model	А	В	С	D
FK-80200-C-□□□	710.7	200	327	383.7
FK-80300-C-□□□	910.7	300	427	483.7
FK-80400-C-□□□	1,162.7	400	547	615.7

# **Specifications**

Model	Stroke mm	Max. absorption energy J (kgf·m)	Rarge of impact rate m/s	Max. drag N (kgf)	Max. absorption energy per minute J/min	Max. cycle rate cycle/min		Operating temperature °C	Mass kg
FK-80200-C-	200	19,000 (1,938.8)			11,680		400 (40.8)		11
FK-80300-C-	300	28,900 (2,949)	0.1~5.5	149,226 (15,227.1)	17,770	1	510 (52)	<b>−</b> 5∼70	14
FK-80400-C-	400	38,800 (3,959.2)			23,852		510 (52)		18

<sup>\*</sup>  $\square$  will be filled in with a branch number of a custom model

**FK Series** 

**RoHS Compliant** 

●Products specification might be changed without notice.

# **Optional Parts Compatibility Chart**

Model	Eccentric angle	Stopp	er nut	Holder with a	Flance	Liquid proof can	Lirothono con	Nut
Model	adaptor	Without cap	With cap	switch	Flange	Liquid-proof cap	Urethane cap	Nut
FK-1008□-*	OP-010PB	OP-020PB-S	OP-020PB-C	_	OP-040PB	FK-1008□-C-060	OP-090M10A	-
FK-1210□-*	OP-010KB	OP-020KB-S	OP-020KB-C	OP-032KB	OP-040KB	FK-1210□-C-060	OP-090M12A	-
FK-1412□-*	OP-010RD	OP-020RB-S	OP-020RB-C	OP-032RB	OP-040RB	FK-1412□-C-060	OP-090M14A	-
FK-1417□-*	_	OP-020RB-S	OP-020RB-C	_	OP-040RB	_	OP-090M14B	_
FK-1612□-*	OP-010XB	OP-020HB-S	OP-020HB-C	OP-032HB	OP-040XB	FK-1612□-C-060	OP-090M16A	-
FK-2016□-*	OP-010EB	OP-020EB-S	OP-020EB-C	OP-032EB	OP-040EB	FK-2016□-C-060	OP-090M20A	_
FK-2022□-*	_	OP-020EB-S	OP-020EB-C	_	OP-040EB	_	OP-090M20A	_
FK-2050□-R	_	OP-020EB-S	OP-020EB-C	_	OP-040EB	_	OP-090M20A	_
FK-2530□-*	OP-010GB	OP-020GB-S	OP-020GB-C	OP-032GB	OP-040GB	FK-2530□-C-060	OP-090M25A	_
FK-2540□-*	_	OP-020LB	OP-020LB	_	OP-040GB	_	OP-090M25A	_
FK-2550□-R	_	_	_	_	_	_	OP-090M25A	_
FK-2725□-*	OP-010FB	OP-020FB-S	OP-020FB-C	OP-032FB	OP-040FB	FK-2725□-C-060	_	_
FK-3035□-*	OP-010TB	OP-020TB-S	OP-020TB-C	_	OP-040TB	FK-3035□-C-060	OP-090M30A	_
FK-3625A□-C	OP-010M3625	-	OP-020M36	_	OP-040UB	_	OP-090M36B	_
FK-3650A□-C	OP-010M3650	_	OP-020M36	_	OP-040UB	_	OP-090M36B	_
FK-3650□-*	OP-010UB	OP-020UB-S	OP-020UB-C	_	OP-040UB	_	OP-090M36A	_
FK-4225B□-C	OP-010M4225	_	OP-020M42	_	Square flange	_	OP-090M42A	OP-M42
FK-4250B□-C	OP-010M4250	-	OP-020M42	_	OP-040M42ŠF Rectangle flange	_	OP-090M42A	OP-M42
FK-4275B□-C	_	_	OP-020M42	_	OP-040M42RF	_	OP-090M42A	OP-M42
FK-6450□-C	_	_	OP-020M64S	_	6	_	OP-090M64A	OP-M64
FK-64100□-C	_	_	OP-020M64S		Square flange OP-040M64SF	_	OP-090M64A	OP-M64
FK-64150□-C	_	_	OP-020M64L	_	01-040//043/	_	OP-090M64A	OP-M64

Applicable Models	Model
FK-0404	M04 nut
FK-0604	M06 nut
FK-1008	M10 nut
FK-1210	M12 nut
FK-1412	M14 nut
FK-1417	M14 nut
FK-1612	M16 nut
FK-2016	M20 nut
FK-2022	M20 nut
FK-2050	M20 nut
FK-2530	M25 nut
FK-2540	M25 nut
FK-2550 P2.0	M25-P2 nut
FK-2725	M27 nut
FK-3035	M30 nut
FK-3625A	M36A nut
FK-3650A	M36A nut
FK-3650	M36 nut


**FK Series RoHS Compliant** 


Products specification might be changed without notice.

# **Optional Parts**

#### **Eccentric angle adaptor OP-010** С Ε G Κ Mass g Model В D M16×1.5 OP-010PB 21.9 OP-010KB M18×1.5 24.3 OP-010RD M22×1.5 27.7 OP-010XB M22×1.5 27.7 OP-010EB M27×1.5 OP-010GB 107.5 67.5 M36×1.5 53.1 197.5 OP-010FB M36×1.5 53.1 M40×1.5 OP-010TB 57.7 M45×1.5 1,273 OP-010UB 63.5 OP-010M3625 M45×1.5 63.5 OP-010M3650 M45×1.5 63.5 1,270 OP-010M4225 M64×2 1,600 OP-010M4250 M64×2 2,500

When attaching the eccentric angle adaptor, screw it into the main unit until the cap for eccentric angle and the piston rod form a tight connection. While maintaining this position, fasten the main unit's nut until secured. \* If the eccentric angle adaptor is secured without establishing a tight fit, a sufficient stroke cannot be obtained. Furthermore, if the eccentric angle adaptor is further screwed in, after it has formed a tight connection, and then secured in place, the cap for eccentric angle cannot be pushed all the way to the stroke end.

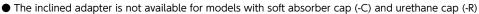

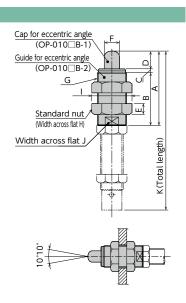


						Stopper nu	t OF	P-020
	Stand	lard	With	сар	Come	non dimensions		
Model	OP-02	0□-S	OP-020□-C		Comi	non aimensions	Mass g	
	Α	В	С	D	E	F		
ND 020DD C.C	10	1.5	1.6	1.5	12	M10×1	S	6

Model	OP-02			20□-C	Comr	mon dimensions	Mass g		
	Α	В	С	D	E	F		0	
OP-020PB-S•C	10	15	16	15	13	M10×1	S	6	
O1-0201 B-3-C	10	13	10	13	13	70110/1	С	9	
OP-020KB-S•C	12	16.2	16	16.2	14	M12×1	S	6	
01 020185 0		10.2		10.2		77112-11	С	8	
OP-020RB-S•C	12	19.6	20	19.6	17	M14×1.5	S	10	
						_	С	17	
OP-020HB-S•C	15	21.9	30	21.9	19	M16×1.5	S	15	
							С	28	
OP-020EB-S•C	30	27.7	47	27.7	24	M20×1.5	S	46	
							C S	68 65	
OP-020GB-S•C	20	37	32	37	32	M25×1.5	C	102	
								102	
OP-020LB	_	_	50	37	32	M25×1.5		153	
OP-020FB-S•C	35	37	55	37	32	M27×1.5	S	90	
OP-020FB-3*C	35	3/	55	3/	32	1012/ × 1.5	С	137	
OP-020TB-S•C	38	41.6	58	41.6	36	M30×1.5	S	129	
O1-0201b-3-C	30	41.0	30	41.0	30	10150/1.5	С	197	
OP-020UB-S•C	45	53.1	65	53.1	46	M36×1.5	S	291	
	7.5	33.1					С	422	
OP-020M36	_	_	45	53.1	46	M36×1.5		291	
OP-020M42	_	_	59	φ56	_	M42×1.5	:	370	
OP-020M64S	_	_	86	φ78	_	M64×2		850	
OP-020M64L	_	_	115	φ78	_	M64×2	1	,150	

● Adjust so that it stops 1mm before the stroke end, and fasten with the main unit's nut

Note) When attaching, make sure that the side without a bearing chamfer is the impact surface.

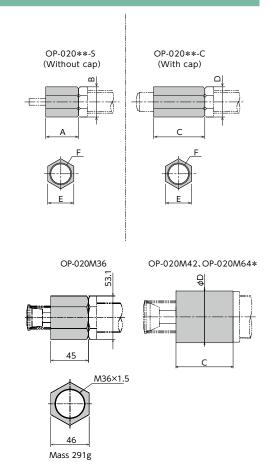

### **FK Series**


**RoHS Compliant** 


●Products specification might be changed without notice.

# **Optional Parts**

	Holder with a switch OP-032											
Model	Α	В	φС	D	Е	F	(G)	Н	J	Mass g		
OP-032KB	29	23	8	10	8	8	19.6	12.8	16	38		
OP-032RB	29	23	10	12	8	8	19.6	13.8	17	34		
OP-032HB	40	23	13.5	12	15	8	21.9	14.8	19	46		
OP-032EB	50	23	18	16	17	8	27.7	17.3	24	80		
OP-032GB	37	23	22	30	18	8	33.5	19.8	29	82		
OP-032FB	56	23	23	25	20	8	34.6	20.3	30	107		

- Position the holder in such a way that the tip of the switch and one of the ends of the metal ring for the rod cap are separated more than 0.5 mm. Cause of malfunction.
- Please refer to below for the specification of switches and precautions for use.

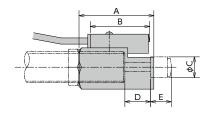

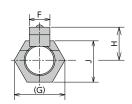

	Model GXL-8F specifications Man	ufactured by SUNX				
Item	Summary	Specification				
Detection distance	Standard detected object 15X15X1 (Iron)	2.1mm				
Power voltage		12~24VDC±10%				
Consumption current		15mA or lower				
	Behaviour form	NO type				
	Output form	NPN open collector				
	Output capacity (with 24VDC power voltage)	100mA or lower				
	Protection feature	Comes with a surge absorption circuit				
	Residual voltage At 100mA inflowing current	2V or lower				
	Alnput/Output circuit diagram  +V (Brown)  Main  circuit  Output (Black)  0 (Blue)	Operation indicator light Red LED $-12{\sim}24V \qquad \text{(lights up when the output is ON)}$ DC $\pm10\%$				
Response frequency		500Hz				
Ambient operating temperature		−25~70℃				
Ambient storage temperature		−40~85°C				
Ambient operating humidity		35~85%RH				
Ambient storage humidity		35~95%RH				
Lead wire length		Approximately 1m				
Mass	Including cable	Approximately15g				

- 1) Do not use when it is in a transient state after the power is turned on (approx.10ms).
- 2) Keep the cables as short as possible when using in places with a lot of noise.

Also, please take all precautions, such as avoiding the parallel wiring ofelectric lines and power lines, as well as wiring within the same conduit.

- 3) Ensure that the switch does not come in direct contact with thinner-type chemicals.
- 4) Because it does not have a short-circuit protection circuit, wiring must be done correctly.

**FK Series** 


RoHS Compliant

Products specification might be changed without notice.

# **Optional Parts**

### Flange OP-040


Model	Α	В	С	D	Е	Mass g
OP-040PB	25	18	M10×1	3.2	4	16
OP-040KB	25	18	M12×1	3.2	4	15
OP-040RB	34	24	M14×1.5	4.5	4	30
OP-040XB	34	24	M16×1.5	4.5	4	29
OP-040EB	40	28	M20×1.5	6.5	12	109
OP-040GB	54	40	M25×1.5	9	12	206
OP-040FB	50	36	M27×1.5	9	12	157
OP-040TB	65	45	M30×1.5	11	14	344
OP-040UB	78	56	M36×1.5	14	16	566

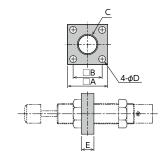

This is a mounting fixture for soft absorbers.

#### Liquid-proof cap -060


Model	Α	В	С	D	E	Mass g
FK-1008□-C-060	13	18	3	8	55	10
FK-1210□-C-060	17	28	9.5	10	71.5	25
FK-1412□-C-060	19	30	9	12	78.5	31
FK-1612□-C-060	21	34	9.5	12	87.5	46
FK-2016□-C-060	24	35	4	16	108	59
FK-2530□-C-060	28	51	6.5	30	154.5	77
FK-2725□-C-060	30	50	5	25	137.5	112
FK-3035□-C-060	38	60	5	35	191.5	255

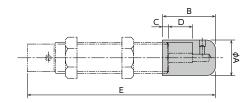


- The main unit is supplied in assembly
- $\bullet$   $\square$  will be filled in with either one of L, M, or H indicated in the catalog.
- Ideal for use in environments where oil splatter poses a problem.
- Ensure that the cap is facing upward. If the cap is facing sideways or downward, it cannot provide an effective means for liquid proofing. Note) Liquid-proof caps are not sold separately.

### Urethane cap OP-090

Model	Α	С	Mass g
OP-090M36B	10	34	7
OP-090M42A	24.5	44	22
OP-090M64A	(24.1)	57	35

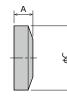


OP-090M36B

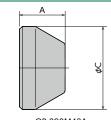


OP-090M42A OP-090M64A

#### Nint

Model	Α	В	С	D	Е	Mass g
OP-M42	53	M42×1.5	4-φ4.6	4-2.5	10	64
OP-M64	76	M64×2.0	4-7	2-70	10	100

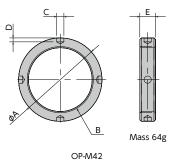

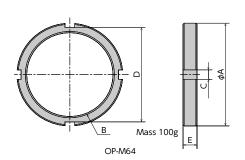

Multiple-orifice type
Fixed Type Adjustable type Self-adjusting

FL Series (M12~M16)

**RoHS Compliant** 



Products specification might be changed without notice.

### Characteristics


- With an adjustable multiple-orifice structure, an optimal impact absorption can be achieved by making adjustments, even under variable operating conditions.
- This product is a long-stroke type that is suitable for high-speed (3m/s) collisions.

# **Specifications**

	Stroke Max. absorption				Max. drag	,	Max. absorption energy per minute		Operating	Mass g	
Model	mm	energy J (kgf·m	equivalent mass kg (kgf)	impact rate m/s	N(kgf)	rate cycle/min	J/min (kgf·m/min)	of the piston rod N (kgf)	temperature °C	S type	C type
FL-1214H-□	14	5.4(0.55)	30(30)	0.3~3	1,156(118)	60	98 (10)	12.7(1.3) or lower	-5~70	46	49
FL-1417H-	17	14.7(1.5)	50 (50)	0.3~3	2,646 (270)	60	176 (18)	15.7(1.6) or lower	-5~70	80	85
FL-1620H-□	20	17.6(1.8)	60 (60)	0.3~3	2,646 (270)	60	235 (24)	19.6(2.0) or lower	-5~70	124	136

Note) Insert S in the  $\Box$  to order without a cap, and insert C in the  $\Box$  to order with a cap (R if ordering urethane cap).

# **Key to Model Number**

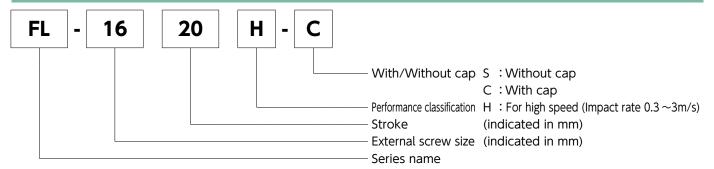

# **Precautions for Use**


- \* Do not use this product without carefully reading the attached owner's manual.
- \* We recommend that you use it with an external stopper (Stopper nut OP-020\*\*).
- \* Ensure that sufficient mounting strength is secured for this product. (As a guideline, it should be 2 to 3 times the maximum drag listed in the catalogue.)
- \* Do not use this product in a vacuum or a location where it may come in contact with oil.
- \* Ensure that an eccentric load is not applied to the soft absorber. (Allowable eccentric angle: ±2.5°)


# **Adjustment Method**

- \* To adjust, turn the adjustment knob located at the bottom of the main unit.
- \* Because the adjustment can be done in an analog manner, a value between two integers on the indicator can be set.
- \* Once the adjustment is complete, secure with a lock screw using the attached hex wrench.

FL Series RoHS Compliant

●Products specification might be changed without notice.

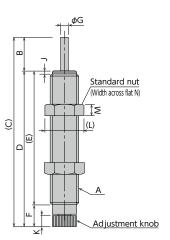

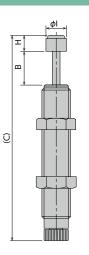


### **Dimensions**

Model	Α	В	С	D	E	F	φG	Н	φl	J	K	L	M	N
FL-1214H-S	M12×1.0	14	84	70	59.5	10.5	3.5	_	_	1.5	Е	16.2	4	14
FL-1214H-C	M12×1.0	14	92	/0	39.5	10.5	3.5	8	8	1.5	5	10.2	4	14
FL-1417H-S	M14×1.5	17	105	88	77.8	10.2	4	_	_	1.5	Е	19.6	6	17
FL-1417H-C	M14×1.5	17	115	00	//.0	10.2	4	10	10	1.5	5	19.0	6	17
FL-1620H-S	M16×1.5	20	128	108	93.5	14.5	Е	_	_	_	4.4	21.9	6	19
FL-1620H-C	M16×1.5	20	143	100	93.5	14.5	5	15	13.5	_	4.4	21.9	6	19

# **Optional Parts**


#### Stopper nut OP-020 🗆 - 🗆 Without cap With cap **Applicable** OP-020□□-S P-020□□-C Model Ε Mass g model D В С S OP-020KB-S·C 12 16.2 16 16.2 14 FL-1214H C 8 S 10 OP-020RB-S·C 12 19.6 20 19.6 17 FL-1417H 17 C S 15 OP-020HB-S·C 21.9 30 21.9 19 FL-1620H

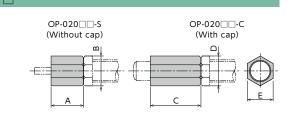


• Adjust so that it stops 1mm before thestroke end, and fasten with the main unit's nut until secured. Note) When attaching, make sure that the side without a bearing chamfer is the impact surface.

				H	older wi	th a swi	tch OP-0	032 🗆 🗆			
Model	Α	В	φС	D	E	F	(G)	Н	J	Applicable model	Mass g
OP-032KB	29	23	8	14	8	8	19.6	12.8	16	FL-1214H-C	38
OP-032HB	40	23	13.5	20	15	8	21.9	14.8	19	FL-1620H-C	46

Note) For switch specifications and precautions for use, please refer to page 23. Note) A holder with a switch cannot be used with the FL-1417 series.

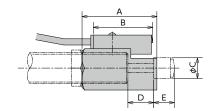

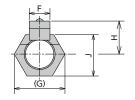

Applicable model	Model
FL-1214H	M12 nut
FL-1417H	M14 nut
FL-1620H	M16 nut

Short Stroke Type Single-Orifice
Fixed Type Adjustable type Self-adjusting

FS Series

**RoHS Compliant** 



Turn the slotted-driver groove to desired position.

Products specification might be changed without notice.

Oil inlet (Groove for Phillips screwdriver)
\* Do not turn.

### **Dimensions**


Model	A	В	С	D	E	F	$\varphi$ G	Н	I	J
FS-1406L-S	M14×1.5	6	55	49	41	8	4	19.6	6	17
FS-1606L-S	M16×1.5	6	55	49	41	8	5	21.9	6	19
FS-2006L-S	M20×1.5	6	55	49	43	6	6	27.7	8	24
FS-2506L-S	M25×1.5	6	55	49	43	6	8	37	10	32
FS-2706L-S	M27×1.5	6	55	49	43	6	8	37	10	32

Lock screw

### Specifications

Model	Stroke mm	Max. absorption energy J (kgf·m)	Max. equivalent mass kg (kgf)	Range of impact rate m/s	Max. drag N (kgf)	Max. cycle rate cycle/min	Max.absorption energy per minute  J/min (kgf•m/min)	Recovering power of the piston rod N (kgf)	Operating temperature °C	Mass g
FS-1406L-S	6	3.5 (0.36)	80 (80)	0.3~1	2,000 (204)	45	100 (10.2)	20(2) or lower	<b>−5~70</b>	49
FS-1606L-S	6	4.8 (0.49)	120(120)	0.3~1	2,700 (276)	45	130 (13.3)	20(2) or lower	<b>−5~70</b>	63
FS-2006L-S	6	7.8 (0.8)	60 (60)	0.3~1	3,920(400)	60	200 (20.4)	16.7(1.7) or lower	<b>−5∼70</b>	114
FS-2506L-S	6	11.7(1.2)	90 (90)	0.3~1	5,880 (600)	60	300 (30.6)	19.6(2.0) or lower	<b>−5~70</b>	210
FS-2706L-S	6	15.6(1.6)	120(120)	0.3~1	7,840 (800)	60	350 (35.7)	22.6(2.3) or lower	-5~70	221

# Key to Model Number

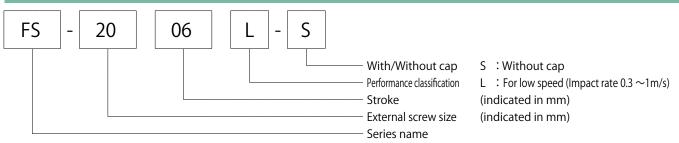

# Precautions for Use

- \* Do not use this product without carefully reading the attached own' se rmanual.
- \* Ensure that an external stopper is also used.
- \* Ensure that sufficient mounting strength is secured for this product. (As a guideline, it should be 2 to 3 times the maximum drag listed in the catalogue.)
- \* Do not use this product in a vacuum or a location where it may come in contact with oil.
- \* Ensure that an eccentric load is not applied to the soft absorber. (Allowable eccentric angle: ±2.5°)
- \*Do not turn the oil inlet screw located at the bottom of the main unit.

# Characteristics

- \* To adjust, turn the adjustment knob with a slotted screw driver
- \* Because the adjustment can be done in an analog manner, a value between two integers on the indicator can be set.

Applicable model	Model
FS-1406L	M14 nut
FS-1606L	M16 nut
FS-2006L	M20 nut
FS-2506L	M25 nut
FS-2706L	M27 nut

Multiple-Orifice (M12 is Single-Orifice)

Fixed Type | Adjustable type | Self-adjusting

### FSB Series (M12, M14, M16)

**RoHS Compliant** 

Products specification might be changed without notice.



### **Characteristics**


- High functionality stopper bolt (with an implemented absorber)
- Easy to mount external geometry

# **Specifications**

Model	Stroke mm	Max. absorption energy J (kgf·m)	Max. equivalent mass kg (kgf)	Range of impact rate m/s	Max. drag N (kgf)	Max.cycle rate cycle/min	Max.absorption energy per minute J/min (kgf·m/min	Recovering power of the piston rod N (kgf)	Operating temperature °C	Mass g
FSB-1205-C	5	0.68(0.07)	5(5)		588 (60)	45	65 (6.63)	4.9 or lower(0.5)		40
FSB-1407-C	7	2.5 (0.25)	20 (20)	0.3~1.0	1,078(110)	60	120 (12.2)	4.9 or lower(0.5)	-5~70	70
FSB-1609-C	9	6(0.61)	50 (50)		1,960 (200)	60	200 (20.4)	9.8 or lower(1.0)		115

Material	Main unit	SUM		
Material	Сар	Polyacetal		
Surface treatment	Main unit	Nitriding treatment		

# Key to Model Number

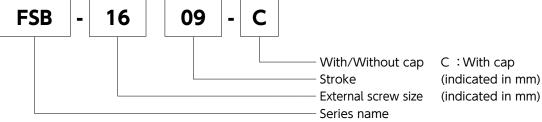

### **Dimensions**

Model	Α	В	С	D	E	F	G	Н	J
FSB-1205-C	M12×1.75	5	43	30	8	6	21.9	19	7
FSB-1407-C	M14×2	7	56	40	9	6	25.4	22	8
FSB-1609-C	M16×2	9	74	55	10	8	27.7	24	10

• The thread pitch is different from other absorbers.

# B E D

### **Precautions for Use**

- \* Do not use this product without carefully reading the attached owner's manual.
- \* Ensure that sufficient mounting strength is secured for this product. (As a guideline, it should be 2 to 3 times the maximum drag listed in the catalogue.)
- \* Do not use this product in a vacuum or a location where it may come in contact with oil.
- \* Ensure that an eccentric load is not applied to the soft absorber. (Allowable eccentric angle: ±2.5°)
- \* Do not over-tighten the main unit and nuts. Please use the tightening torque as listed in the owner's manual.
- \* Due to the structure of this product, using the absorber (piston rod side) in an upright position in a dusty environment causes the dust to collect on the absorber, which may affect the durability.

Applicable model	Model
FSB-1205	FSB-1205 nut
FSB-1407	FSB-1407 nut
FSB-1609	FSB-1609 nut


Short Stroke Type Multiple-orifice type
Fixed Type Adjustable type Self-adjusting

# **FV** Series

**RoHS Compliant** 

Products specification might be changed without notice.



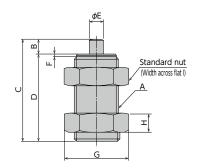


# **Dimensions**

Model	А	В	С	D	φЕ	F	G	Н	I
FV-1406L-S	M14×1.5	6	46	40	4	2	19.6	6	17
FV-1606L-S	M16×1.5	6	46	40	5	2	21.9	6	19
FV-2008L-S	M20×1.5	8	55	47	6	1.5	27.7	8	24
FV-2508L-S	M25×1.5	8	55	47	8	1.5	37	10	32
FV-2708L-S	M27×1.5	8	55	47	8	1.5	37	10	32

# **Specifications**

Model	Stroke mm	Max. absorption energy J (kgf·m)	Max. equivalent mass kg (kgf)	Range of impact rate m/s	Max. drag N (kgf)	Max. cycle rate cycle/min	Max.absorption energy per minute J/min(kgf·m/min)	Recovering power of the piston rod N(kgf)	Operating temperature °C	Mass g
FV-1406L-S	6	4.5 (0.46)	80 (80)	0.3~1	2,000 (204)	45	100 (10.2)	15(1.5)以下	-5~70	42
FV-1606L-S	6	5.5 (0.56)	120(120)	0.3~1	2,700 (276)	45	130 (13.3)	20(2)以下	-5~70	53
FV-2008L-S	8	8.8 (0.9)	70 (70)	0.3~1	3,430 (350)	60	200 (20.4)	14.7(1.5)以下	-5~70	108
FV-2508L-S	8	13.7(1.4)	110(110)	0.3~1	5,390 (550)	60	300 (30.6)	21.6(2.2)以下	-5~70	199
FV-2708L-S	8	19.6 (2.0)	150(150)	0.3~1	7,350 (750)	60	350 (35.7)	23.5(2.4)以下	-5~70	206.7

# Key to Model Number

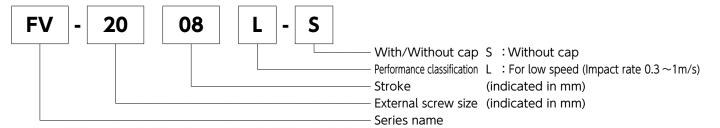

# **Precautions for Use**

- \* Do not use this product without carefully reading the attached owner's manual.
- \* Do not turn the oil inlet screw located at the bottom of the main unit.
- \* Ensure that sufficient mounting strength is secured for this product. (As a guideline, it should be 2 to 3 times the maximum drag listed in the catalogue.)
- \* Do not use this product in a vacuum or a location where it may come in contact with oil.
- \* Ensure that an eccentric load is not applied to the soft absorber. (Allowable eccentric angle: ±2.5°)
- \* Ensure that an external stopper is also used.

Applicable model	Model
FV-1406L	M14 nut
FV-1606L	M16 nut
FV-2008L	M20 nut
FV-2508L	M25 nut
FV-2708L	M27 nut

Double Direction Type | Multiple-orifice type | Fixed Type | Adjustable type | Self-adjusting

FW Series (M12~M25)

**RoHS Compliant** 



●Products specification might be changed without notice.

### **Characteristics**


- This product is a double-rod type that can absorb impact from both directions.
- Because of its multiple-orifice structure, a smooth impact absorption is possible.
- Idea for small spaces.

# **Specifications**

	l	Max. absorption	Max. equivalent		Max. drag		Max. absorption energy	Recovering power of	Operating	Mass g	
Model	mm mm	energy J (kgf·m)	mass kg (kgf)	impact rate m/s	N (kgf) Cycle rate		per minute J/min (kgf•m/min)	the piston rod N (kgf)	temperature C	S type	C type
FW-1212L-C	12	4.9 (0.5)	39(39)	0.3~1	1,078(110)	60	41 (4.2)	7.8(0.8) or lower	-5~70	_	64
FW-1616M-□	16	13.7(1.4)	30 (30)	0.3~2	2,646(270)	60	235 (24)	17.6 (1.8)) or lower	-5~70	130	142
FW-2025M-□	25	39.2(4.0)	87(87)	0.3~2	4,900 (500)	60	343 (35)	24.5 (2.5)) or lower	-5~70	234	271
FW-2530M-□	30	62.7(6.4)	140 (140)	0.3~2	6,370(650)	60	490 (50)	29.4(3.0)) or lower	-5~70	460	527

Note) Insert S in the  $\square$  to order without a cap, and insert C in the  $\square$  to order with a cap (R if ordering urethane cap).

# Key to Model Number

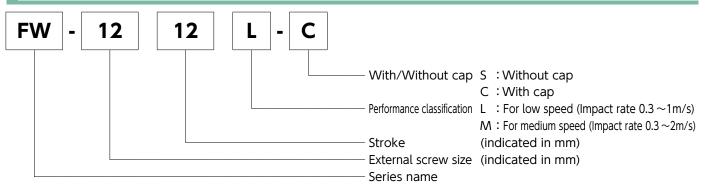

### **Precautions for Use**

- \* Do not use this product without carefully reading the attached owner's manual.
- \* Ensure that sufficient mounting strength is secured for this product. (As a guideline, it should be 2 to 3 times the maximum drag listed in the catalogue.)
- \* It cannot absorb impact from both directions at the same time.
- \* Do not use this product in a vacuum or a location where it may come in contact with oil.
- \* Ensure that an eccentric load is not applied to the soft absorber. (Allowable eccentric angle: ±2.5°C)
- \* Ensure that an external stopper is also used.


Double Direction Type Multiple-orifice type


Fixed Type Adjustable type Self-adjusting

# FW Series (M12~M25)

**RoHS Compliant** 

●Products specification might be changed without notice.

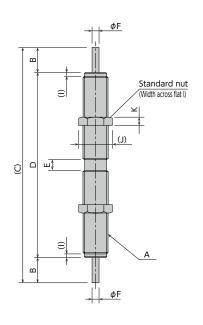

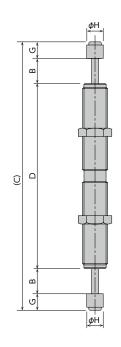


# **Dimensions**

Model	Α	В	С	D	E	φF	G	φН	- 1	J	K	L														
FW-1212L-C	M12×1.0	12	130	90	5	3.5	8	8	2	16.2	4	14														
FW-1616M-S	M16×1.5	16	134	102	_	5	_	_	6	21.9	6	19														
FW-1616M-C	1001.5	10	164				15	13.5	6																	
FW-2025M-S	M20×1 F	25	170	120			_	_	6	27.7	0	24														
FW-2025M-C	M20×1.5	25	204	204	204	204	204	120	204	120	04	120	120	120	120	120	120 –		_	6	17	18	6	27.7	8	24
FW-2530M-S	M25×1.5	20	205	145	_		_	_	_	6	37	10	32													
FW-2530M-C	M25×1.5	30	241	145		- 8	18	22	6	3/	10	52														

# **Optional Parts**

				St	opper r
Model	Α	В	С	Applicable model	Mass g
OP-020KB-C	16	16.2	14	FW-1212L-C	8
OP-020HB-S	15	21.9	19	FW-1616M-S	15
OP-020HB-C	30	21.9	19	FW-1616M-C	28
OP-020EB-S	30	27.7	24	FW-2025M-S	46
OP-020EB-C	47	27.7	24	FW-2025M-C	68
OP-020GB-S	20	37	32	FW-2530M-S	65
OP-020GB-C	32	37	32	FW-2530M-C	102

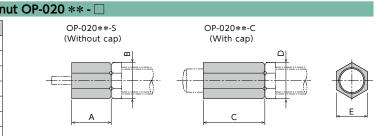

• Adjust so that it stops 1mm before thestroke end, and fasten with the main unit's nut until secured. Note) When attaching, make sure that the side without a bearing chamfer is the impact surface.

Applicable model	Model
FW-1212L	M12 nut
FW-1616M	M16 nut
FW-2025M	M20 nut
FW-2530M	M25 nut